



## UP-DR80 How to version up

- 1 Download the firmware.
  - (1) Click the “Download” button.
  - (2) Click the “Save” button in the “Download File” dialog box.
  - (3) Save the file into a folder of your choice via the “Save As” dialog box.

- 2 Decompress the downloaded firmware.

The firmware is downloaded to your computer as a self-extracting EXE file. Decompress the file as follows.

  - (1) Double-click the downloaded EXE file.
  - (2) In the WinZip Self-Extractor dialog box, enter the name of the folder where you want to store the decompressed data. (The default is C:\)
  - (3) Click “Unzip”.
  - (4) Click “Close”.

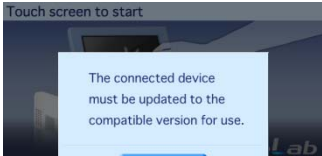
The extractor creates a Sony subfolder under the folder you have designated.

- 3 Copy the firmware onto a memory card.
  - (1) Copy the entire Sony subfolder (as created in the preceding procedure) into the root folder of the memory card.

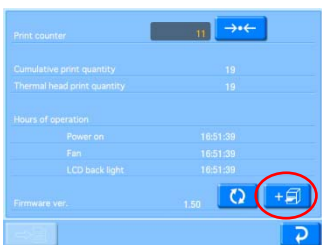
\* To upgrade from firmware V1.00~V1.03, please do not do so via CD/DVD as the upgrade may not work correctly.
  - (2) Confirm that the root folder in the memory card now contains a subfolder “Sony\UPCR20\firmware”.

- 4 Check that the power of the UP-DR80 is turned off. Turn on the power of the UP-DR80. When it is ready to use, connect it to the UP-DR80 with a USB cable.

- 5 Turn on the UP-DR80.

- 6  Click the “OK” button in the dialog. (If version up is not necessary, this dialog is not displayed. Please skip the following.)

- 7 Open the “Administration tab” in the “Administration screen” and touch the “System Logs” button.

- 8  Touch the “Upgrade” button (as shown by the red circle), and follow the procedure to insert a memory card including firmware to printer's memory card slot.

Note: Please do not turn the printers off during version up. The UP-DR80 will reboot after version up completion.