



UP-DR200 How to version down

- 1 Download the firmware.
 - (1) Click the “Download” button.
 - (2) Click the “Save” button in the “Download File” dialog box.
 - (3) Save the file into a folder of your choice via the “Save As” dialog box.
- 2 With its power turned off, connect the UP-DR200 to your PC with a USB cable.
- 3 Turn on the UP-DR200.
- 4 If a driver installation screen is displayed, click “Cancel”.
- 5 Decompress the downloaded firmware.

The firmware is downloaded to your computer as a self-extracting EXE file.

 - (1) Double-click the downloaded EXE file.
 - (2) A software license agreement window will appear. After you agree, the software will start upgrading firmware automatically.

Note: Please do not turn the printer off during version down.
The UP-DR200 will reboot after version down completion.