



UP-DR200 How to version up

1 Download the firmware.

- (1) Click the “Download” button.
- (2) Click the “Save” button in the “Download File” dialog box.
- (3) Save the file into a folder of your choice via the “Save As” dialog box.

2 Decompress the downloaded firmware.

The firmware is downloaded to your computer as a self-extracting EXE file. Decompress the file as follows.

- (1) Double-click the downloaded EXE file.
- (2) In the WinZip Self-Extractor dialog box, enter the name of the folder where you want to store the decompressed data. (The default is C:\)
- (3) Click “Unzip”.
- (4) Click “Close”.

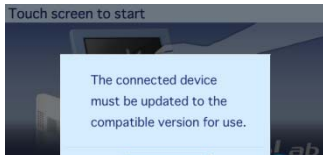
The extractor creates a Sony subfolder under the folder you have designated.

3 Copy the firmware onto a memory card.


- (1) Copy the entire Sony subfolder (as created in the preceding procedure) into the root folder of the memory card.
* To upgrade from firmware V1.00~V1.03, please do not do so via CD/DVD as the upgrade may not work correctly.
- (2) Confirm that the root folder in the memory card now contains a subfolder “Sony\UPCR20\firmware”.

- (4) Check that the power of the UP-DR200 is turned off. Turn on the power of the UP-CR20L. When it is ready to use, connect it to the UP-DR200 with a USB cable.

- (5) Turn on the UP-DR200.

- (6)  Click the “OK” button in the dialog. (If version up is not necessary, this dialog is not displayed. Please skip the following.)

- (7) Open the “Administration tab” in the “Administration screen” and touch the “System Logs” button.

- (8)  Touch the “Upgrade” button (as shown by the red circle), and follow the procedure to insert a memory card including firmware to printer’s memory card slot.

Note: Please do not turn the printers off during version up. The UP-DR200 will reboot after version up completion.