

# ***HD Color Video Camera***

---

## **Technical Manual**



**SRG-360SHE**  
**SRG-280SHE**

---

# Table of Contents

**Basic Functions ..... 3**  
    Overview of Functions.....3  
    Initial Settings and Preset..... 10  
    Mode Condition ..... 11

**Command List ..... 16**  
    VISCA RS-422 Commands..... 16  
    IP Related Setting Command ..... 26  
    SRG-360SHE/SRG-280SHE Commands ..... 28

# Basic Functions

## Overview of Functions

### Zoom

#### SRG-360SHE

Employs 30× optical zoom lens. Up to ×360 zoom is allowed when you use digital zoom.

- **Optical ×30, f=4.3 mm to 129 mm (F1.6 to F4.7)**

#### SRG-280SHE

Employs 26× optical zoom lens. Up to ×312 zoom is allowed when you use digital zoom.

- **Optical ×26, f=4.3 mm to 111.8 mm (F1.6 to F4.5)**

Digital Zoom enlarges the center of the subject by expanding each image in both the vertical and horizontal directions. When the digital zoom is used, the resolution deteriorates.

You can activate the zoom in the following modes, all of which can be set using VISCA command.

#### Standard Mode

##### Variable Mode

There are eight levels of zoom speed.

*In these standard and variable modes, it is necessary to send Stop Command to stop the zoom operation.*

#### Direct Mode

Setting the zoom position enables quick movement to the designated position.

#### Digital Zoom ON/OFF

### Focus

Focus has the following modes, all of which can be set using VISCA Commands.

#### • Auto Focus Mode

The Auto Focus (AF) function automatically adjusts the focus position to maximise the high frequency content of the picture in a center measurement area, taking into consideration the high luminance and strong contrast components. The minimum focus distance is 10 mm at the optical wide end and 1200 mm at the optical tele end.

##### - Normal AF Mode

This is the normal mode for AF operations.

##### - Interval AF Mode

The mode used for AF movements carried out at particular intervals. The time intervals for AF movements and for the timing of the stops can be set in one-second increments using the Set Time Command. The initial value for both is set to five seconds.

##### - Zoom Trigger Mode

When the zoom is changed, the AF mode activates for the pre-set time. Then, it stops. The initial value is set to 5 seconds.

AF sensitivity can be set to either Normal or Low.

##### - Normal

Reaches the highest focus speed quickly. Use this when shooting a subject that moves frequently. Usually, this is the most appropriate mode.

##### - Low

Improves the stability of the focus. When the lighting level is low, the AF function does not take effect, even though the brightness varies, contributing to a stable image.

- **Manual Focus Mode**

Manual Focus has both a Standard Mode and a Variable Mode. Standard Mode focuses at a fixed rate of speed. Variable Mode has eight speed levels that can be set using a VISCA Command.

*In these standard and variable modes, it is necessary to send Stop Command to stop the zoom operation.*

- **One Push Trigger Mode**

When a Trigger Command is sent, the lens moves to adjust the focus for the subject. The focus lens then holds that position until the next Trigger Command is input.

- **Infinity Mode**

The lens is forcibly moved to a position suitable for an unlimited distance.

- **Near Limit Mode**

Can be set in a range from 1000 ( $\infty$ ) to F000 (1 cm). Default setting: D000h (30 cm)

---

## White Balance

White Balance has the following modes.

- **Auto White Balance**

This mode computes the white balance value output using color information from the entire screen. It outputs the proper value using the color temperature radiating from a black subject based on a range of values from 2500K to 7500K. This mode is the factory setting.

- **ATW**

Auto Tracing White balance (2000K to 10000K)

- **Indoor**

3200K Base Mode

- **Outdoor**

5800K Base Mode

- **One Push WB**

One Push White Balance is a function that forcibly captures the white color once the lighting conditions to illuminate the subject are set, enabling you to shoot the image in the conditions as they are set. By using this function, the natural color of the subject can be obtained without being affected by the surrounding lighting conditions. To set this mode, shoot the subject that you want to capture the white color and send the One Push White Balance Trigger. The One Push White Balance data is lost when the power is turned off. If the power is turned off, set One Push White Balance again.

- **Manual WB**

Manual control of R and B gain, 256 steps each

---

## Automatic Exposure Mode

A variety of AE functions are available for optimal output of subjects in lighting conditions that range from low to high.

- **Full Auto**

Iris, Gain and Shutter Speed can be set automatically.

- **Gain Limit Setting**

The gain limit can be set at the Full Auto, Shutter Priority, Iris Priority, Bright and Manual in the AE mode. Use this setting when image signal-to-noise ratio is particularly important.

- **Shutter Priority<sup>1)</sup>**

Variable Shutter Speed, Auto Iris and Gain (1/1 to 1/10,000 sec., 16 high-speed shutter speeds plus 6 low-speed shutter speeds)

1) Flicker can be eliminated by setting shutter to

→ 1/100s for NTSC models used in countries with a 50 Hz power supply frequency

→ 1/120s for PAL models used in countries with a 60 Hz power supply frequency

- **Iris Priority**

Variable Iris (F1.6 to Close, 14 steps), Auto Gain and Shutter speed

- **Manual**

Variable Shutter, Iris and Gain

- **Bright**

Variable Iris and Gain (Close to F1.6, 14 steps and F1.6 at 15 steps)

### AE – Shutter priority

The shutter speed can be set freely by the user to a total of 22 steps – 16 high speeds and 6 low speeds. When the slow shutter is set, the speed can be adjusted the slow shutter according to subject brightness. The picture output is read at a low rate from the memory. AF capability is low. In high speed mode, the shutter speed can be set up to 1/10,000s. The iris and gain are set automatically, according to the brightness of the subject.

Parameter	59.94/29.97 mode	50/25 mode
15	1/10000	1/10000
14	1/6000	1/6000
13	1/4000	1/3500
12	1/3000	1/2500
11	1/2000	1/1750
10	1/1500	1/1250
0F	1/1000	1/1000
0E	1/725	1/600
0D	1/500	1/425
0C	1/350	1/300
0B	1/250	1/215
0A	1/180	1/150
09	1/125	1/120
08	1/100	1/100
07	1/90	1/75
06	1/60	1/50
05	1/30	1/25
04	1/15	1/12
03	1/8	1/6
02	1/4	1/3
01	1/2	1/2
00	1/1	1/1

### AE – Iris priority

The iris can be set freely by the user to 14 steps between F1.6 and Close.

The gain and shutter speed are set automatically, according to the brightness of the subject.

Parameter	Setting value	Parameter	Setting value
11	F1.6	0A	F5.6
10	F2	09	F6.8
0F	F2.4	08	F8
0E	F2.8	07	F9.6
0D	F3.4	06	F11
0C	F4	05	F14
0B	F4.8	00	CLOSE

### AE – Manual


The shutter speed (22 steps), iris (14 steps) and gain (15 steps) can be set freely by the user.

### AE – Bright

The bright control function adjusts both gain and iris using an internal algorithm, according to a brightness level freely set by the user. Exposure is controlled by gain when dark, and by iris when bright.

As both gain and iris are fixed, this mode is used when exposing at a fixed camera sensitivity. When switching from Full Auto or Shutter Priority Mode to Bright Mode, the current status will be retained for a short period of time.

Only when the AE mode is set to “Full Auto” or “Shutter Priority,” you can switch it to “Bright.”

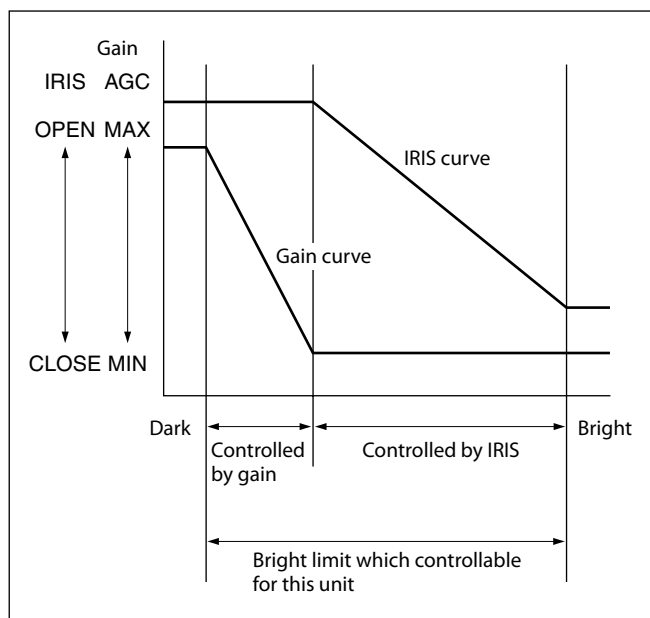

Parameter	Iris	Gain	Parameter	Iris	Gain
1F	F1.6	+43 dB	11	F1.6	0 dB
1E	F1.6	+39 dB	10	F2	0 dB
1D	F1.6	+36 dB	0F	F2.4	0 dB
1C	F1.6	+33 dB	0E	F2.8	0 dB
1B	F1.6	+30 dB	0D	F3.4	0 dB
1A	F1.6	+27 dB	0C	F4	0 dB
19	F1.6	+24 dB	0B	F4.8	0 dB
18	F1.6	+21 dB	0A	F5.6	0 dB
17	F1.6	+18 dB	09	F6.8	0 dB
16	F1.6	+15 dB	08	F8	0 dB
15	F1.6	+12 dB	07	F9.6	0 dB
14	F1.6	+9 dB	06	F11	0 dB
13	F1.6	+6 dB	05	F14	0 dB
12	F1.6	+3 dB	00	CLOSE	0 dB

When switching from the Shutter Priority mode to the Bright mode, the shutter speed set in the Shutter Priority mode is maintained.

### Defog mode

When the surrounding area of the subject is foggy and low contrast, the defog mode will make the subject appear clearer.

---

## Wide Dynamic Range Mode (WD)

The Wide Dynamic Range mode is a function for dividing an image into several blocks and correcting blocked-up shadows and blown-out highlights in accordance with the intensity difference. It enables you to obtain images in which portions ranging from dark to light can be recognized, even when capturing a subject with a large intensity difference that is backlit or includes extremely light portions. Images with wide dynamic range are produced by combining long-exposure signals (normal shutter) with the signals of the high-intensity portions obtained with a short exposure (high-speed shutter).

### • About WD Set Parameter

(Command: 8x 01 7E 04 00 0p FF)

p: WIDE D (Wide dynamic range mode)

When MODE (exposure mode) is set to FULL AUTO, the camera distinguishes light and dark areas in the same scene, adjusts the brightness for dark areas, and also controls the blown out highlights.

You can select the wide dynamic range mode from among OFF, LOW, MID and HIGH. (0: OFF, 1: LOW, 2: MID, 3: HIGH.)

### Notes

- You can set the wide dynamic range mode when the WIDE D is set to FULL AUTO only.
- When the WIDE D is not set to OFF, the MODE setting is fixed at FULL AUTO.
- When changing the WIDE D, the luminance change of the screen occurs for a moment.
- When the change of exposure is big, the screen may stop for a moment.
- When the wide dynamic range mode is ON, false colors may appear in some parts of the image. This phenomenon is unique to wide dynamic range mode, and is not an indication of a camera malfunction.
- When switching wide dynamic range mode, images are shown at a maximum of 8 frames at the same time.
- When the intensity difference of the image is small, there is no difference in effect between MID and HIGH.

---

## Exposure Compensation

Exposure compensation is a function which offsets the internal reference brightness level used in the AE mode, by steps of 1.5 dB.

The reference brightness is 0.

Parameter	Step	Setting value
0E	+7	+10.5 dB
0D	+6	+9 dB
0C	+5	+7.5 dB
0B	+4	+6 dB
0A	+3	+4.5 dB
09	+2	+3 dB
08	+1	+1.5 dB
07	0	0 dB
06	-1	-1.5 dB
05	-2	-3 dB
04	-3	-4.5 dB
03	-4	-6 dB
02	-5	-7.5 dB
01	-6	-9 dB
00	-7	-10.5 dB

---

## High Resolution Mode

This mode enhances edges and produces higher definition images.

---

## Aperture Control

Aperture control is a function which adjusts the enhancement of the edges of objects in the picture. There are 16 levels of adjustment, starting from “no enhancement.” When shooting text, this control may help by making them sharper.

---

## Back Light Compensation

When the background of the subject is too bright, or when the subject is too dark due to shooting in the AE mode, back light compensation will make the subject appear clearer.

---

## Noise Reduction

The NR (Noise Reduction) function removes noise (both random and non-random) to provide clearer images.

This function has six steps: levels 1 to 5, plus off.

The NR effect is applied in levels based on the gain, and this setting value determines the limit of the effect. In bright conditions, changing the NR level will not have an effect.

---

## High Sensitivity Mode

In this mode, higher sensitivity gain is applied as standard gain increases, reaching a gain level at MAX gain of up to 4x the standard gain. In such cases, however, there will be a high volume noise in the image.

---

## Gamma Mode

In this mode, the gamma can be set to ON/OFF.

0: Standard

1: OFF

---

## Image Stabilizer

You can set this function to ON or OFF. When set to ON, you can obtain steadier images if vibration is present. This stabilizer is effective for vibration frequencies around 10 Hz. This function utilizes digital zoom; therefore, the angle of view and resolution of images may be affected. However, image sensitivity is retained.

OFF: The image stabilizer function is not effective operations.

ON: The image stabilizer function is effective operations.

### Notes

- The image stabilizer function is not effective during pan/tilt operations. It may take some time for the image to stabilize after performing pan/tilt operations.
- If the image stabilizer function is enabled, it may take some time for the image to stabilize after turning on the power of the camera.
- Depending on the installation conditions, the image stabilizer may not be effective.
- The image stabilizer may not be effective in an installation environment where high frequency vibration is present. In this case, set the image stabilizer function to OFF.

---

## Auto Slow Shutter On/Off

When set to “On,” the slow shutter functions automatically when the light darkens. This setting is available only when the AE mode is set to “Full Auto.” The default setting is “Auto Slow Shutter Off.”

---

## Low-Illumination Chroma Suppress Mode

You can configure a chroma suppress mode for low-illumination conditions. This can be useful when color noise is particularly noticeable in such conditions. Four levels (disabled and three levels) are available for the low-illumination chroma suppress mode.

---

## ICR (IR Cut-Removable) Mode

The IR Cut-Filter can be disengaged, by which the sensitivity in the infrared range is increased, allowing the camera to capture the image in darker area.

When the auto ICR mode is set to ON, the image becomes black and white.

---

## Color Gain

You can configure the color gain. Use this setting when bright color is particularly important.

The initial setting 100% (4h) can be set to range from approx. 60% (0h) to 200% (Eh) with 15 stages.

---

## Color Phase

You can configure green, yellow, red, magenta, blue and cyan individually.

The initial setting 0 degrees (7h) is adjustable between approx. -14 degrees (0h) to +14 degrees (Eh), in 15 increments.


---

## Auto ICR Mode


Auto ICR Mode automatically switches the settings needed for attaching or removing the IR Cut Filter. With a set level of darkness, the IR Cut Filter is automatically disabled (ICR ON), and the infrared sensitivity is increased. With a set level of brightness, the IR Cut Filter is automatically enabled (ICR OFF). Also, on systems equipped with an IR light, the internal data of the camera is used to make the proper decisions to avoid malfunctions.

Auto ICR Mode operates with the AE Full Auto setting.

### When Auto Slow Shutter is Off (initial setting)

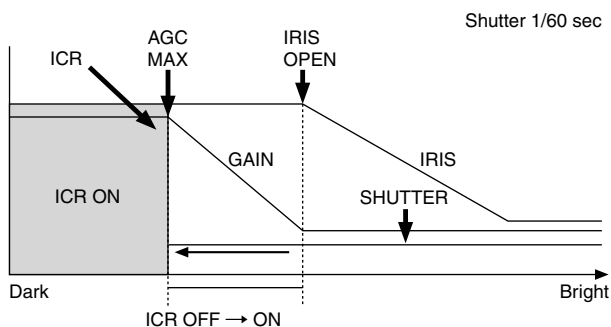

### When Auto Slow Shutter is On

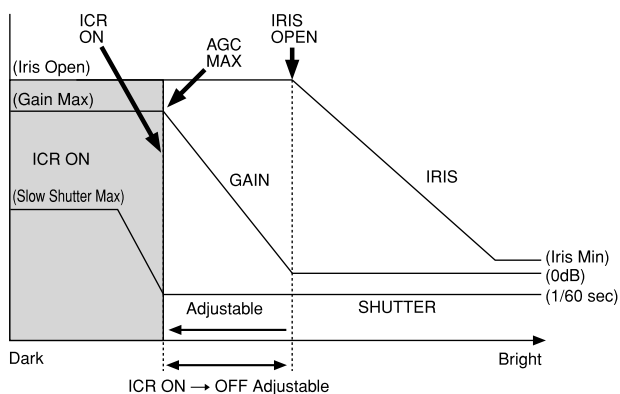

#### Note

Depending on the information such as brightness, etc., in the ON/OFF settings condition, a malfunction may occur when the subjects largely consisting of blue and green colors are taken.

## Camera ID

The ID can be set up to 65,536 (0000 to FFFF). As this will be memorized in the nonvolatile memory inside, data will be saved.

## Picture Effect

It consists of the following functions.

- **Neg. Art:** Negative/Positive Reversal
- **Black & White:** Monochrome Image

## PAN/TILT SLOW mode

When this function is set to ON, the PAN/TILT movement slows down, allowing you to easily shoot the subject that moves slowly.

#### Note

The low-speed motion image may appear to be shaking depending on the zoom factor.

## Check for influence of installation environment on infrared remote commander operation

The supplied infrared remote commander may not operate, only occasionally, in the vicinity of the inverter lighting device. In this case, it is possible that the camera is installed in a place where the infrared remote commander cannot stably receive light due to the emission of light from the lighting device.

If the installation environment is judged to be unstable for operating the infrared remote commander, try to take such measures as to install this unit in a place away from the lighting device having the influence, and so on.



---

## Others

### STANDBY

Sends the power off command. Or when the power is turned off using the infrared remote commander, the camera becomes STANDBY state.

In the STANDBY state, the camera can accept only the VISCA Commands and the POWER ON of the infrared remote commander, and the video signal output and other operations are stopped.

### I/F Clear

Clears the Command buffer of the camera. The buffer is cleared even during the power on state using the control software.

### Memory (Preset)

Using the preset function, 256 sets of camera shooting conditions can be stored and recalled.

This function allows you to achieve the desired status instantly, even without adjusting the following items each time.

- **Pan/Tilt Position**
- **Zoom Position**
- **Digital Zoom On/Off**
- **Focus Auto/Manual**
- **Focus Position**
- **AE Mode**
- **Shutter control parameters**
- **Bright Control**
- **Iris control parameters**
- **Gain control parameters**
- **Exposure Compensation On/Off**
- **Exposure Level**
- **Backlight Compensation On/Off**
- **Auto Slow Shutter On/Off**
- **White Balance Mode**
- **R/B Gain**
- **Aperture Control**
- **ICR On/Off**
- **WD Parameter**
- **Defog On/Off**

The settings stored using this function are recalled when the power is turned on.

*For setting items, see the “Initial Settings and Preset” section on page 10.*

#### Note

Rewriting of memory is not unlimited. Be careful to avoid using the memory area for such as unnecessary tasks as rewriting the contents of the memory for every operation.

# Initial Settings and Preset

- The initial values are the factory settings.
- When the power is turned on, this unit starts operation with the settings stored in preset 1.
- In “Preset 1 to 256”, the items that are preserved even after the power from the camera is turned off are indicated by a circle (○), and the items that are not preserved are indicated by a cross (×).
- When you send the CAM Memory Reset command, or select and press a position from POSITION1 to 6 while pressing the RESET button using the infrared remote commander, setting of the selected number will be initialized.
- The preset 1 is the CAM Memory number “0” in the VISCA command. The preset 2 to 16 are the CAM Memory number “1 to 15” in the VISCA command.

Mode/Position setting	Initial settings	Preset 1	Preset 2 to 256
Pan/Tilt Position	Home position	○	○
Pan/Tilt Limit Position	Maximum range of movement	○	×
Zoom Position	Wide end	○	○
D-Zoom On/Off	On	○	○
Focus Position	—	○	○
Focus Auto/Manual	Auto	○	○
Near Limit Setting	D000h (30 cm)	○	×
AF Sensitivity	Normal	○	×
AF Mode	Normal	○	×
AF Run Time	5 sec	○	×
AF Interval	5 sec	○	×
WB Mode	Auto	○	○
WB Data (Rgain, Bgain)	—	○	○
One Push WB Data	—	○	×
AE Mode	Full Auto	○	○
WD Mode	Off	○	○
Auto Slow Shutter Mode	Off	○	○
Shutter Position	—	○	○
Iris Position	—	○	○
Gain Position	—	○	○
Bright Position	—	○	○
Exposure Compensation On/Off	Off	○	○
Exposure Compensation Amount	±0	○	○
BackLight On/Off	Off	○	○
Aperture Level	0Ah	○	○
High Resolution Mode On/Off	Off	○	×
Picture Effect	Off	○	×
ICR On/Off	Off	○	○
Auto ICR On/Off	Off	○	×
Auto ICR Threshold Level	0Eh	○	×
Image Stabilizer On/Off	Off	○	×
High Sensitivity Mode On/Off	Off	○	×
Gamma	0:standard	○	×
Defog On/Off	Off	○	○
NR Level	3	○	×
Gain Limit	—	○	×
Low-Illumination Chroma Suppress	2h (Middle)	○	×
Color Gain	4h (100%)	○	×
Color Hue	7h (0degrees)	○	×

## Notes

- The execution of memory to the preset is limited.
- When turning the power off and on again, if you want to reflect the camera conditions and pan/tilt position that are set before the power is turned off, store the settings in POSITION1.
- The setting or deleting of memory to/from preset 1 takes approx. 2 seconds longer than other channels.
- In CameraID, the data is stored regardless of the preset.
- When ImageFlip is executed, all presets are reset to the initial value.
- The CAM\_Memory command is enabled only for presets 1 to 16.

# Mode Condition

## Basic settings

Mode Command		Power Off <sup>(1)</sup>	Power On						
			IFC <sup>(2)</sup>	Initializing <sup>(3)</sup>	During displaying the menu	Memory Command	OnePushWB	VideoFormatChange	Pan-TiltReset
Address Set		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IF_Clear		Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>	Yes <sup>(6)</sup>
CAM_Power On		Yes	No	Yes	No	Yes	No	Yes	Yes
CAM_Power Off		Yes	No	Yes	No	Yes	No	Yes	Yes
CAM_VersionInq		Yes	Yes	Yes	Yes <sup>(4)</sup>	Yes	Yes	Yes	Yes
CAM_PowerInq		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
InquiryCommand		No	No	Yes <sup>(5)</sup>	No	No	No	No	Yes

- 1) DC power is being supplied, but the camera has been turned off by a VISCA command.
- 2) The period from the time IF Clear is sent, until the Reply Packet is returned.
- 3) The period from the time DC power is turned on or the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output. Or the period from the time the CAM Power ON command is sent, until Completion is returned.
- 4) Commands can be executed after the pan/tilt movement has been started. Before that, camera movement may be inconsistent.
- 5) When the menu display is updating, operation is not possible.
- 6) Although the command is received, it is not executed.

## Output settings

Mode		Power Off	Power On									
Command			IFC	Initializing	PanTilt	PanTilt ABS	PanTilt Rel	ZoomDirect	Focus Direct	Recall	During displaying the menu	OnePush WB
CAM_VideoFormatChange (Execution of the VISCA command from user during the VISCA mode)		No	No	No	No	No	No	No	No	No	Yes <sup>1)</sup>	No

- 1) The Video Format state of MENU is not updated. Close MENU once, and then display it again. Other commands are not received while executing Format Change.

## Zoom/Focus

Command	Mode	Power Off <sup>1)</sup>	Power On						Memory Recall	Memory FormatChange
			IFC <sup>2)</sup>	Initializing <sup>3)</sup>	Zoom Direct	Focus Direct	AF ON	During displaying the menu		
CAM_Zoom Tele/Wide/Stop [VISCA]		No	No	No	No	Yes	Yes	Yes <sup>4)</sup>	No	No
CAM_Zoom Tele/Wide/Stop [Infrared Remote Commander]		No	No	No	No	Yes	Yes	Yes <sup>4)</sup>	No	No
CAM_Zoom Direct		No	No	No	Yes	Yes	Yes	Yes <sup>4)</sup>	No	No
D-Zoom Limit		No	No	No	No	Yes	Yes	Yes <sup>4)</sup>	No	No
CAM_Focus Far/Near/Stop [VISCA]		No	No	No	Yes	No	No	Yes <sup>4)</sup>	No	No
CAM_Focus Far/Near/Stop [Infrared Remote Commander]		No	No	No	Yes	No	No	Yes <sup>4)</sup>	No	No
CAM_Focus Direct		No	No	No	Yes	Yes	No	Yes <sup>4)</sup>	No	No
CAM_Focus Mode (Auto/Manual)		No	No	No	Yes	No	Yes	Yes <sup>4)</sup>	No	No
CAM_Focus One Push Trigger		No	No	No	Yes	No	No	Yes <sup>4)</sup>	No	No
CAM_Focus Infinity		No	No	No	Yes	No	Yes	Yes <sup>4)</sup>	No	No
CAM_Focus Near Limit		No	No	No	Yes	No	Yes	Yes <sup>4)</sup>	No	No
AF Sensitivity Normal/Low		No	No	No	Yes	Yes	Yes	Yes <sup>4)</sup>	No	No
AF Mode Norm/Interval/Zoom		No	No	No	Yes	Yes	Yes	Yes <sup>4)</sup>	No	No
AF Activation Time/Interval Setting		No	No	No	Yes	Yes	Yes	Yes <sup>4)</sup>	No	No

1) DC power is being supplied, but the camera has been turned off by a VISCA command.

2) The period from the time IF Clear is sent, until the Reply Packet is returned.

3) The period from the time DC power is turned on or the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output. Or the period from the time the CAM Power ON command is sent, until Completion is returned.

4) When the menu display is updating, operation is not possible.

## White Balance

Mode		Power Off <sup>(1)</sup>	Power On							
Command	IFC <sup>(2)</sup>		Initializing <sup>(3)</sup>	White balance mode				During displaying the menu		Memory Recall
				Auto	Indoor	Outdoor	One Push	Manual	ATW	
CAM_WB Auto/Indoor/Outdoor/OnePhshWB/Manual/ATW		No	No	Yes	Yes	Yes	Yes	Yes	Yes <sup>(4)</sup>	No
CAM_WB One Push Trigger		No	No	No	No	No	Yes <sup>(5)</sup>	No	Yes <sup>(4)</sup>	No
CAM_WB R(B) Gain Reset/Up/Down/Direct		No	No	No	No	No	No	Yes	Yes <sup>(4)</sup>	No

1) DC power is being supplied, but the camera has been turned off by a VISCA command.

2) The period from the time IF Clear is sent, until the Reply Packet is returned.

3) The period from the time DC power is turned on or the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output. Or the period from the time the CAM Power ON command is sent, until Completion is returned.

4) When the menu display is updating, operation is not possible.

5) Commands are ignored during a One Push AWB operation.

# Exposure

Mode  Command	Power Off <sup>(1)</sup>	Power On								Memory Recall
		IFC <sup>(2)</sup>	Initializing <sup>(3)</sup>	Exposure mode				During displaying the menu		
				Full Auto WIDE D Off	Full Auto WIDE D Low/ Mid/High	Bright	Shutter Pri	Iris Pri	Manual	
CAM_AE Full Auto/Manual/Shutter Pri/ Iris Pri	No	No	No	Yes	No	Yes <sup>(4)</sup>	Yes	Yes	Yes	Yes <sup>(5)</sup>  No
CAM_AE Bright	No	No	No	Yes	No	Yes	Yes	No	No	Yes <sup>(5)</sup>  No
CAM_Slow Shutter ON/OFF	No	No	No	Yes	No	Yes	Yes	Yes	Yes	Yes <sup>(5)</sup>  No
CAM_Shutter Reset/Up/Down/Direct	No	No	No	No	No	No	Yes	No	Yes	Yes <sup>(5)</sup>  No
CAM_Iris Reset/Up/Down/Direct	No	No	No	No	No	No	No	Yes	Yes	Yes <sup>(5)</sup>  No
CAM_Gain Reset/Up/Down/Direct	No	No	No	No	No	No	No	No	Yes	Yes <sup>(5)</sup>  No
CAM_Bright/Up/Down/Direct	No	No	No	No	No	Yes	No	No	No	Yes <sup>(5)</sup>  No
CAM_ExComp On/Off	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes <sup>(5)</sup>  No
CAM_ExComp Reset/Up/Down/ Direct <sup>(6)</sup>	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes <sup>(5)</sup>  No
CAM_Backlight On/Off	No	No	No	Yes	Yes	No	No	No	No	Yes <sup>(5)</sup>  No
CAM_WIDE_D Off/Low/Mid/High	No	No	No	Yes	Yes	No	No	No	No	Yes <sup>(5)(7)</sup>  No
CAM_Defog	No	No	No	Yes	Yes	Yes	Yes	Yes	Yes	Yes <sup>(7)</sup>  No

- 1) DC power is being supplied, but the camera has been turned off by a VISCA command.

- 2) The period from the time IF Clear is sent, until the Reply Packet is returned.

3) The period from the time DC power is turned on to the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output. Or the period from the time the CAM Power ON command is sent, until Completion is returned.

4) Yes: Only when the camera changes to BRIGHT mode from Full Auto or SHUTTER Pri mode.

5) When the menu display is updating, operation is not possible.

6) No: This is not allowed when EX-COMP is set to OFF.

7) This can be changed only when the exposure control mode is Full Auto.

## Effect

Command	Mode	Power Off <sup>1)</sup>	Power On			
			IFC <sup>2)</sup>	Initializing <sup>3)</sup>	During displaying the menu	Memory Recall
CAM_Aperture Reset/Up/Down/Direct		No	No	No	Yes <sup>4)</sup>	No
Display info. (ON/OFF)		No	No	No	Yes <sup>4)</sup>	No
CAM_PictureEffect OFF/Neg.Art/B&W		No	No	No	Yes <sup>4)</sup>	No
CAM_ICR ON/OFF		No	No	No	Yes <sup>4)</sup>	No
CAM_AutoICR ON/OFF/Threshold		No	No	No	Yes <sup>4)</sup>	No
CAM_HR ON/OFF		No	No	No	Yes <sup>4)</sup>	No
CAM_NR		No	No	No	Yes <sup>4)</sup>	No
CAM-ChromaSuppress		No	No	No	Yes <sup>4)</sup>	No
CAM_ColorGain		No	No	No	Yes <sup>4)</sup>	No
CAM_ColorHue		No	No	No	Yes <sup>4)</sup>	No
CAM_Stabilizer		No	No	No	Yes <sup>4)</sup>	No

1) DC power is being supplied, but the camera has been turned off by a VISCA command.

2) The period from the time IF Clear is sent, until the Reply Packet is returned.

3) The period from the time DC power is turned on or the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output. Or the period from the time the CAM Power ON command is sent, until Completion is returned.

4) When the menu display is updating, operation is not possible.

# Pan/Tilt

Mode		Power Off <sup>1)</sup>	Power On													Position detection error	
			Pan/Tilt normal status														
			IFC <sup>2)</sup>	Initia-lizing <sup>3)</sup>	Zoom (Direct)	Focus (Direct)	Pan/tilt movement according to the command <sup>4)</sup>		Absolute Position execution	Relative Position execution	Home execution		Reset execution		Memory Recall		During displaying the menu
VISCA	Infrare Remote Commander	VISCA					Infrare Remote Commander	VISCA			Infrare Remote Commander	VISCA	Infrare Remote Commander	VISCA	Infrare Remote Commander		
Command	Transmit device	No	No	Yes	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	Yes <sup>10)</sup>	Yes <sup>8)</sup>
	Pan-tiltDrive Up/Down/Left/ Right/UpLeft/UpRight/ DownLeft/DownRight	No	No	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	No	Yes <sup>8)</sup>
	Pan-tiltDrive Stop	No	No	Yes	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	Yes
Pan-tiltDrive AbsolutePosition	VISCA	No	No	Yes	Yes	Yes	Yes	No	No	Yes	No	No	No	No	No	Yes <sup>5)</sup>	No
	VISCA	No	No	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	Yes <sup>5)</sup>	Yes
Pan-tiltDrive Home	VISCA	No	No	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	Yes	No
	Infrare Remote Commander	No	No	Yes	Yes	Yes	Yes	No	No	No	Yes	No	No	No	No	Yes	No
Pan-tiltDrive Reset	VISCA	No	No	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	Yes <sup>5)</sup>	Yes
	Infrare Remote Commander	No	No	Yes	Yes	Yes	Yes	No	No	No	No	No	No	No	No	Yes <sup>5)</sup>	Yes
Pan-tiltLimitSet LimitSet	VISCA	No	No	Yes	Yes	Yes	Yes	Yes <sup>9)</sup>	Yes <sup>9)</sup>	No	No	No	No	No	No	Yes <sup>5)</sup>	No
Pan-tiltLimitSet LimitClear	VISCA	No	No	Yes	Yes	Yes	Yes	Yes <sup>9)</sup>	Yes <sup>9)</sup>	No	No	No	No	No	No	Yes <sup>5)</sup>	No
Memory Set	Common	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Memory Reset	Common	No	No	No	No	No	No	Yes	Yes	No	No	No	No	No	No	No	No
Memory Recall	VISCA	No	No	No <sup>6)</sup>	No <sup>7)</sup>	No	No	No	No	No	No	No	No	Yes	Yes	No	No
	Infrare Remote Commander	No	No	No <sup>6)</sup>	No <sup>7)</sup>	No	No	No	No	No	No	No	No	Yes	Yes	No	No
Pan-tiltSetSlowPanTilt	VISCA	No	No	Yes	Yes	Yes <sup>9)</sup>	Yes <sup>9)</sup>	No	No	No	No	No	No	No	No	Yes	No

1) DC power is being supplied, but the camera has been turned off by a VISCA command.

2) The period from the time IF Clear is sent, until the Reply Packet is returned.

3) The period from the time DC power is turned on or the camera is turned on via a VISCA command, and the camera subsequently finishes the pan/tilt reset operation and stops at the Home position, until the video signal is output.

4) The pan/tilt operation works by Pan-tiltDrive Up/Down/Left/Right/UpLeft/UpRight/DownLeft/DownRight commands.

5) When the menu display is updating, operation is not possible.

6) Yes: while the camera operates in Tele/Wide zoom mode.

7) Yes: while the camera operates in Far/Near focus mode.

8) Yes: only for movements away from the direction where a position detection error has been recognized.

9) The setting is reflected after the drive has stopped.

10) Although Ack/Comp is returned, the pan/tilt operation is not performed.

# Command List

---

## VISCA<sup>1)</sup> RS-422 Commands

Use of RS-422 control software based upon this command list may cause malfunction or damage to hardware and software. Sony Corporation is not liable for any such damage.

### Overview of VISCA

In VISCA, the device outputting the commands, for example, a computer, is called the controller, while the device receiving the commands, such as this unit, is called the peripheral device. In VISCA, up to seven peripheral devices can be connected to one controller using communication conforming to the RS-422 standard. The parameters of RS-422 are as follows.

- Communication speed: 9600 bps/38400 bps
- Data bits : 8
- Start bit : 1
- Stop bit : 1
- Non parity

Flow control using XON/XOFF and RTS/CTS, etc., is not supported.

#### Note

For this camera, one controller can be connected to one SRG-360SHE/SRG-280SHE. To connect multiple SRG-360SHE/SRG-280SHE devices, use VISCA over IP. For the use of VISCA over IP, refer to “VISCA over IP” (page 22).

---

<sup>1)</sup> VISCA is a protocol developed by Sony for controlling a consumer's camcorder. “VISCA” is a trademark of Sony Corporation.



# VISCA Communication Specifications

## VISCA packet structure

The basic unit of VISCA communication is called a packet (Fig. 2). The first byte of the packet is called the header and comprises the sender's and receiver's addresses. The value of the header is fixed as 81h, as only one camera can be operated from the controller via the RS-422 connection for this camera. In the command list, this is indicated as 8X. Replace this "X" with the SRG address appropriately (for this camera, this is locked to 1). The header of reply packet is 90h.

When the terminator is FFh, it signifies the end of the packet.

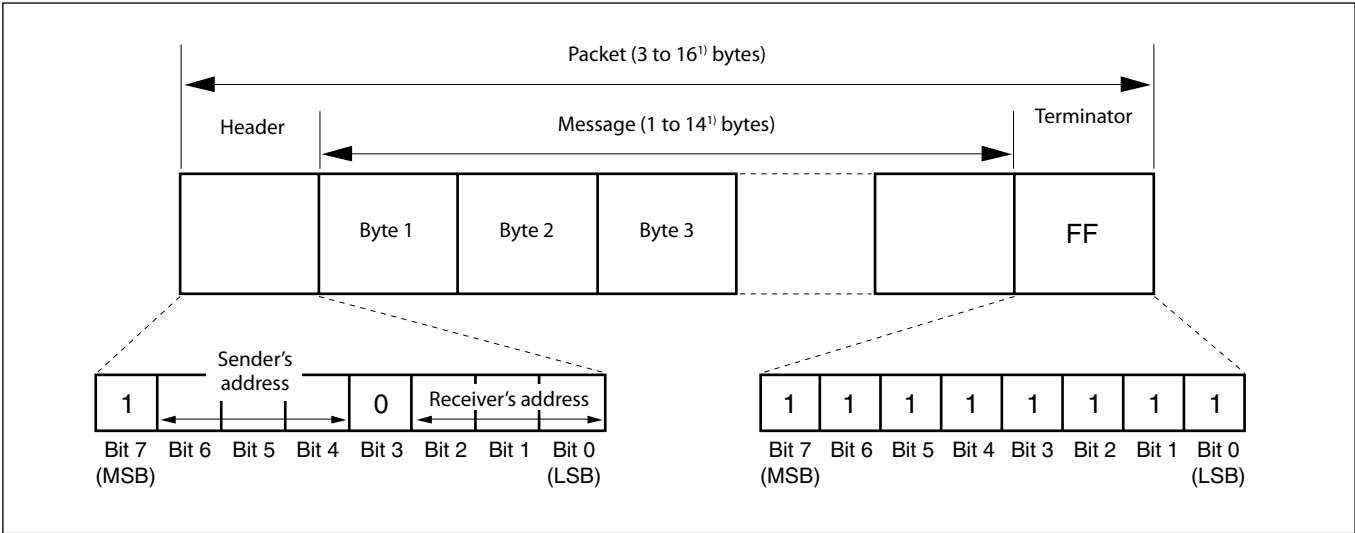


Fig. 2 Packet structure

<sup>1)</sup> The maximum length of the message is 15 bytes (the maximum length of the packet is 17 bytes) only for commands to set the camera position.

### Note

Fig. 2 shows the packet structure, while Fig. 3 shows the actual waveform. Data flow will take place with the LSB first.


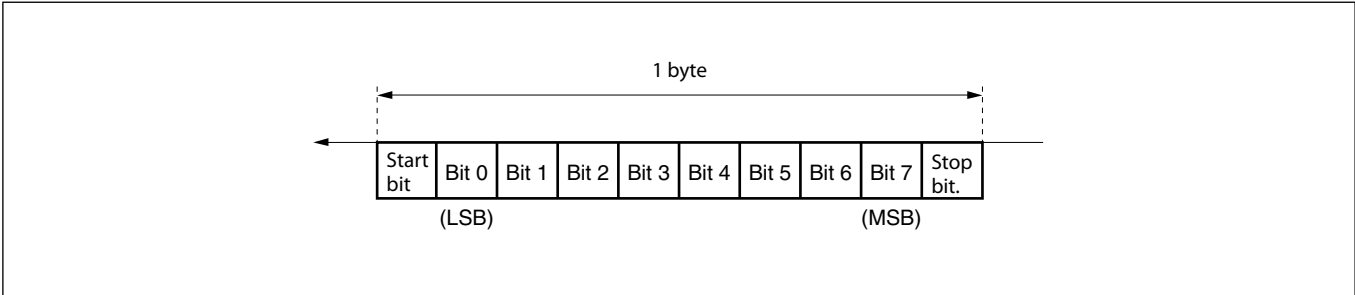


Fig. 3 Actual waveform for 1 byte.

## Timing Chart

If two or more commands are to be sent successively, wait for a reply command (an Acknowledge or error message for a general command, and an inquiry packet for an inquiry command) of the previous command to be received before sending the next command.

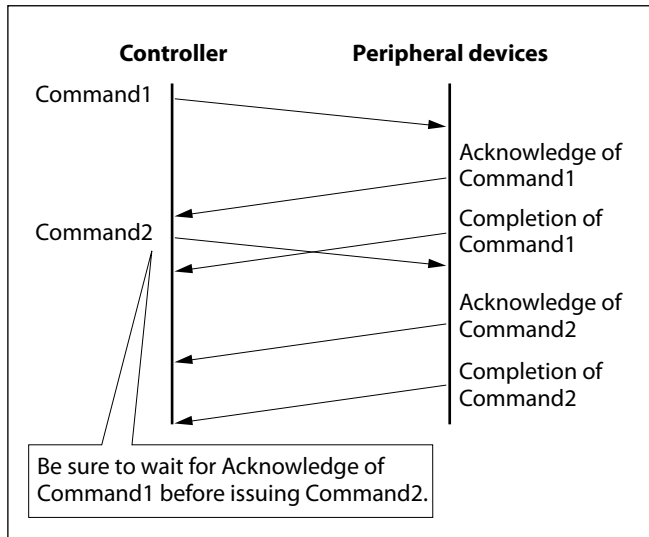

## Command and inquiry

### ● Command

Sends operational commands to this unit.

### ● Inquiry

Used for inquiring about the current state of this unit.

	Command Packet	Note
Inquiry	8X QQ RR ... FF	QQ <sup>1)</sup> = Command/Inquiry, RR <sup>2)</sup> = category code

<sup>1)</sup> QQ = 01 (Command), 09 (Inquiry)

<sup>2)</sup> RR = 00 (Interface), 04 (camera 1), 06 (Pan/Tilter)

Locked to X=1 for this camera.

For actual values to be sent, see Command Lists or Inquiry Command Lists.

## Responses for commands and inquiries

### ● Acknowledge message

A message returned by this unit when it receives a command. No Acknowledge message is returned for an inquiry, cancel, or device setting command.

### ● Completion message

A message returned by this unit when the execution of command or inquiry is completed. In the case of inquiry commands, reply data for the inquiry is contained after the 3rd byte of the packet. If the Acknowledge message is omitted, the socket number will contain 0.

	Reply Packet	Note
Acknowledge	X0 4Y FF	Y = socket number
Completion (Commands)	X0 5Y FF	Y = socket number
Completion (Inquiries)	X0 5Y ... FF	Y = socket number

Locked to X=9 for this camera.

### ● Error message

When a command could not be executed or failed, an error message is returned instead of an Acknowledge message. In some commands (such as zoom) in which the process is not completed immediately after the Acknowledge message, an error message may be returned after an Acknowledge message. When an inquiry command could not be executed or failed, an error message is returned instead of a completion message.

Error Packet	Description
X0 6Y 01 FF	Message length error
X0 60 02 FF	Syntax Error
X0 60 03 FF	Command buffer full
X0 6Y 04 FF	Command canceled
X0 6Y 05 FF	No socket (to be canceled)
X0 6Y 41 FF	Command not executable

Locked to X=9 for this camera.

---

## Socket number

This unit has two sets of sockets (buffers) for commands, so that up to two commands including the commands currently being executed can be received. When this unit receives commands, it notifies the sender which socket was used, using the socket number of the Acknowledge message. As each of the completion message and error message also has a socket number, you can identify which command has ended.

When sending the commands continuously, be sure to wait until an Acknowledge message or error message of the first command is returned, then send the next command. (Otherwise, it is impossible to identify to which command the socket number belongs.) Even when two sockets are being used, the device setting commands and some inquiry messages can be executed.

The Acknowledge message is not returned for these commands and inquiries, and only the completion message of socket number 0 is returned.

---

## Command execution cancel

To cancel a command which has already been sent, send a Cancel command as the next command.

	Cancel Packet	Note
Cancel	8X 2Y FF	Y = socket number
Locked to X=1 for this camera.		

Error message “Command canceled” will be returned for this command, but this is not a fault. It indicates that the command has been canceled.

## VISCA Device Setting Command

Before starting control of this unit, be sure to send the Address command and the IF\_Clear command using the broadcast function.

---

### For VISCA network administration

#### ● Address\*

Sets an address of a peripheral device. Use when initializing the network, and receiving the following network change message.

\* Not available for VISCA over IP.

#### ● Network Change\*

Sent from the peripheral device to the controller when a device is removed from or added to the network. The address must be re-set when this message is received.

\* Not available for VISCA over IP.

	Packet	Note
Address	88 30 01 FF	Always broadcasted.
Network Change	X0 38 FF	
Locked to X=9 for this camera.		

---

### VISCA interface command

#### ● IF\_Clear

Clears the socket in the SRG. When cleared, the operation currently being executed is not guaranteed.

	Command Packet	Reply Packet	Note
IF_Clear	8X 01 00 01 FF	Z0 50 FF	
IF_Clear (broadcast) <sup>1)</sup>	88 01 00 01 FF	88 01 00 01 FF	
Locked to X=1 for this camera.			
Locked to Z=9 for this camera.			

<sup>1)</sup> The broadcast function is not available for VISCA over IP.

## VISCA interface and inquiry

### ● CAM\_VersionInq

Returns information on the VISCA interface.

Inquiry	Inquiry Packet	Reply Packet	Description
CAM_VersionInq	8X 09 00 02 FF	Y0 50 GG GG HH HH JJ JJ KK FF	GGGG = Vender ID (0001: Sony) HHHH = Model ID (0604: SRG-360SHE) (0605: SRG-280SHE) JJJJ = ROM revision KK = Maximum socket # (02)

Locked to X=1 for this camera.

Locked to Y=9 for this camera.

## VISCA Command/Acknowledge Protocol

Command	Command Message	Reply Message	Comments
General Command	81 01 04 38 02 FF (Example)	90 41 FF (Acknowledge) +90 51 FF (Completion) 90 42 FF 90 52 FF	Returns Acknowledge when a command has been accepted, or Completion when a command has been executed.
	81 01 04 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted a command which is not supported or a command lacking parameters.
	81 01 04 38 02 FF (Example)	90 60 03 FF (Command Buffer Full)	Could not accept the command as there are two commands currently being executed.
	81 01 04 08 02 FF (Example)	90 61 41 FF (Command Not Executable) 90 62 41 FF	Could not execute the command in the current mode.
Inquiry Command	81 09 04 38 FF (Example)	90 50 02 FF (Completion)	Does not return Acknowledge.
	81 09 05 38 FF (Example)	90 60 02 FF (Syntax Error)	Accepted an incompatible command.
Command Cancel	81 22 FF (Example)	90 62 04 FF (Command Canceled)	Returned when the command of the socket specified is canceled. Completion for the command canceled is not returned.
		90 62 05 FF (No Socket)	Returned when the command of the specified socket has already been completed or when the socket number specified is wrong.
Address Set <sup>1)</sup>	88 30 01 FF	88 30 02 FF	The device address number plus 1 is returned.
IF_Clear (Broadcast) <sup>1)</sup>	88 01 00 01 FF	88 01 00 01 FF	The same command is returned.
IF Clear (for device address 1)	81 01 00 01 FF (Example)	90 50 FF (Completion)	Acknowledge is not returned for this command.

<sup>1)</sup> Not available for VISCA over IP.

# VISCA Camera-Issued Messages

---

## Acknowledge/Completion Messages

Command	Command Message	Comments
Acknowledge	z0 4y FF (y: Socket No.)	Returned when the command is accepted.
Completion	z0 5y FF (y: Socket No.)	Returned when the command has been executed.

Locked to Z=9 for this camera

---

## Error Messages

Command	Command Message	Comments
Syntax Error	z0 60 02 FF	Returned when the format is different or when a command with illegal parameters is accepted.
Command Buffer Full	z0 60 03 FF	Could not accept a command that is received while two commands are currently being executed (two sockets have been used).
Command Canceled	z0 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
No Socket	z0 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
Command Not Executable	z0 6y 41 FF (y: Socket No.)	Returned when a command cannot be executed due to current conditions. For example, when a command for controlling the manual focus is received during the auto focus mode.

Locked to Z=9 for this camera

---

## Network Change Message\*

Command	Command Message	Comments
Network Change	z0 38 FF	Issued when power is supplied to the camera.

Locked to Z=9 for this camera

\* Not available for VISCA over IP.

# VISCA over IP

## Overview of VISCA over IP

VISCA over IP allows you to control this unit from the controller with the IP communication function via the LAN by using VISCA.

You can connect up to 5 controllers simultaneously on the network.

The communication specifications of VISCA over IP are as follows:

- **Interface**

RJ-45 10Base-T/100Base-TX (automatically discrimination)

- **Internet protocol**

IPv4

- **Transport protocol**

UDP

- **IP address**

Set by the IP card setting command


- **Port address**

52381

- **Delivery confirmation/Retransmission control**

Depends on the application

In this section, the device outputting commands, for example, a computer, is called the controller, and this unit and the devices connected to the same LAN are called the peripheral device. In the connection using RS-232/RS-422, the controllers and peripheral devices are connected to a one-direction ring. On the IP communication connection, the controllers and peripheral devices are connected by star type through a LAN.

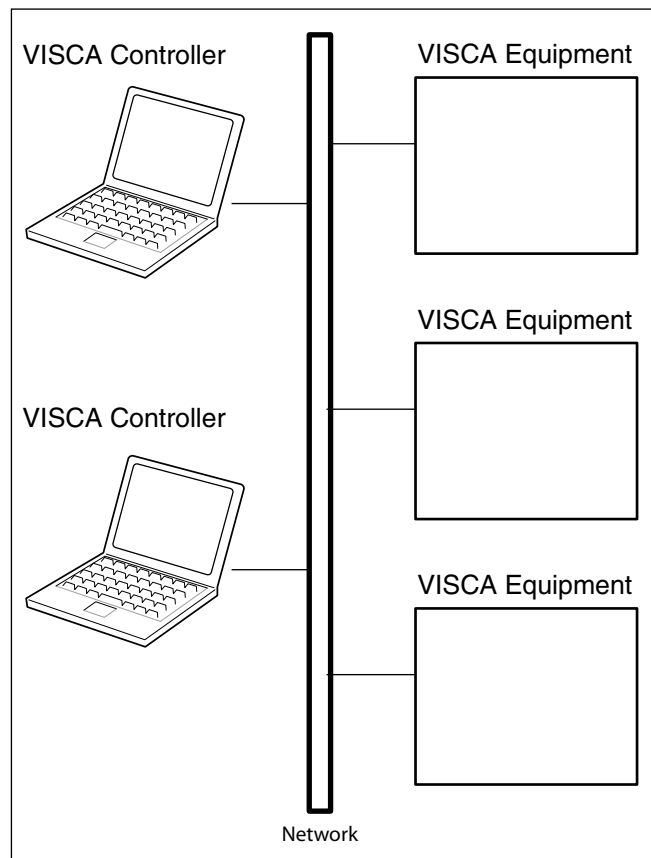

IP communication connection

While the IP communication connection, the address of each device cannot be set in the VISCA message as it is because the controllers and peripheral devices that are connected simultaneously are increased. In this case, addresses of the controllers and peripheral devices that are set in the VISCA message are locked to 0 (for the controller) or 1 (for the peripheral device).

For details of the IP address setting procedure, see “IP Related Setting Command” (page 26).

## Communication method of VISCA over IP

### Communication method

VISCA over IP can process the VISCA communication between the controllers and peripheral devices using the messages that can be identified on the LAN, and sends/receives them. Because of this, VISCA over IP is not concerned about the contents of the communication between the controllers and peripheral devices. However, the VISCA communication sequence is different, depending on the types, as follows.

### VISCA command

This is a command from the controller to the peripheral device.

When the peripheral device receives this command, Acknowledge is returned. After completing command processing, a completion notice is returned. This command uses the socket of VISCA. The order of completion notices may be changed if the multiple commands are sent to the same peripheral device.

### VISCA inquiry

This is an inquiry from the controller to the peripheral device.

When the peripheral device receives this type of command, the reply for the inquiry is returned. This command does not use the socket of VISCA. The order of the replies is not changed if a multiple commands are sent.

### VISCA reply

This is an Acknowledge, completion notice, reply, or error reply from the peripheral device to the controller. The classification for sending messages from the peripheral device to the controller is common.

### VISCA device setting command

This is the device setting command from the controller to the peripheral device.

When the peripheral device receives this classifications command, the peripheral device performs the function depend on the command.

### • Address

Sets the address of the peripheral device, and does not return a reply to the controller. While using VISCA over IP, the address command is not sent from the controller because a Network Change command from the peripheral device that triggers sending command is not issued.

### • IF\_Clear


Sends the reply message to the controller after clearing, without using VISCA socket.

### • CAM\_VersionInq

Sends the reply message to the controller, without using VISCA socket.

### Format

These are the specifications of the message header (8 bytes) and payload (1 to 16 bytes).

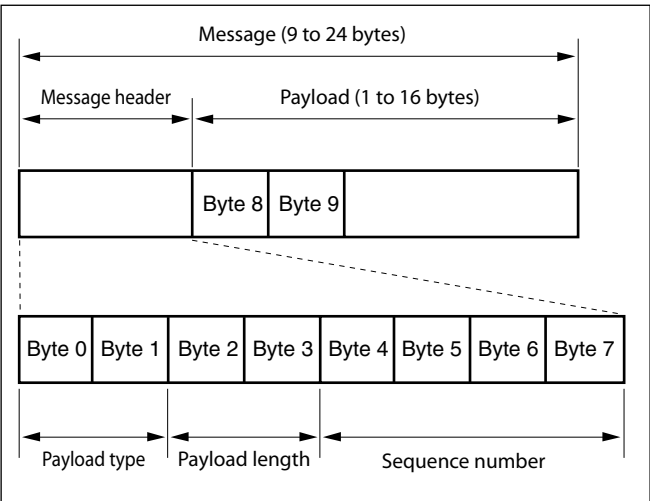

Message structure

### Note

The actual LAN out method is big-endian, LSB first.

## Payload type

Stores the value (Byte 0 and Byte 1) of the following table on the payload division.

Name	Value (Byte 0)	Value (Byte 1)	Description
VISCA command	01h	00h	Stores the VISCA command.
VISCA inquiry	01h	10h	Stores the VISCA inquiry.
VISCA reply	01h	11h	Stores the reply for the VISCA command and VISCA inquiry, or VISCA device setting command.
VISCA device setting command	01h	20h	Stores the VISCA device setting command.
Control command	02h	00h	Stores the control command.
Control reply	02h	01h	Stores the reply for the control command.

## Payload length

Stores the number of bytes (1 to 16) of data is stored on the payload.

Example: When the payload length is 16 bytes.

Byte 2: 00h

Byte 3: 10h

## Sequence number

The controller stores the sequence number that is added every time a message is sent. If the sequence number reaches the limit, next value will be 0. The peripheral device saves the sequence number in the message from the controller, and stores the sequence number of the received message corresponding to the message sent to the controller.

## Payload

Depending on the payload type, the following are stored.

### • VISCA command

Stores the packet of the VISCA command.

### • VISCA inquiry

Stores the packet of VISCA message.

### • VISCA reply

Stores the reply for the command or inquiry (Acknowledge message, completion message, or error message).

### • VISCA device setting command

Stores the packet of the VISCA device setting command.

### • Control command

The following are stored on the payload division of the control command.

Name	Value	Description
RESET	01h	Resets the sequence number to 0. The value that was set as the sequence number is ignored.
ERROR	0Fyyh	yy=01: Abnormality in the sequence number.
		yy=02: Abnormality in the message (message type)

### • Controlled reply

The following are stored on the payload division of the reply for the control command.

Message	Value	Description
Acknowledge	01h	Reply for RESET.

## Delivery confirmation

VISCA over IP uses UDP as a communications protocol of the transport layer. Delivery of messages is not guaranteed for the UDP communication. Delivery confirmation and retransmission should be performed on the application.

When the controller sends a message to the peripheral device, wait until a reply for the message is received before sending the next message. You can confirm delivery of messages by managing the time-out waiting for a reply message sent.

If time out occurs on the controller, loss of one of the following messages is considered:

- Command
- Acknowledge message
- Completion message for the command
- Inquiry
- Reply message for the inquiry
- Error message
- Inquiry of the VISCA device setting command
- Reply message of the VISCA device setting command




If time out occurs on the controller, you can infer the lost message and state of the peripheral device by retransmitting the message using the same sequence number. The following table shows the received message and status by retransmission of the lost message, and the reference of correspondence after retransmission for each case. (Except for the case that a time out occurs for reasons other than loss of message.)


Lost message	Received message for retransmission	Status after retransmission	Correspondence after retransmission
Command	Acknowledge message	Command is performed by retransmission.	Continue processing.
Acknowledge message	ERROR (Abnormality in the sequence number.)	Command has been performed. If only the Acknowledge message is lost, the completion message returns.	If the result by the completion message is needed, retransmit by updating the sequence number.
Completion message for the command	ERROR (Abnormality in the sequence number.)	Command has been performed.	If the result by the completion message is needed, retransmit by updating the sequence number.
Inquiry	Reply message	Inquiry is performed by retransmission.	Continue processing.
Reply message for the inquiry	ERROR (Abnormality in the sequence number.)	Inquiry has been performed.	If the result by the reply message is needed, retransmit by updating the sequence number.
Error message	Error message	Command is not performed. If the error cause eliminates, normal reply is returned. (Acknowledge, reply message).	Eliminate the error cause. If normal reply returns, continue processing.
Inquiry of the VISCA device setting command	Reply message of the VISCA device setting command	Inquiry has been performed by retransmission.	Continue processing.
Reply message of the VISCA device setting command	ERROR (Abnormality in the sequence number.)	Inquiry has been performed.	If the result by the reply message is needed, retransmit by updating the sequence number.

This unit has 2 sockets for the command to deal with advanced uses. When using VISCA over IP, up to 2 commands (including the current command) can be received. Depending on the message from the controller to the peripheral device, there are some messages that do not need to guarantee delivery. However, the peripheral device receives commands from multiple controllers while connected to VISCA over IP. If the multiple commands are sent without waiting for the reply, the possibility of non-execution of the command and errors due to socket overflow become high, because of limitations of order to receive commands or execution interval of command. It may reduce the substantial efficiency.

## Timing chart

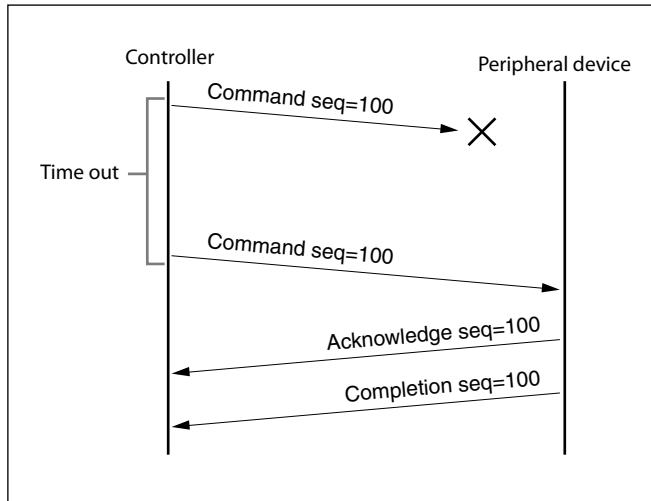

Timing chart (loss of command)

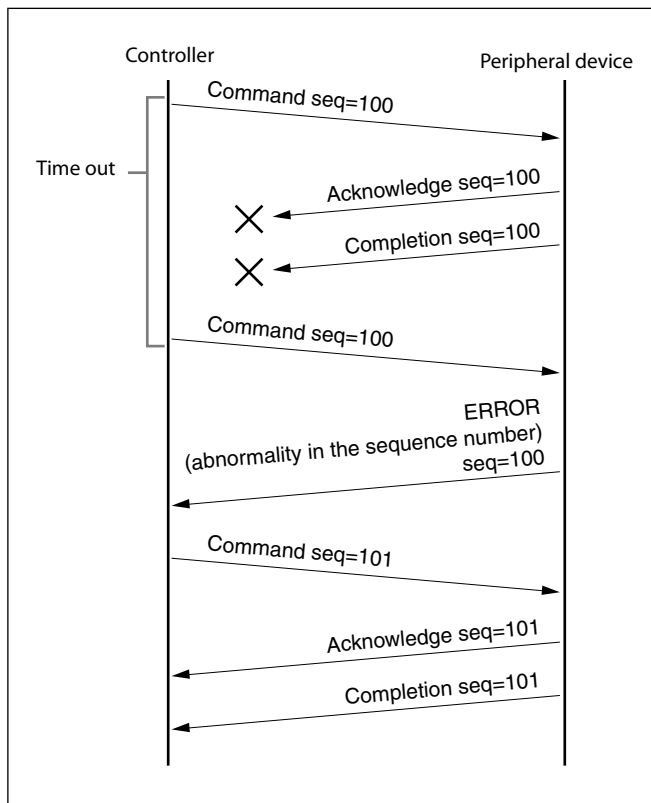

Timing chart (loss of Acknowledge or completion message)

# IP Related Setting Command

The following commands are provided for setting the IP address and name of this unit.

No.	Name	Description
1	Setting Protocol: Inquiry	The controller inquires the network setting for the camera.
2	Setting Protocol: Inquiry reply	The camera replies according to the inquiry from the controller.
3	Setting Protocol: Network setting	The controller sets the network setting of the camera.
4	Setting Protocol: Network setting reply	The camera replies according to the network setting of the controller.

The network setting of the IP card is performed as communication sequence in the following.

## 1 Inquiry

The controller sends the inquiry packet to the broadcast address (255.255.255.255), specified port number (52380) of UDP. The IP card replies as the inquiry reply packet.

## 2 Network setting

The controller sends the network setting packet to the broadcast address (255.255.255.255), specified port number (52380) of UDP. The receiving side sees the MAC address unit in the packet, and returns Acknowledge as the network setting reply if it is the request for the receiving side.

### Note

This camera requires up to 30 sec. to reflect the settings, after sending the network setting responses. Make sure to send the next network setting command after 30 sec. passes. If this camera receives network command during this 30 sec from controller, this camera returns the setting response data with NAK set.

Command	Data
Inquiry	02 ENQ:network 1)
UDP	FF
Broadcast address (255.255.255.255)	03
Specified port number (52380)	
Inquiry reply	02 MAC:**_**_**_**_** 1) FF
UDP	FF
Broadcast address (255.255.255.255)	MODEL:IPCARD 1) FF
Specified port number (52380)	SOFTVERSION:**.**.** 1) FF
	IPADR:**.**.**.** 1) FF
	MASK:**.**.**.** 1) FF
	GATEWAY:**.**.**.** 1) FF
	NAME:xxxxxxx 1) FF
	WRITE:on 1) FF
	03
Network setting	02 MAC:**_**_**_**_** 1) FF
UDP	FF
Broadcast address (255.255.255.255)	IPADR:**.**.**.** 1) FF
Specified port number (52380)	MASK:**.**.**.** 1) FF
	GATEWAY:**.**.**.** 1) 4) FF 4)
	NAME:xxxxxxx 1) FF
	03
Network setting reply	02 ACK:**_**_**_**_** 2) “xxxx” 3) FF
UDP	03
Broadcast address (255.255.255.255)	
Specified port number (52380)	

1) Uses the ASCII code.

2) Uses the ASCII code. When the network setting has failed, returns as "NAK:\*\*\_\*\*\_\*\*\_\*\*\_\*\*".

3) Uses the ASCII code. Returns by adding the detail message, if necessary. There may not be it.

4) When GATEWAY is not used, sends as "GATEWAY:0.0.0.0 FF".

#### Note

A maximum of 8 characters including alphanumeric characters and blanks can be used for the name.

# SRG-360SHE/SRG-280SHE Commands

## Execution Command List (1/4)

Command Set	Command	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel	—	8x 2p FF	p: Socket No. (=1or2)
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	Zoom Control
	Tele (Standard)	8x 01 04 07 02 FF	
	Wide (Standard)	8x 01 04 07 03 FF	
	Tele (Variable)	8x 01 04 07 2p FF	p=0 (Low) to 7 (High)
	Wide (Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_DZoom	On	8x 01 04 06 02 FF	Digital zoom ON/OFF <sup>5)</sup>
	Off	8x 01 04 06 03 FF	
CAM_Focus	Stop	8x 01 04 08 00 FF	Focus Control
	Far (Standard)	8x 01 04 08 02 FF	
	Near (Standard)	8x 01 04 08 03 FF	
	Far (Variable)	8x 01 04 08 2p FF	p=0 (Low) to 7 (High)
	Near (Variable)	8x 01 04 08 3p FF	
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs: Focus Position
	Auto Focus	8x 01 04 38 02 FF	AF ON/OFF
	Manual Focus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 38 10 FF	
	One Push Trigger	8x 01 04 18 01 FF	One Push AF Trigger
	Infinity	8x 01 04 18 02 FF	Forced infinity
	Near Limit	8x 01 04 28 0p 0q 0r 0s FF	pqrs: Focus Near Limit Position
AF Sensitivity	Normal	8x 01 04 58 02 FF	AF Sensitivity High/Low
	Low	8x 01 04 58 03 FF	
CAM_AFMode	Normal AF	8x 01 04 57 00 FF	AF Movement Mode
	Interval AF	8x 01 04 57 01 FF	
	Zoom Trigger AF	8x 01 04 57 02 FF	
	Active/Interval Time	8x 01 04 27 0p 0q 0r 0s FF	pq: Movement Time, rs: Interval
CAM_IRCorrection	Standard	8x 01 04 11 00 FF	FOCUS IR Correction setting
	IR Light	8x 01 04 11 01 FF	
CAM_ZoomFocus	Direct	8x 01 04 47 0p 0q 0r 0s	pqrs: Zoom Position
		0t 0u 0v 0w FF	tuvw: Focus Position
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor	8x 01 04 35 01 FF	Indoor mode
	Outdoor	8x 01 04 35 02 FF	Out door mode
	One Push WB	8x 01 04 35 03 FF	One Push WB mode
	ATW	8x 01 04 35 04 FF	Auto Tracing White Balance
	Manual	8x 01 04 35 05 FF	Manual Control Mode
	One Push Trigger <sup>1)</sup>	8x 01 04 10 05 FF	One Push WB Trigger
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual Control of R Gain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_BGain	Reset	8x 01 04 04 00 FF	Manual Control of B Gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain

## Execution Command List (2/4)

Command Set	Command	Command Packet	Comments
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter priority Exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris priority Exposure mode
	Bright <sup>2)</sup>	8x 01 04 39 0D FF	Bright Mode(Manual control)
CAM_SlowShutter	Auto	8x 01 04 5A 02 FF	Auto Slow Shutter ON/OFF
	Manual	8x 01 04 5A 03 FF	
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq: Iris Position
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Direct	8x 01 04 4C 00 00 0p 0q FF	pq: Gain Position
	AE Gain Limit	8x 01 04 2C 0p FF	p: Gain Position (4 to F)
CAM_Bright	Up	8x 01 04 0D 02 FF	—
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 4D 00 00 0p 0q FF	pq: Bright Position
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation ON/OFF
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	Exposure Comp Amount Setting
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position
CAM_BackLight	On	8x 01 04 33 02 FF	Back Light Comp ON/OFF
	Off	8x 01 04 33 03 FF	
CAM_WD	Off	8x 01 7E 04 00 00 FF	Wide Dynamic Range Mode
	Low	8x 01 7E 04 00 01 FF	
	Mid	8x 01 7E 04 00 02 FF	
	High	8x 01 7E 04 00 03 FF	
CAM_Defog	On	8x 01 04 37 02 00 FF	Defog Mode
	Off	8x 01 04 37 03 00 FF	
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Setting
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_HR	On	8x 01 04 52 02 FF	High-Resolution Mode ON/OFF
	Off	8x 01 04 52 03 FF	
CAM_NR	—	8x 01 04 53 0p FF	p: NR Setting (0:OFF, Level1 to 5)
CAM_Gamma	—	8x 01 04 5B 0p FF	p: Gamma setting 0: Standard 1: OFF
CAM_HighSensitivity	On	8x 01 04 5E 02 FF	High Sensitivity mode ON/OFF
	Off	8x 01 04 5E 03 FF	
CAM_PictureEffect	Off	8x 01 04 63 00 FF	Picture Effect Setting
	Neg.Art	8x 01 04 63 02 FF	
	B&W	8x 01 04 63 04 FF	

## Execution Command List (3/4)

Command Set	Command	Command Packet	Comments	
CAM_ICR	On	8x 01 04 01 02 FF	Infrared Mode ON/OFF	
	Off	8x 01 04 01 03 FF		
CAM_AutoICR	On	8x 01 04 51 02 FF	Auto Infrared mode ON/OFF	
	Off	8x 01 04 51 03 FF		
	Threshold	8x 01 04 21 00 00 0p 0q FF	pq: ICR ON→OFF threshold level	
CAM_Stabilizer	On	8x 01 04 34 02 FF	Stabilizer ON/OFF <sup>5)</sup>	
	Off	8x 01 04 34 03 FF		
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	p: Memory number (=0 to F)	
	Set	8x 01 04 3F 01 0p FF		
	Recall	8x 01 04 3F 02 0p FF		
CAM_IDWrite	—	8x 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)	
CAM_ChromaSuppress	—	8x 01 04 5F pp FF	pp: Chroma Suppress setting level 00: OFF 1 to 3: ON (3 levels). Effect increases as the level number increases.	
CAM_ColorGain	Direct	8x 01 04 49 00 00 0p 0q FF	p: Color specification q: Gain setting level The range of p is from 0 to 6. 0 : master, 1 : magenta, 2 : red, 3 : yellow, 4 : green, 5 : cyan, 6 : blue The range of q is from 0 to E. The initial value is 4. Gain Up with 5 or more, Gain Down with 3 or less.	
CAM_ColorHue	Direct	8x 01 04 4F 00 00 0p 0q FF	p: Color specification q: Phase setting level The range of p is from 0 to 6. 0 : master, 1 : magenta, 2 : red, 3 : yellow, 4 : green, 5 : cyan, 6 : blue The q is setting level of phase and the range is from 0 to E. The initial value is 7. Phase (+ direction) with 8 or more, Phase (- direction) with 6 or less.	
SYS_Menu	Off	8x 01 06 06 03 FF	Erasing menu display	
Video Format Change <sup>4)</sup> (Video System Rotary Switch 7: only VISCA Control enabled)	—	8x 01 7E 01 1E 0p 0q FF	pq	
			0	1920 × 1080p/59.94
			2	1920 × 1080p/29.97
			3	1920 × 1080i/59.94
			4	1280 × 720p/59.94
			5	1280 × 720p/29.97
			8	1920 × 1080p/50
			A	1920 × 1080p/25
			B	1920 × 1080i/50
			C	1280 × 720p/50
			D	1280 × 720p/25

## Execution Command List (4/4)

Command Set	Command	Command Packet	Comments
Pan-tiltDrive	Up <sup>3)</sup>	8x 01 06 01 VV WW 03 01 FF	VV: Pan speed setting 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed setting 0x01 (low speed) to 0x18 (high speed) YYYYY: Pan Position EAC00 to 15400 (CENTER 00000) ZZZZZ: Tilt Position FC400 to 0B400 (Image Flip: OFF) (CENTER 00000) Tilt Position F4C00 to 03C00 (Image Flip: ON) (CENTER 00000)
	Down <sup>3)</sup>	8x 01 06 01 VV WW 03 02 FF	
	Left <sup>3)</sup>	8x 01 06 01 VV WW 01 03 FF	
	Right <sup>3)</sup>	8x 01 06 01 VV WW 02 03 FF	
	UpLeft <sup>3)</sup>	8x 01 06 01 VV WW 01 01 FF	
	UpRight <sup>3)</sup>	8x 01 06 01 VV WW 02 01 FF	
	DownLeft <sup>3)</sup>	8x 01 06 01 VV WW 01 02 FF	
	DownRight <sup>3)</sup>	8x 01 06 01 VV WW 02 02 FF	
	Stop <sup>3)</sup>	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition <sup>6)</sup>	8x 01 06 02 VV 00 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition <sup>6)</sup>	8x 01 06 03 VV 00 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan-tiltLimitSet	LimitSet <sup>6)</sup>	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight YYYYY: Pan Limit Position EAC01 to 15400 ZZZZZ: Tilt Limit Position FC401 to 0B400 (Image Flip: OFF) Tilt Limit Position F4C01 to 03C00 (Image Flip: ON) W: 0 DownLeft YYYYY: Pan Limit Position EAC00 to 153FF ZZZZZ: Tilt Limit Position FC400 to 0B3FF (Image Flip: OFF) Tilt Limit Position F4C00 to 03BFF (Image Flip: ON)
	LimitClear <sup>6)</sup>	8x 01 06 07 01 0W 07 0F 0F 0F 0F 07 0F 0F 0F FF	
Pan-tiltSet SlowPanTilt	On	8x 01 06 44 02 FF	Pan/Tilt Slow Mode On/Off
	Off	8x 01 06 44 03 FF	
Tally Lamp	ON	8x 01 7E 01 0A 00 02 FF	Tally lamp ON/OFF
	OFF	8x 01 7E 01 0A 00 03 FF	

- 1) After the ACK for One Push WB Trigger is issued, "Not Executable" is returned to all commands until the operation is completed.
- 2) Bright is set only in the mode of Full Auto or Shutter Priority.
- 3) Does not operate when the menu is displayed.
- 4) Do not turn off the power of this unit before the response to the command is returned.  
In case that the power is turned off, the image may not be output correctly.  
In such case, try to execute the operation using the different setting value once, and then execute the operation using the correct setting value.
- 5) Do not turn off the power of this unit before the response to the command is returned.  
In case that the power is turned off, the setting may not be reflected correctly.  
In such case, try to execute the operation using the different setting value once, and then execute the operation using the correct setting value.
- 6) To specify the position of pan/tilt, 15-byte message length data (17 bytes including header and terminator) is required.

## Inquiry Command List (1/2)

Inquiry Command	Command Packet	Inquiry Packet	Comments
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_DZoomModeInq	8x 09 04 06 FF	y0 50 02 FF <sup>1)</sup>	D-Zoom On
		y0 50 03 FF	D-Zoom Off
CAM_FocusModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_FocusNearLimitInq	8x 09 04 28 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Near Limit Position
CAM_AFSensitivityInq	8x 09 04 58 FF	y0 50 02 FF	AF Sensitivity Normal
		y0 50 03 FF	AF Sensitivity Low
CAM_AFModeInq	8x 09 04 57 FF	y0 50 00 FF	Normal AF
		y0 50 01 FF	Interval AF
		y0 50 02 FF	Zoom Trigger AF
CAM_AFTimeSettingInq	8x 09 04 27 FF	y0 50 0p 0q 0r 0s FF	pq: Movement Time, rs: Interval
CAM_IRCorrectionInq	8x 09 04 11 FF	y0 50 00 FF	Standard
		y0 50 01 FF	IR Light
CAM_WBModeInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	In Door
		y0 50 02 FF	Out Door
		y0 50 03 FF	One Push WB
		y0 50 04 FF	ATW
		y0 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModeInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority
		y0 50 0B FF	Iris Priority
		y0 50 0D FF	Bright
CAM_SlowShutterModeInq	8x 09 04 5A FF	y0 50 02 FF	Auto
		y0 50 03 FF	Manual
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_GainLimitInq	8x 09 04 2C FF	y0 50 0q FF	p: Gain Limit
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompModeInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BackLightModeInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_WDModeInq	8x 09 7E 04 00 FF	y0 50 00 FF	Wide Dynamic Range Mode
		y0 50 01 FF	00 FF : OFF
		y0 50 02 FF	01 FF : LOW
		y0 50 03 FF	02 FF : MID 03 FF : HIGH
CAM_DefogInq	8x 09 04 37 FF	y0 50 02 00 FF	Defog Mode On
		y0 50 03 00 FF	Defog Mode Off
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_HRModeInq	8x 09 04 52 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NRInq	8x 09 04 53 FF	y0 50 0p FF	p: NR Level
CAM_GammaInq	8x 09 04 5B FF	y0 50 0p FF	p: Gamma



## Inquiry Command List (2/2)

Inquiry Command	Command Packet	Inquiry Packet	Comments
CAM_HighSensitivityInq	8x 09 04 5E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureEffectModeInq	8x 09 04 63 FF	y0 50 00 FF	Off
		y0 50 02 FF	Neg.Art
		y0 50 04 FF	B&W
CAM_ICRModeInq	8x 09 04 01 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_AutoICRModeInq	8x 09 04 51 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_AutoICRThresholdInq	8x 09 04 21 FF	y0 50 00 00 0p 0q FF	pq: ICR ON→OFF Threshold level
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID
CAM_VersionInq	8x 09 00 02 FF	y0 50 00 01 mn pq rs tu vw FF	mnpq: Model ID (0604) SRG-360SHE mnpq: Model ID (0605) SRG-280SHE rstu: ROM version vw: Socket Number (=02) see page 19.
CAM_Stabilizer ModeInq	8x 09 04 34 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ChromaSuppressInq	8x 09 04 5F FF	y0 50 pp FF	pp: Chroma Suppress setting level
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: ColorGain setting 0h (60%) to Eh (200%)
CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	p: ColorHue setting 0h (−14 degrees) to Eh (+14 degrees)
SYS_MenuModeInq	8x 09 06 06 FF	y0 50 02 FF	ON
		y0 50 03 FF	OFF
Information Display	8x 09 7E 01 18 FF	y0 50 02 FF	ON
		y0 50 03 FF	OFF
VIDEO SystemInq	8x 09 06 23 FF	y0 50 00 FF	1920 × 1080p/59.94
		y0 50 02 FF	1920 × 1080p/29.97
		y0 50 03 FF	1920 × 1080i/59.94
		y0 50 04 FF	1280 × 720p/59.94
		y0 50 05 FF	1280 × 720p/29.97
		y0 50 08 FF	1920 × 1080p/50
		y0 50 0A FF	1920 × 1080p/25
		y0 50 0B FF	1920 × 1080i/50
		y0 50 0C FF	1280 × 720p/50
		y0 50 0D FF	1280 × 720p/25
SlowPanTiltInq	8x 09 06 44 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
Tally Lamp	8x 09 7E 01 0A FF	y0 50 02 FF	ON
		y0 50 03 FF	OFF
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	y0 50 ww zz FF	ww = Pan Max Speed zz = Tilt Max Speed
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0w 0z 0z 0z 0z 0z FF	wwwww = Pan Position zzzzz = Tilt Position
Pan-tiltModeInq	8x 09 06 10 FF	y0 50 pq rs FF	pqrs: Pan-tilt Status

# Block Inquiry Command List

## Lens Control System Inquiry Commands .....Command Packet 8x 09 7E 7E 00 FF

### Inquiry Packet

Byte	Bit	Comments	Byte	Bit	Comments	Byte	Bit	Comments
0	7	Destination Address	6	7	0	12	7	0
	6			6	0		6	0
	5			5	0		5	0
	4			4	0		4	0
	3	Source Address		3	Focus Near Limit (H)		3	0
	2			2			2	0
	1			1			1	0
	0			0			0	0
1	7	0 Completion Message (50h)	7	7	0	13	7	0
	6	1		6	0		6	0
	5	0		5	0		5	0
	4	1		4	0		4	AF Mode (0:Normal, 1:Interval, 2:Zoom Trigger)
	3	0		3	Focus Near Limit (L)		3	AF Sensitivity (1:Normal, 0:Low)
	2	0		2			2	Digital Zoom (1:On, 0:Off)
	1	0		1			1	Focus Mode (1:Auto, 0:Manual)
	0	0		0			0	
2	7	0	8	7	0	14	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	0		4	0		4	0
	3	Zoom Position (HH)		3	Focus Position (HH)		3	Low Contrast Detection (1:Yes, 0:No)
	2			2			2	Camera Memory Recall (1: Executing, 0: Stopped)
	1			1			1	Focus Command (1: Executing 0: Stopped)
	0			0			0	Zoom Command (1: Executing 0: Stopped)
3	7	0	9	7	0	15	7	1 Terminator (FFh)
	6	0		6	0		6	1
	5	0		5	0		5	1
	4	0		4	0		4	1
	3	Zoom Position (HL)		3	Focus Position (HL)		3	Focus Position (LH)
	2			2			2	
	1			1			1	
	0			0			0	
4	7	0	10	7	0	11	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	0		4	0		4	0
	3	Zoom Position (LH)		3	Focus Position (LL)			
	2			2			2	
	1			1			1	
	0			0			0	
5	7	0	11	7	0	11	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	0		4	0		4	0
	3	Zoom Position (LL)		3	Focus Position (LL)			
	2			2			2	
	1			1			1	
	0			0			0	

## Camera Control System Inquiry Commands .....Command Packet 8x 09 7E 7E 01 FF

### Inquiry Packet

Byte	Bit	Comments
0	7	Destination Address
	6	
	5	
	4	
	3	Source Address
	2	
	1	
	0	
1	7	0 Completion Message (50h)
	6	1
	5	0
	4	1
	3	0
	2	0
	1	0
	0	0
2	7	0
	6	0
	5	0
	4	0
	3	R Gain (H)
	2	
	1	
	0	
3	7	0
	6	0
	5	0
	4	0
	3	R Gain (L)
	2	
	1	
	0	
4	7	0
	6	0
	5	0
	4	0
	3	B Gain (H)
	2	
	1	
	0	
5	7	0
	6	0
	5	0
	4	0
	3	B Gain (L)
	2	
	1	
	0	

Byte	Bit	Comments
6	7	0
	6	0
	5	0
	4	0
	3	WB Mode
	2	
	1	
	0	
7	7	0
	6	0
	5	0
	4	0
	3	Aperture Gain
	2	
	1	
	0	
8	7	0
	6	0
	5	0
	4	Exposure Mode
	3	
	2	
	1	
	0	
9	7	0
	6	0
	5	HighResolution (1:On, 0:Off)
	4	Wide D (1: Other than Off, 0: Off)
	3	0
	2	Back Light (1:On, 0:Off)
	1	Exposure Comp. (1:On, 0:Off)
	0	Slow Shutter (1:Auto, 0:Manual)
10	7	0
	6	0
	5	0
	4	Shutter Position
	3	
	2	
	1	
	0	

Byte	Bit	Comments
11	7	0
	6	0
	5	0
	4	Iris Position
	3	
	2	
	1	
	0	
12	7	0
	6	0
	5	0
	4	0
	3	Gain Position
	2	
	1	
	0	
13	7	0
	6	0
	5	0
	4	Bright Position
	3	
	2	
	1	
	0	
14	7	0
	6	0
	5	0
	4	0
	3	Exposure Comp. Position
	2	
	1	
	0	
15	7	1 Terminator (FFh)
	6	1
	5	1
	4	1
	3	1
	2	1
	1	1
	0	1

## Other Inquiry Commands .....Command Packet 8x 09 7E 7E 02 FF

### Inquiry Packet

Byte	Bit	Comments	Byte	Bit	Comments	Byte	Bit	Comments
0	7	Destination Address	6	7	0	12	7	0
	6			6	0		6	0
	5			5	0		5	0
	4			4	0		4	1
	3	Source Address		3	0		3	0
	2			2	0		2	1
	1			1	0		1	1
	0			0	0		0	System (1:1/50, 1/25, 0:1/59.94, 1/29.97)
1	7	0 Completion Message (50h)	7	7	0	13	7	0
	6	1		6	0		6	0
	5	0		5	0		5	0
	4	1		4	0		4	0
	3	0		3	0		3	0
	2	0		2	0		2	0
	1	0		1	0		1	0
	0	0		0	0		0	0
2	7	0	8	7	0	14	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	0		4	0		4	0
	3	0		3	Camera ID (HH)		3	0
	2	Auto ICR (1:On, 0:Off)		2			2	0
	1	0		1			1	0
	0	Power (1:On, 0:Off)		0			0	0
3	7	0	9	7	0	15	7	1 Terminator (FFh)
	6	Stabilizer (1:On, 0:Off)		6	0		6	1
	5	Stabilizer Hold (1:Hold, 0:Off)		5	0		5	1
	4	ICR (1:On, 0:Off)		4	0		4	1
	3	0		3	Camera ID (HL)		3	1
	2	0		2			2	1
	1	0		1			1	1
	0	0		0			0	1
4	7	0	10	7	0	11	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	Reserved		4	0		4	0
	3	0		3	Camera ID (LH)		3	Camera ID (LL)
	2	0		2			2	
	1	0		1			1	
	0	0		0			0	
5	7	0	11	7	0	11	7	0
	6	0		6	0		6	0
	5	0		5	0		5	0
	4	0		4	0		4	0
	3	Picture Effect Mode		3	Camera ID (LL)		3	Camera ID (LL)
	2			2				
	1			1				
	0			0				

# Enlargement Function Query Command .....Command Packet 8x 09 7E 7E 03 FF

## Inquiry Packet

Byte	Bit	Comments	Byte	Bit	Comments	Byte	Bit	Comments	
0	7	Destination Address	6	7	0	12	7	0	
	6			6	0		6	0	
	5			5	0		5	0	
	4			4	0		4	0	
	3	Source Address		3	0		3	0	
	2			2	0		2	0	
	1			1	0		1	0	
	0			0	0		0	1	
1	7	0 Completion Message (50h)	7	7	0	13	7	0	
	6	1		6	0		6	Gamma	
	5	0		5	0		5		
	4	1		4	0		4		
	3	0		3	0		3	High Sensitivity mode (1: ON, 0: OFF)	
	2	0		2	0		2	NR Level	
	1	0		1	0		1		
	0	0		0	0		0		
2	7	0	8	7	0	14	7	0	
	6	0		6	0		6	Chroma Suppress	
	5	0		5	0		5		
	4	0		4	0		4		
	3	0		3	1		3	Gain Limit	
	2	0		2	0		2		
	1	0		1	0		1		
	0	0		0	0		0		
3	7	0	9	7	0	15	7	1 Terminator (FFh)	
	6	0		6	0		6	1	
	5	0		5	0		5	1	
	4	0		4	0		4	1	
	3	0		3	1		3	1	
	2	0		2	0		2	1	
	1	0		1	0		1	1	
	0	0		0	0		0	1	
4	7	0	10	7	0	11	7	0	
	6	0		6	0		6	Color Gain (Master)	
	5	0		5	0		5		
	4	0		4	0		4		
	3	0		3	0		3		
	2	0		2	0		2	1	
	1	0		1	0		1	1	
	0	0		0	0		0	1	
5	7	0	11	7	0		11	7	0
	6	0		6	Color Gain (Master)				
	5	0		5					
	4	0		4					
	3	0		3					
	2	0		2	1				
	1	0		1	1				
	0	0		0	1				

# VISCA Command Setting Values

## Exposure control (1/2)

		59.94/29.97 mode	50/25 mode
Shutter Speed	15	1/10000	1/10000
	14	1/6000	1/6000
	13	1/4000	1/3500
	12	1/3000	1/2500
	11	1/2000	1/1750
	10	1/1500	1/1250
	0F	1/1000	1/1000
	0E	1/725	1/600
	0D	1/500	1/425
	0C	1/350	1/300
	0B	1/250	1/215
	0A	1/180	1/150
	09	1/125	1/120
	08	1/100	1/100
	07	1/90	1/75
	06	1/60	1/50
	05	1/30	1/25
	04	1/15	1/12
	03	1/8	1/6
	02	1/4	1/3
	01	1/2	1/2
	00	1/1	1/1

Iris	11	F1.6
	10	F2
	0F	F2.4
	0E	F2.8
	0D	F3.4
	0C	F4
	0B	F4.8
	0A	F5.6
	09	F6.8
	08	F8
	07	F9.6
	06	F11
	05	F14
	00	CLOSE

Gain	0F	+43dB
	0E	+39dB
	0D	+36dB
	0C	+33dB
	0B	+30dB
	0A	+27dB
	09	+24dB
	08	+21dB
	07	+18dB
	06	+15dB
	05	+12dB
	04	+9dB
	03	+6dB
	02	+3dB
	01	0dB

Gain Limit	0F	+43dB
	0E	+39dB
	0D	+36dB
	0C	+33dB
	0B	+30dB
	0A	+27dB
	09	+24dB
	08	+21dB
	07	+18dB
	06	+15dB
	05	+12dB
	04	+9dB

## Exposure control (2/2)

		IRIS	GAIN
Bright	1F	F1.6	+43dB
	1E	F1.6	+39dB
	1D	F1.6	+36dB
	1C	F1.6	+33dB
	1B	F1.6	+30dB
	1A	F1.6	+27dB
	19	F1.6	+24dB
	18	F1.6	+21dB
	17	F1.6	+18dB
	16	F1.6	+15dB
	15	F1.6	+12dB
	14	F1.6	+9dB
	13	F1.6	+6dB
	12	F1.6	+3dB
	11	F1.6	0dB
	10	F2	0dB
	0F	F2.4	0dB
	0E	F2.8	0dB
	0D	F3.4	0dB
	0C	F4	0dB
	0B	F4.8	0dB
	0A	F5.6	0dB
	09	F6.8	0dB
	08	F8	0dB
	07	F9.6	0dB
	06	F11	0dB
	05	F14	0dB
	00	CLOSE	0

		Display	Compensation Amount
Exposure Comp.	0E	+7	+10.5dB
	0D	+6	+9dB
	0C	+5	+7.5dB
	0B	+4	+6dB
	0A	+3	+4.5dB
	09	+2	+3dB
	08	+1	+1.5dB
	07	0	0dB
	06	-1	-1.5dB
	05	-2	-3dB
	04	-3	-4.5dB
	03	-4	-6dB
	02	-5	-7.5dB
	01	-6	-9dB
	00	-7	-10.5dB

## Optical Zoom Ratio and Zoom Position (for SRG-360SHE reference)

Zoom Position: 0000 (Wide end) to 4000 (Tele end)

Optical Zoom Ratio	Optical Zoom Position Data
×1	0000
×2	16A1
×3	2063
×4	2628
×5	2A1D
×6	2D13
×7	2F6D
×8	3161
×9	330D
×10	3486
×11	35D7
×12	3709
×13	3820
×14	3920
×15	3A0A
×16	3ADD
×17	3B9C
×18	3C46
×19	3CDC
×20	3D60
×21	3DD4
×22	3E39
×23	3E90
×24	3EDC
×25	3F1E
×26	3F57
×27	3F8A
×28	3FB6
×29	3FDC
×30	4000

**Optical Zoom Ratio and Zoom Position  
(for SRG-280SHE reference)**

Zoom Position: 0000 (Wide) to 4000 (Tele)

Optical Zoom Ratio	Optical Zoom Position Data
×1	0000
×2	16DD
×3	20B9
×4	268D
×5	2A8D
×6	2D8B
×7	2FEB
×8	31E4
×9	3395
×10	3512
×11	3666
×12	379B
×13	38B5
×14	39B8
×15	3AA4
×16	3B7A
×17	3C3B
×18	3CE6
×19	3D7E
×20	3E03
×21	3E78
×22	3EDF
×23	3F36
×24	3F83
×25	3FC6
×26	4000

**Digital Zoom**

Digital Zoom Ratio	Digital Zoom Position Data
×1	4000
×2	6000
×3	6A80
×4	7000
×5	7300
×6	7540
×7	76C0
×8	7800
×9	78C0
×10	7980
×11	7A00
×12	7AC0

**Focus NEAR limit and focus distance**

Focus position: 1000 (Far end) to F000 (Near end)

NEAR Limit	Focus Distance
1000	Over Inf
2000	20m
3000	10m
4000	6m
5000	4.2m
6000	3.1m
7000	2.5m
8000	2m
9000	1.65m
A000	1.4m
B000	1.2m
C000	80cm
D000	30cm
E000	11cm
F000	1cm

**Lens control**

Zoom Position	0000 to 4000 to 7AC0 Wide end Optical Digital Tele end Tele end	
Focus Position	1000 to F000 Far end Near end	
Focus Near Limit	1000: Over Inf	As the distance on the left will differ due to temperature characteristics, etc., use as approximate values. *The lower 1 byte is fixed at 00.
	2000: 20 m	
	3000: 10 m	
	4000: 6 m	
	5000: 4.2 m	
	6000: 3.1 m	
	7000: 2.5 m	
	8000: 2.0 m	
	9000: 1.65 m	
	A000: 1.4 m	
	B000: 1.2 m	
	C000: 0.8 m	
	D000: 30 cm (initial setting)	
	E000: 11 cm	
	F000: 1 cm	



## Others

AF Active Time <sup>1)</sup>	00	to	FF
AF Interval Time <sup>1)</sup>	00	to	FF
R Gain	00	to	FF
B Gain	00	to	FF
Aperture Level	00	to	0F
AE Response	01	to	30
AutoICR ON → OFF Threshold Level	00	to	1C
Chroma Suppress setting level	00	to	03
Color Gain setting level	00	to	0E
Color Hue setting level	00	to	0E

<sup>1)</sup> Unit: One second

## Pan/Tilt Speed (Pan/Tilt Slow Mode= Off)

Parameter	Speed (deg/sec)	
	Pan	Tilt
01h	0.30	0.30
02h	0.40	0.40
03h	0.50	0.50
04h	0.60	0.60
05h	0.70	0.70
06h	0.90	0.90
07h	1.2	1.2
08h	1.5	1.5
09h	1.9	1.9
0Ah	2.4	2.4
0Bh	3.0	3.0
0Ch	3.6	3.8
0Dh	4.2	4.7
0Eh	6.6	5.9
0Fh	7.8	7.5
10h	8.9	8.9
11h	13	12
12h	16	15
13h	20	19
14h	24	24
15h	30	30
16h	38	38
17h	47	47
18h	60	60

## Pan/Tilt Speed (Pan/Tilt Slow Mode= On)

Parameter	Speed (deg/sec)	
	Pan	Tilt
01h	0.30	0.30
02h	0.50	0.50
03h	0.70	0.70
04h	0.80	0.80
05h	0.90	0.90
06h	1.0	1.0
07h	1.1	1.1
08h	1.3	1.3
09h	1.6	1.6
0Ah	2.0	2.0
0Bh	2.5	2.5
0Ch	3.1	3.1
0Dh	3.6	3.7
0Eh	4.2	4.8
0Fh	6.6	5.7
10h	7.7	7.3
11h	9.0	9.0
12h	13	12
13h	14	14
14h	17	17
15h	21	22
16h	26	26
17h	32	32
18h	40	40

## Pan/Tilt Status Code List

P	Q	R	S	
----	----	0---	---1	A Pan movement all the way to the left
----	----	0---	--1-	A Pan movement all the way to the right
----	----	0---	-1--	A Tilt movement all the way up
----	----	0---	1---	A Tilt movement all the way down
----	----	--00	----	Pan movement is correct
----	----	--01	----	Abnormal pan position detected
----	--00	0---	----	The Tilt movement is correct
----	--01	0---	----	Abnormal tilt position detected
----	00--	0---	----	No move request received
----	01--	0---	----	In the midst of a Pan/Tilt
----	10--	0---	----	Pan/Tilt completed
----	11--	0---	----	Pan/Tilt failed
--00	----	0---	----	Not initialized
--01	----	0---	----	Initializing
--10	----	0---	----	Initialization completed
--11	----	0---	----	Initialization failed

( - : optional)

## Pan/Tilt Position (for reference)

	Parameter (position)
PAN	EAC00 (-170 degree) to 15400 (+170 degree)
TILT	FC400 (-30 degree) to 0B400 (+90 degree) (Image Flip: OFF) F4C00 (-90 degree) to 03C00 (+30 degree) (Image Flip: ON)

## LED Status

	POWER (green)	NETWORK (green)
Normal operation	On	On
Power On	On	Off
Power Off	Off	Off
Hardware Error	Blinking	Blinking