

## Live-View Remote RM-LVR1 Compatibility Chart

FUNCTION		Model										
		FDR-X3000	HDR-AS300	FDR-X1000V	HDR-AS200V	HDR-AS50	HDR-AZ1	HDR-AS20	HDR-AS100V	HDR-AS30V	HDR-AS15	
Compatibility		○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○	○	○	○ <sup>*1</sup>	
Connection	Connection	○	○	○	○	○	○	○	○	○	○	
Shooting Mode	Movie	○	○	○	○	○	○	○	○	○	○	
	Photo	○	○	○	○	○	○	○	○	○	-	
	Interval Photo Recording	○	○	○	○	○	○	○	○	○	○	
Recording Start/Stop	Movie recording Start/Stop	○	○	○	○	○	○	○	○	○	○	
	Photo shooting	○	○	○	○	○	○	○	○	○	-	
	Interval photo recording Start/Stop	○	○	○	○	○	○	○	○	○	○	
Camera Settings	Camera Settings	SteadyShot Setting	-	-	○	○	○	-	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>
		Angle Setting	-	-	○	○	-	-	-	-	○ <sup>*3</sup>	○ <sup>*3</sup>
		Zooming	○	○	-	-	○	-	-	-	-	-
	Image Quality Settings	PS	○	○	○	○	○	○	○	○	○	○
		HQ	○	○	○	○	○	○	○	○	○	○
		STD	○	○	○	○	○	○	○	○	○	○
		VGA	-	-	-	-	-	○	○	○	○	○
		SLOW	-	-	-	-	-	-	○ <sup>*2</sup>	-	○ <sup>*2</sup>	○
		SSLOW	-	-	○	○	-	○	○ <sup>*2</sup>	○	○ <sup>*2</sup>	○
		HS120/HS100	○	○	○	○	○	○	-	○ <sup>*3</sup>	-	-
		HS240/HS200	○	○	○	○	-	-	-	○ <sup>*3</sup>	-	-
		HD 60p 50M/HD 50p 50M	○	○	○	○	○	-	-	○ <sup>*3</sup>	-	-
		HD 30p 50M/HD 25p 50M	○	○	○	○	○	-	-	○ <sup>*3</sup>	-	-
HD 24p 50M	○ <sup>*2</sup>	○ <sup>*2</sup>	○ <sup>*2</sup>	○ <sup>*2</sup>	○ <sup>*2</sup>	-	-	○ <sup>*2*3</sup>	-	-		
Other Functions	Live-View Display	○	○	○	○	○	○	○	○	○	○	
	Multi camera control	○	○	○	○	○	○	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*1*3</sup>	-	
	Memory card warning indicator	○	○	○	○	○	○	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*1*3</sup>	-	
	Automatic camera date setting	-	-	-	-	-	○	-	-	-	-	

\*1 It is supported by updating the camera system software Ver.3.00 or later.

\*2 Applicable only when in NTSC mode, not in PAL mode.

\*3 It is supported by RM-LVR1 system software Ver.2.00 or later.