

SONY

Network Video Management System
Smart Client 2016 R3

User Manual

Contents

Copyright, trademarks and disclaimer.....	9
Target audience for this manual.....	10
Surveillance system differences.....	11
Minimum system requirements	12
Welcome	13
Get help.....	13
Get started with Network Video Management System Smart Client	14
Install Network Video Management System Smart Client....	14
Install from the management server	14
Install from a DVD	14
The login process	15
About the Login window	15
About login authorization	16
Log in and out.....	16
Troubleshooting	17
Get to know your Sony - Network Video Management System Smart Client	19
About modes in Network Video Management System Smart Client.....	19
Using the advanced workspace.....	20
Using the simplified workspace	23
The Live tab.....	25
The Playback tab	28
Setup mode	30

- The camera toolbar..... 31
- The System Monitor tab..... 31
- Configuring your Network Video Management System Smart Client..... 32**
 - Application options..... 32
 - Panes options 35
 - Functions options 35
 - Timeline options 36
 - Export options 36
 - Keyboard options..... 37
 - Joystick options..... 38
 - Alarm options 39
 - Advanced options 39
 - Language options 42
- Interacting with Network Video Management System Smart Client..... 42**
 - User rights determine the way you work..... 42
 - About live video..... 43
 - Manual recording of video 44
 - About recorded video 44
 - Enter setup mode 46
 - Select a view 46
 - View in full screen 46
 - Copy single images..... 47
 - Keyboard shortcuts 47
 - Digital zoom, pan-tilt-zoom, and fisheye lens images..... 49**
 - Digital zoom 49
 - PTZ and fisheye lens images..... 51
 - Manually activate output 57
- Observe and communicate 58**

- About views..... 58**
 - Create and manage views..... 59
 - Views and view groups 60
 - Create a view group..... 61
 - Create a view..... 61
 - Copy, rename, or delete a view or group 62
 - Assign a shortcut number to a view..... 63
 - Privacy masks..... 63

- Add content to views 64**
 - Search for views and cameras 64
 - Add a camera to a view 64
 - Add an HTML page to a view or a Smart Wall..... 65
 - Display an image on a Smart Wall 67
 - Add an overlay button to a view 68
 - Add text to a view item or a Smart Wall 69
 - Send video between views..... 70
 - Change cameras in views 70
 - Swap cameras 71
 - Use an HTML page for navigation 71
 - Frequently asked questions: views 75

- Carousels..... 76**
 - About carousels..... 76
 - Add a carousel to a view or a Smart Wall..... 76
 - Carousel settings..... 77

- Hotspots 77**
 - About hotspots 77
 - Add a hotspot to a view or a Smart Wall 78
 - Hotspot settings 78

- Cameras 78**

Add a camera to a view	78
Camera names and colored indicators	79
Virtual joystick and PTZ overlay button	80
Camera settings.....	80
Frequently asked questions: cameras.....	87
The camera navigator.....	88
About the camera navigator	88
Camera navigator settings.....	89
Add a camera navigator to a view or a Smart Wall	90
Audio.....	91
About audio	91
Audio settings.....	91
Talk to an audience.....	92
Frequently asked questions: audio	93
Maps.....	94
Introduction to maps.....	94
Map settings	97
The toolbox.....	99
The right-click menu.....	99
The Map Overview window	100
Frequently asked questions: maps.....	100
Matrix.....	107
About Matrix.....	107
Settings	107
Add Matrix content to a view	108
Manually send video to a Matrix recipient.....	108
Multiple windows	108
Send a view between displays	110
Frequently asked questions: multiple windows	111

- Investigate and document 112**
 - Search recorded video 112**
 - View recorded video using independent playback 112**
 - View exported video 113**
 - Searching video using Sequence Explorer 114**
 - Sequence Search 114**
 - Search for sequences..... 115**
 - Define search..... 116**
 - The timeline..... 116**
 - Navigating sequences..... 116**
 - Thumbnail overview navigation 118**
 - Searching for motion in recorded video 118**
 - Search for motion in recorded video in Network Video Management System Enterprise Edition 119**
 - Search using the Smart Search pane 121**
 - Adjust time 122**
 - About motion threshold 123**
 - Take a snapshot 123**
 - Time navigation controls 123**
 - The timeline buttons and controls 123**
 - The timeline..... 124**
 - Playback date and time 125**
 - Date and time navigation..... 125**
 - Time selection 125**
 - Playback Speed..... 125**
 - Playback buttons 125**
 - Navigation buttons 126**
 - Time span 126**

- Events and alarms 127**
 - Working with alarms 127
 - Events..... 129
- Exporting evidence 131**
 - About the settings in the Export window 131
 - Export a video clip, audio, Network Video Management System data or a still image..... 134
 - Export a storyboard 135
 - Export items directly from the Export window..... 135
 - Mask areas in a recording during export..... 136
 - Frequently asked questions: exporting 136
- Print evidence 137**
- Extend..... 139**
 - Network Video Management System Smart Wall 139**
 - About Network Video Management System Smart Wall 139
 - Viewing live or recorded content in Network Video Management System Smart Wall..... 140
 - Start working with a Smart Wall..... 142
 - Show video from a camera 142
 - Add or remove content on a Smart Wall 143
 - Display a list of alarms in a view or Smart Wall 147
 - Display an individual alarm on your Smart Wall 147
 - Send content from a view to a Smart Wall..... 153
 - Change the layout of a Smart Wall monitor 154
 - Troubleshooting a Smart Wall 155
 - Network Video Management System Smart Client – Player157**
 - About the Network Video Management System Smart Client – Player157
 - Quick guide to the Network Video Management System Smart Client – Player 157

- Work with views in the Network Video Management System Smart Client – Player 158**
- Open Database wizard 158**
- Scripting 159**
 - Startup scripting 159**
- Glossary of Terms 162**
- Index 167**

Copyright, trademarks and disclaimer

Copyright© 2016 Sony Corporation.

Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation. App Store is a service mark of Apple Inc. Android is a trademark of Google Inc.

All other trademarks mentioned in this document are trademarks of their respective owners.

Disclaimer

This text is intended for general information purposes only, and due care has been taken in its preparation.

Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty.

Sony Corporation reserve the right to make adjustments without prior notification.

All names of people and organizations used in the examples in this text are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

This product may make use of third party software for which specific terms and conditions may apply. When that is the case, you can find more information in the file **3rd_party_software_terms_and_conditions.txt** located in your surveillance system installation folder.

Target audience for this manual

The following documentation is aimed at users of Sony - Network Video Management System Smart Client and provides detailed descriptions of the Sony - Network Video Management System Smart Client installation, configuration and use. It also provides a number of targeted "how-to" examples, guiding users through completing common tasks in Sony - Network Video Management System Smart Client.

Depending on the type of Sony surveillance system you connect to, depending on your user rights, and depending on your role in your organization, some features in Sony - Network Video Management System Smart Client may not be available to you. Ask your system administrator if in doubt.

References made to the positioning of user interface elements presume that you are using a visual left-to-right interface. For some languages, you can change this to a visual right-to-left interface. If you set the interface to right-to-left, buttons, toolbars, and panes may be reversed compared to where its position is described in this documentation.

If you know that your surveillance system administrator has already configured the necessary views for you, you may skip parts of this manual. After installing and logging in to Sony - Network Video Management System Smart Client, you can proceed straight to this manual's chapters about viewing live and recorded video. Consult your surveillance system administrator if in doubt.

Surveillance system differences

Most of the features available in Sony - Network Video Management System Smart Client are available in all versions of the Network Video Management System products, but some features work differently depending on what Network Video Management System product you connect to. If in doubt, ask your surveillance system administrator about which type of Network Video Management System surveillance system you connect to. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

In general, Sony recommends that you always use the latest version of the Sony - Network Video Management System Smart Client to ensure that you have access to all the new features and functions included in your Network Video Management System surveillance system.

Minimum system requirements

For information about the **minimum** system requirements to the various components of your system, go to the Sony website <http://www.sony.net/CameraSystem/Product-info>.

To see which DirectX version you have installed:


- Click **Start**, select **Run...** and type **dxdiag**. When you click **OK**, the **DirectX Diagnostic Tool** window opens.

The version information is displayed near the bottom of its **System** tab. Should the server require a DirectX update, the latest versions of DirectX are available from the Microsoft website <http://www.microsoft.com/downloads>.

Welcome

Get help

- To access the Sony - Network Video Management System Smart Client help system, on the Sony - Network Video Management System Smart Client toolbar, click **Help** > **Help** or press F1 on your keyboard.

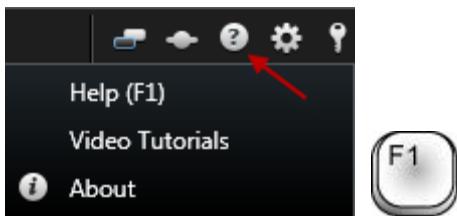

- To access online video tutorials in a browser window, on the Sony - Network Video Management System Smart Client toolbar, click **Help** > **Video Tutorials**.

The help system is context-sensitive, which means it automatically displays a help topic relevant to the area you are working with. Help topic texts may contain various types of links, notably expanding drop-down links that display detailed information when you click them.

Tip: If you want to quickly collapse all texts from expanding drop-down links in a help topic, click the title of the topic on the **Contents** tab.

When you print a help topic, the topic is printed as you see it on your screen. Therefore, if a topic contains expanding drop-down links, click each required drop-down link to display the text in order for it to be included in your printout. This allows you to create targeted printouts, containing exactly the amount of information you want.

Get started with Network Video Management System Smart Client

The topics in this section can help you become familiar with your Network Video Management System surveillance system. For example, you can find out how to configure Network Video Management System Smart Client to suit your needs, how to use the controls, and understand where to perform various tasks.

Install Network Video Management System Smart Client

You must install Network Video Management System Smart Client on your computer before you can use it. You download Network Video Management System Smart Client from the surveillance system server and install it on your computer or install directly from a DVD.

Install from the management server

Before you begin, visit the Sony website and verify that your computer meets the Network Video Management System Smart Client's minimum system requirements
<http://www.sony.net/CameraSystem/Product-info>.

1. Open Internet Explorer and connect to the management server using the URL or IP address of that server.
 - (<http://localhost/installation/admin>) or
 - IP address of the remote server (http://IP_address/installation/admin).
2. On the **Welcome** page, click **Language** and select the language you want to use.
3. The **Network Video Management System Smart Client setup** wizard starts. In the wizard, follow the installation instructions.

The wizard suggests an installation path. Normally, you can use the suggested installation path. However, if you have previously used add-on products, this path might not be valid anymore.

Install from a DVD

1. Verify that your computer meets the Network Video Management System Smart Client's minimum system requirements.
2. Insert the surveillance system software DVD, select the required language, and then click **Install Network Video Management System Smart Client**.
3. If you receive a security warning (**Do you want to run or save this file?, Do you want to run this software?** or similar), accept this (by clicking **Run** or similar—the exact name depends on your browser version).

4. The **Network Video Management System Smart Client installation** wizard starts. In the wizard, follow the installation instructions.

The login process

About the Login window

The first time you log in, you need to determine whether any views exist. Views determine how video is displayed and are required in order to be able to use the Sony - Network Video Management System Smart Client. One or more views may already have been created for you, or you may need to create views yourself. Read more about views—including how to determine if views have already been created for you—in Views (on page 21).

Your user settings (including views) are stored centrally on the surveillance system. This means that your login can be used on any computer that has a Sony - Network Video Management System Smart Client installed and that you can restore views from your last log-in.

If you encounter a second dialog during login, you need additional login authorization (see "About login authorization" on page 16) to get access to the Sony - Network Video Management System Smart Client.

Log-in settings

Name	Description
Computer	Select the computer running the surveillance system server.
Authentication	<p>There are three methods of authentication (the process that verifies that you are who you claim to be):</p> <p>Not all surveillance systems (see "Surveillance system differences" on page 11) support the use of all three authentication methods.</p> <ul style="list-style-type: none"> • Windows authentication (current user): you are authenticated through your current Windows login, and you do not have to specify any user name or password. This is the default authentication method. • Windows authentication: you are authenticated through your Windows login, but you need to enter your Windows user name and password. • Basic authentication: you need to be setup in the surveillance system with a user name and password.
User name	Only required if the authentication method Windows authentication or Basic authentication is selected. If using Windows authentication , type your Windows user name. If using Basic authentication , type the user name supplied by your surveillance system administrator. The user name is case-sensitive; there is a difference between typing, for example, "amanda" and "Amanda."

Password	Only required if the authentication method Windows authentication or Basic authentication is selected. If using Windows authentication , type your Windows password. If using Basic authentication , type the password supplied by your surveillance system administrator.
Remember password	Available when using Windows authentication or Basic authentication . Lets you store your password so you only need to click Connect the next time you log in. Security restrictions may apply. If in doubt, consult your surveillance system administrator.
Auto-login	Restores the default export settings assigned to your profile. If selected, you will automatically be logged in to the Sony - Network Video Management System Smart Client with your credentials from your last log-in, when you log in to Windows. If using Windows authentication , you must select Remember password for the auto-login feature to be available. Security restrictions may apply. If in doubt, consult your surveillance system administrator.

About login authorization

When you log into the Sony - Network Video Management System Smart Client, you may be asked for additional authorization of your login. You need your supervisor, system administrator or someone else who has the rights to authorize you to enter their credentials along with yours in the login form. After that, you are good to go.

If you do not know who can authorize you, ask your supervisor or system administrator.

Log in and out

1. Open Sony - Network Video Management System Smart Client.
2. Specify your login information, and click **Connect**. If a problem occurs during login, you may receive an error message (see "Troubleshooting" on page 17).
3. If you have logged in before, you can restore the views you last used. Depending on configuration, the Sony - Network Video Management System Smart Client may ask you if you want to restore the view(s) you last used. Your options are:
 - **Main view:** If you select this, the view you last used in the Sony - Network Video Management System Smart Client's main window is restored.
 - **Detached views:** Only available when connecting to selected Sony surveillance systems (see "Surveillance system differences" on page 11), and if you used views in detached windows (see "Multiple windows" on page 108) in your last login. Select this if you want to restore the views you last used in detached windows.
4. After a short wait, the Sony - Network Video Management System Smart Client window opens.

5. To log out of the Sony - Network Video Management System Smart Client, simply click the **Log Out** button in the Sony - Network Video Management System Smart Client title bar.



If you encounter a second dialog during login, you need additional login authorization (see "About login authorization" on page 16) to get access to the Sony - Network Video Management System Smart Client.

Troubleshooting

If a problem or other issue occurs during login to Sony - Network Video Management System Smart Client, you will see one of the following error messages:

Your user rights do not allow you to log in at this point in time. User rights may vary depending on time of day, day of week, etc...

Issue: You have tried to log in at a time when your user rights do not allow you to log in.

What to do: Wait until you are permitted to log in. Consult your surveillance system administrator if in doubt about your user rights.

You do not have access to any part of the application. Contact the system administrator.

Issue: You currently have no access rights to any part of the Sony - Network Video Management System Smart Client, and therefore you cannot log in.

What to do: Consult your surveillance system administrator, who will be able to change your access rights if required.

Authorization failed: You cannot authorize yourself.

Issue: You have entered your own credentials in the **Authorized by:** field. You cannot authorize yourself.

What to do: You must contact the person who has authorization rights. This could be your supervisor or your system administrator. This person must enter his or her credentials to authorize your login.

Authorization failed: You do not have permission to authorize.

Issue: You have tried to authorize a user but you do not have the rights to do so.

What to do: Ask your system administrator to check that you have the necessary rights to authorize other users or ask someone else with sufficient rights to authorize the user.

Failed to connect. Check the server address.

Issue: It was not possible to connect to the surveillance system server at the specified server address.

What to do: Verify that you have typed the correct server address. Note that the **http://** prefix as well as a port number is required as part of the server address (example:

http://123.123.123.123:80, where **:80** indicates the port number). Consult your surveillance system administrator if in doubt.

Failed to connect. Check the user name and password.

Issue: It was not possible to log in with the specified user name and/or password.

What to do: Verify that you have typed your user name correctly, then re-type your password to ensure it does not contain errors. User names as well as passwords are case sensitive (for example, there may be a difference between typing "Amanda" and "amanda").

Failed to connect. Maximum number of clients are already connected.

Issue: The maximum number of clients allowed to connect to the surveillance system server simultaneously has been reached.

What to do: Wait for a while before connecting again. If access to the surveillance system is urgent, contact your surveillance system administrator, who may be able to extend the number of simultaneously connected clients.

New Client available. Upgrade is recommended/required. The new version can be downloaded from.

Issue: A new version of the Sony - Network Video Management System Smart Client is available. This message is typically accompanied by information about whether an update is recommended or whether it is a requirement (for example because important new features will not work in your current Sony - Network Video Management System Smart Client version). The message will typically also contain information about where to download the new version from.

What to do: Follow the advice given in the message. Consult your surveillance system administrator if in doubt.

Application is not able to start, because two (or more) cameras are using the same name or ID...

This error message only appears in a very rare scenario, where a backed-up configuration from one surveillance system is mistakenly used without any modification on another surveillance system. This can cause different cameras to "fight" over the same identity, and that can in turn block your Sony - Network Video Management System Smart Client's access to the surveillance system. If you see such a message, you cannot correct the problem. Instead, contact your surveillance system administrator, who will be able to handle the issue.

Some messages will appear in an orange ribbon above your views:

You no longer have permission to do this

Occurs if your time-dependent user rights no longer allow you to do something that you have previously been able to do. This is because—when connected to certain types of surveillance system (see "Surveillance system differences" on page 11)—your user rights may vary depending on time of day, day of week, etc. Therefore, you may well be able to perform the action again at a later stage.

Due to system settings, your Sony - Network Video Management System Smart Client session will expire within the next [...]

Occurs if your current Sony - Network Video Management System Smart Client session is about to end. When connected to certain types of surveillance system (see "Surveillance system differences" on page 11), your rights to use the Sony - Network Video Management System Smart Client may depend on time of day, day of week, etc.

When that is the case, you will typically see this message a number of minutes or seconds before your session will be closed; the exact number of minutes/seconds is defined on the surveillance system server.

No user activity detected recently, your Sony - Network Video Management System Smart Client session will expire within the next [...]

Occurs if you have not used your Sony - Network Video Management System Smart Client for a while (the exact time is defined on the surveillance system server), in which case your Sony - Network Video Management System Smart Client session will be closed for security reasons.

When that is the case, this message will typically be presented a number of minutes or seconds before your session will be closed; the exact number of minutes/seconds is defined on the surveillance system server.

Get to know your Sony - Network Video Management System Smart Client


About modes in Network Video Management System Smart Client

Network Video Management System Smart Client has two modes:

- Simplified mode - only the **Live** and **Playback** tabs are available, and you can perform a limited set of tasks. For more information, see Using the simplified workspace (on page 23).
- Advanced mode - all features and tabs are available, and you can access the setup mode.

If you change the default mode through the **Toggle Mode** button, Network Video Management System Smart Client opens in the changed mode the next time you open the program.

Using the advanced workspace

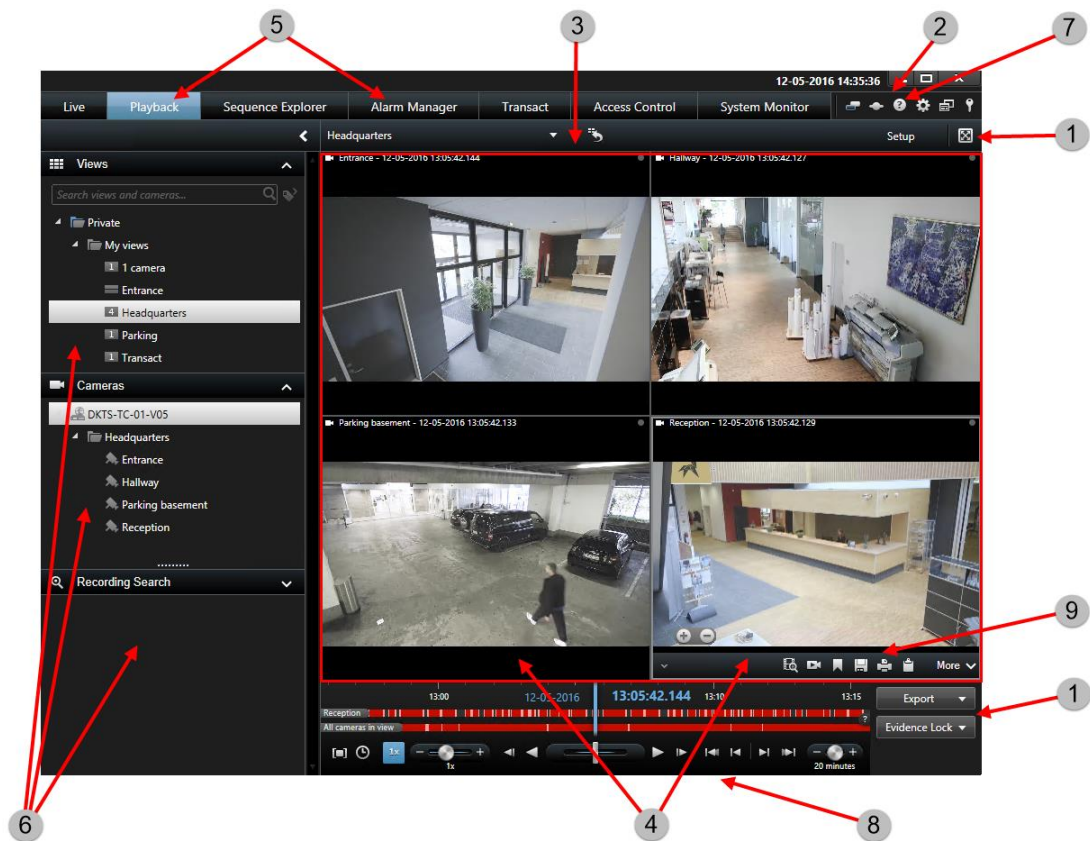

In the Sony - Network Video Management System Smart Client window (see "Using the advanced workspace" on page 20), you view live video on the **Live** tab of the Sony - Network Video Management System Smart Client, and recorded video on the **Playback** tab. When you select the **Live** tab, your Sony - Network Video Management System Smart Client connects to the surveillance system server, and displays live video from cameras in the selected view.


If your computer has more than one physical display attached, you can send individual views to separate windows (see "Multiple windows" on page 108) letting you watch more than one view at a time.

1	Task buttons	Read more (see "Task buttons" on page 22)
2	Application toolbar	
3	View	Read more (see "Views" on page 21)
4	View item	Read more (see "Views" on page 21)

1	Task buttons	Read more (see "Task buttons" on page 22)
5	Tabs	Read more (see "Tabs" on page 21)
6	Panes	Read more (see "Panes" on page 21)
7	Application buttons	Read more (see "Application buttons" on page 22)
8	Timeline	Read more (see "The timeline" on page 124)
9	The camera toolbar	Read more (see "The camera toolbar" on page 31)

Panes

Panes give you access to the majority of the Sony - Network Video Management System Smart Client features. The panes you see depend on your Sony - Network Video Management System Smart Client configuration and on your task.

Panes can be minimized to save space and to give a better overview of the panes you use. Click the **Minimize/expand** icon  on the title bar of the pane to minimize or expand it.

Tabs

The Sony - Network Video Management System Smart Client has the following main areas:

- The **Live** tab (on page 25) for viewing live video
- The **Playback** tab (on page 28) for viewing recorded video
- The **Sequence Explorer** tab (see "Searching video using Sequence Explorer" on page 114) for navigating video sequences
- The **Alarm Manager** tab for investigating incidents and alarms
- The **System Monitor** tab (on page 31) for viewing system information

If some of the tabs are unavailable, it is because you do not have the rights required to access all the areas.

Views

The way in which video is displayed in the Sony - Network Video Management System Smart Client is called a view. A view can contain video from up to 100 cameras, depending on your surveillance system. Your Sony - Network Video Management System Smart Client can handle an unlimited number of views, allowing you to switch between video from various groups of cameras. Each view's layout can be customized to fit its content. To help you maintain an overview, all views are

Network Video Management System Smart Client 2016 R3 - User Manual

placed in folders called **groups**. A group can contain any number of views and, if required, subgroups.

Views can be private or shared with other users.

In addition to video, views can display web pages and still images (for example, mugshots). For some surveillance systems, views can even display data from other applications (such as receipts from a cash register) alongside video.


Your user settings, including information about your views, are stored centrally on the surveillance system server, so you can use your views, private as well as shared, on any computer that has a Sony - Network Video Management System Smart Client installed, provided you log in with your own user name and password.




Example: Sony - Network Video Management System Smart Client displaying a view with video from four different cameras (a 2x2 view)

Task buttons

The task buttons are on the Sony - Network Video Management System Smart Client toolbar and to the right of the timeline. The task buttons available depend on the tab you are on. For example, **Setup** is not available on all tabs. These are the task buttons:

- **Setup**: click to enter setup mode (see "Enter setup mode" on page 46)
- **Export**: click to export video (see "Export a video clip, audio, Network Video Management System data or a still image" on page 134)
- **Toggle Full Screen Mode** : click to toggle between full screen (see "View in full screen" on page 46) and a smaller window that you can drag to the size you want.

Application buttons




With the application buttons in the toolbar, you can select basic Sony - Network Video Management System Smart Client actions:

- **Toggle Theme**: switch the Sony - Network Video Management System Smart Client theme to dark or light
- **Status**: access to the **Status** window
- **Help**: access the help system (see "Get help" on page 13), play online video tutorials or view version number and plug-in information

- **Options:** configure Sony - Network Video Management System Smart Client settings and behavior (see "Configuring your Network Video Management System Smart Client" on page 32), joysticks, keyboard shortcuts, and language
- **Toggle Mode:** switch between simplified mode and advanced mode (see "About modes in Network Video Management System Smart Client" on page 19).
- **Log Out:** log out (see "The login process" on page 15) of the Sony - Network Video Management System Smart Client


Using the simplified workspace

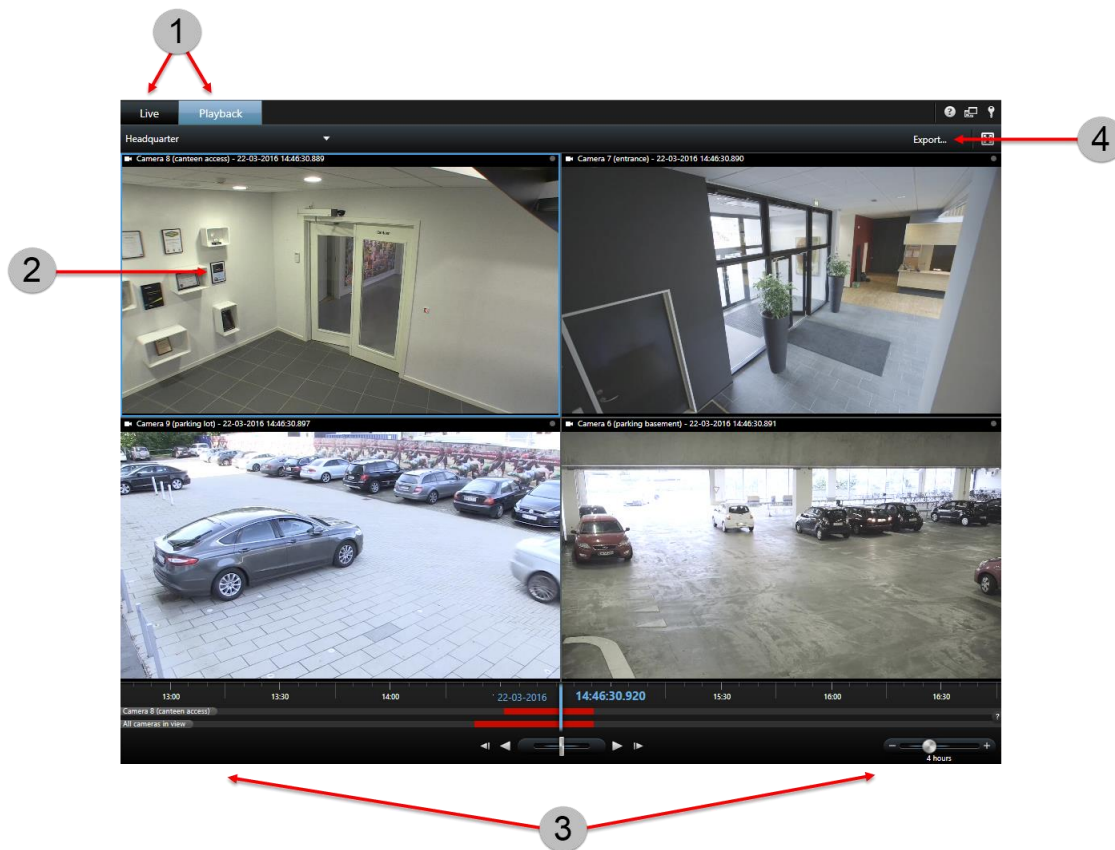


1	<p>View video</p> <p>View live video, or play back recorded video to investigate an incident. Select a different view to view video from another area or other content.</p>	<p>Read more (see "Changing views in simplified mode" on page 24)</p>
2	<p>Get a closer look</p> <p>Tap or double-click a video to view it in full-screen mode. Tap or double-click again to exit the full-screen mode.</p>	

1	<p>View video</p> <p>View live video, or play back recorded video to investigate an incident. Select a different view to view video from another area or other content.</p>	<p>Read more (see "Changing views in simplified mode" on page 24)</p>
2	<p>Get a closer look</p> <p>Tap or double-click a video to view it in full-screen mode. Tap or double-click again to exit the full-screen mode.</p>	
3	<p>Investigate recordings</p> <p>Play video forward or backward, zoom or scroll forward or backward in time, and adjust the timespan. You do this on the Playback tab.</p>	<p>Read more (see "Playback buttons" on page 125)</p>
4	<p>Create documentation</p> <p>Export a video clip or still image that shows what happened. You do this on the Playback tab.</p>	<p>Read more (see "Export video in simplified mode" on page 24)</p>

Changing views in simplified mode


You can select or search for existing views or cameras in the **Select view** list. However, to add or modify views, you need to switch to advanced mode through the  button.

If the  button is not available, you cannot switch to advanced mode. In that case, please contact your system administrator.


For more information, see About modes in Network Video Management System Smart Client (on page 19).

Export video in simplified mode

In the simplified mode, you can export video to document an incident.

Privacy mask, the media player format, and still images are features that are available only in advanced mode. Click the  button to switch to advanced mode.

1. Select the view containing the cameras that caught the incident.
2. On the **Playback** tab, to the right of the timeline, click the **Export** button. The **Export** panel appears. Only the camera in focus appears in the **Sources** list.

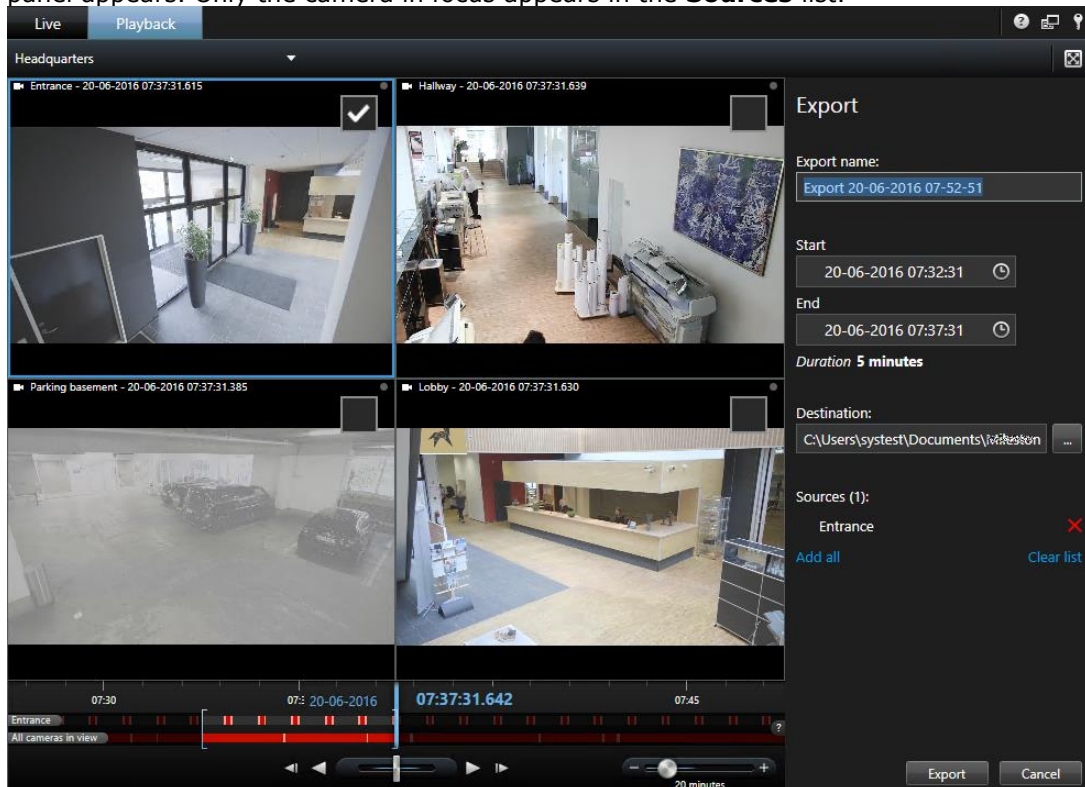

3. For each camera you want to include in the export, select the associated check box. If the same camera appears more than once in a view, automatically all of them are selected.
4. You can also include cameras from other views. If you change the view, you will not lose your export settings.
5. Specify the start and end time. You can also set the time interval in the timeline by dragging the square brackets to the left or right.
6. Click **Export**. The panel is closed, and a green status bar in the upper right corner indicates the progress of the export.
7. When the export is complete, you can click the **Details** button in the status bar to view the exported video.


If a plug-in that supports export is added to the export list, any related cameras are automatically included.

The Live tab

The **Live** tab provides numerous features for working with live video feeds, including audio (on page 91), carousels (on page 76), hotspots (on page 77), Matrix, camera shortcut menus, pan-tilt-zoom (PTZ (see "PTZ and fisheye lens images" on page 51)) control, digital zoom, events activation, output activation, quick playback, and more.

Network Video Management System Smart Client 2016 R3 - User Manual

Note: If you are using the Network Video Management System Smart Wall add-on, those features are available on the **Live** and **Playback** tabs. For more information, see About Network Video Management System Smart Wall.

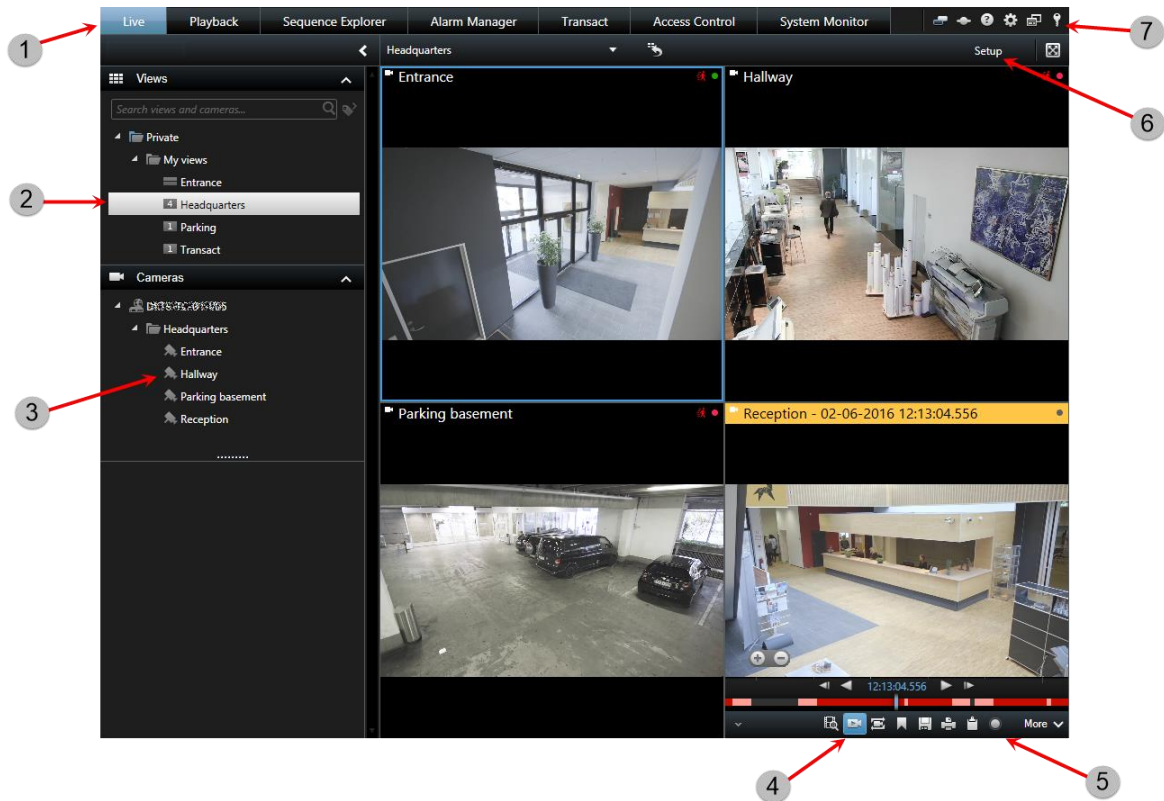

1	The different work areas	Read more (see "Tabs" on page 21)
2	Select a view	Read more (see "Select a view" on page 46)
3	Change cameras in views	Read more (see "Change cameras in views" on page 70)
4	View recorded video using independent playback	Read more (see "View recorded video using independent playback" on page 112)

5	The camera toolbar	Read more (see "The camera toolbar" on page 31)
6	Enter setup mode	Read more (see "Enter setup mode" on page 46)
7	Application buttons	Read more (see "Application buttons" on page 22)

Typical tasks from the Live tab

Send video between views (on page 70)

Take a snapshot (on page 123)

Copy single images (on page 47)


Record video (see "Manual recording of video" on page 44)

Use digital zoom (on page 49)

Create PTZ presets (see "Manage PTZ presets" on page 52)

The Playback tab

Note: If you are using the Network Video Management System Smart Wall add-on, those features are available on the **Live** and **Playback** tabs. For more information, see About Network Video Management System Smart Wall (on page 139).

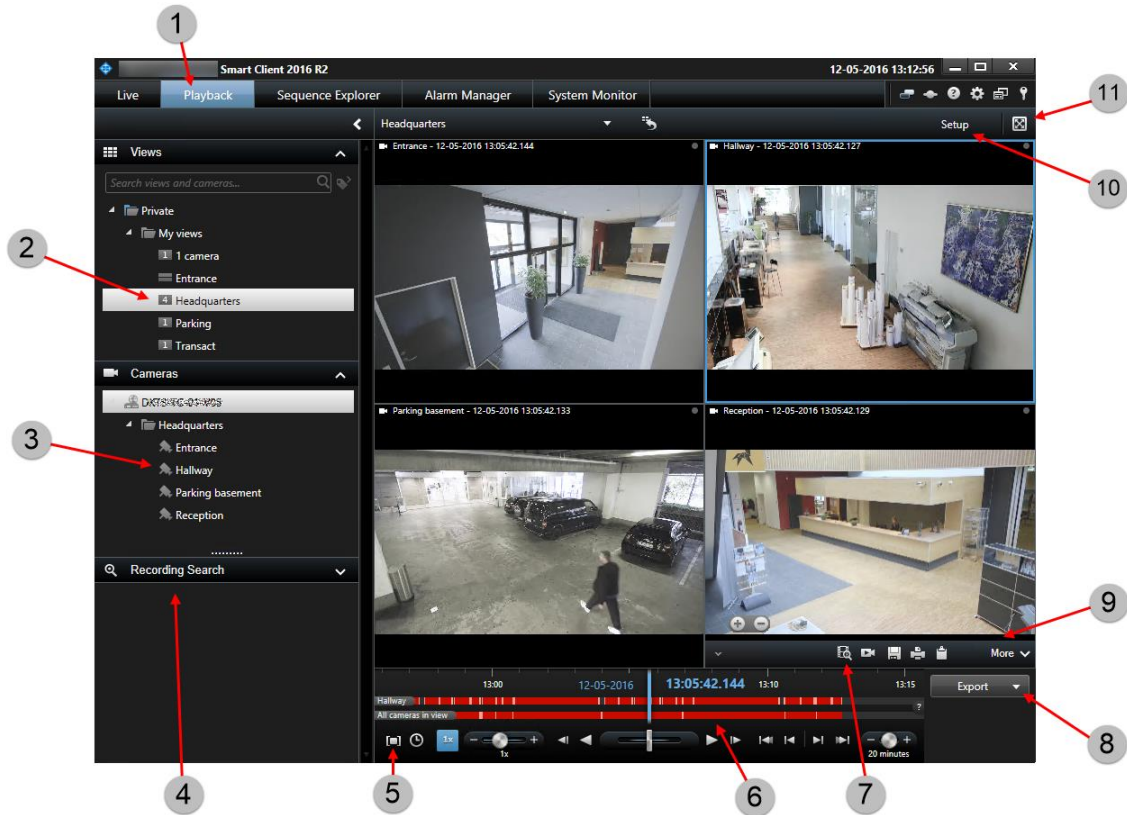

1	Playback tab	About recorded video (on page 44)
2	Views	Select a view (on page 46)
3	Cameras	Change cameras in views (on page 70)
4	Recording Search pane	
5	Time selection	Time selection (on page 125) for exporting video

6	The timeline	The timeline (on page 124)
7	Smart Search	Search using the Smart Search pane (on page 121)
8	Export	Export a video clip, audio, data or still image (see "Export a video clip, audio, Network Video Management System data or a still image" on page 134)
9	The camera toolbar	The camera toolbar (on page 31)
10	Setup	Enter setup mode (on page 46)
11	Full screen toggle	View in full screen (on page 46)

See also

View recorded video using independent playback (on page 112)

Print evidence (on page 137)

Search recorded video (on page 112)

Take a snapshot (on page 123)


Setup mode

Create a view (on page 61)

Add content to views (on page 64)

Keyboard shortcuts and overlay buttons (on page 86)

The Properties pane (see "Camera settings" on page 80)

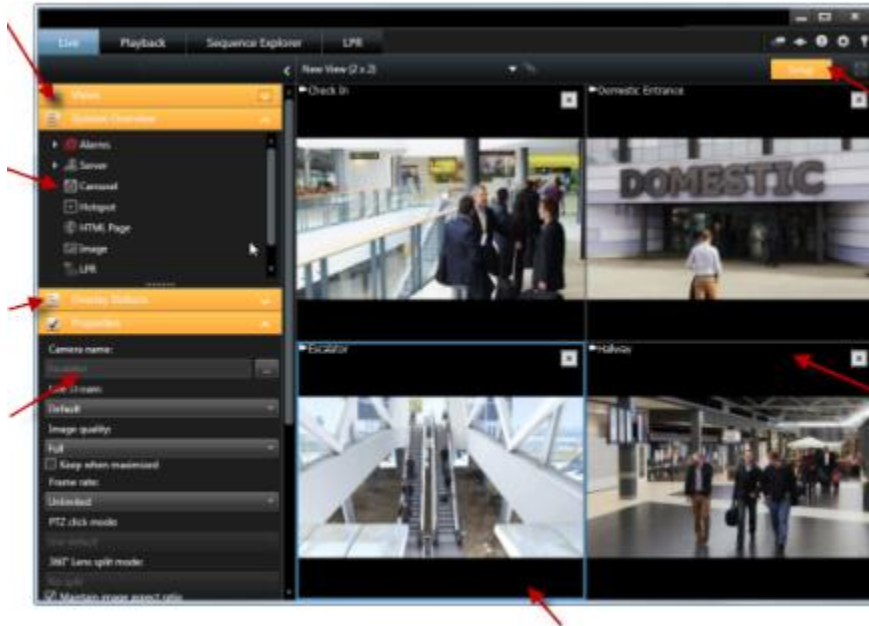

Exit setup mode (see "Enter setup mode" on page 46)

Add a camera to a view (on page 78)

Create and manage views (on page 59)

Typical tasks in setup mode

Add a map to a view

You can add existing maps or create new ones.

1. In setup mode, in the **System Overview** pane, drag the **Map** item to a position in the view.
2. In the **Map Setup** window that appears, select either **Create new map** or **Use existing map**.

A triangle next to a map name indicates that the map might have one or more sub-maps. Sub-maps and the elements they contain are also added.

3. In the **Name** field, enter a name for the map. The name will be displayed in the map position's title bar.

Tip: If you leave the **Name** field blank and click **Browse...**, the **Name** field displays the name of the image file you select.

4. Click **Browse...** to browse for the image file to use as a map.
5. Click **Open** to select image file.
6. Click **OK**.

Display a map on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display maps.

1. Follow the steps for adding a map to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the map to a tile in the overview.

Add the camera navigator to a view (see "Add a camera navigator to a view or a Smart Wall" on page 90)

Add Matrix content to a view (on page 108)

Add a Smart Wall to a view (see "Start working with a Smart Wall" on page 142)

Add content to views (on page 64)

The camera toolbar

Smart search (see "Searching for motion in recorded video" on page 118)

View recorded video using independent playback (on page 112)

Take a snapshot (on page 123)

Print evidence (on page 137)

Copy single images (on page 47)

Manual recording of video (on page 44)

Use digital zoom (on page 49)

Change cameras in views (on page 70)

Send video between views (on page 70)

The System Monitor tab

Use the <, >, and home icons to navigate the System Monitor.

System Monitor provides a visual overview of the current state of your system's servers and cameras through colored tiles that represent the system hardware. By default, Network Video Management System Smart Client can display tiles that represent **Recording servers, All servers** and **All cameras**. Your system administrator specifies the tiles you see in Network Video Management System Smart Client, and the values for each state.

The following table describes what the tile colors indicate.

Green	Normal state. Everything is running normally.
Yellow	Warning state. At least one monitoring parameter is above the defined value for the Normal state.
Red	Critical state. At least one monitoring parameter is above the defined value for the Normal and Warning state.

If a tile changes color and you want to identify the server or parameter that caused the change, click the tile. This opens an overview in the bottom of the screen which shows the colors red, yellow or green for each monitoring parameter you have enabled for your tile. Click the **Details** button for information about why the state changed.

If a tile displays a warning sign, a data collector for one of your monitored servers or cameras may not be running. If you place your mouse above the tile, the system shows you when it last collected data for the relevant tile.

Configuring your Network Video Management System Smart Client

The **Options** window lets you control which features and elements, for example, language selection, joystick setup and keyboard shortcut setup, you want to use on each of the Sony - Network Video Management System Smart Client tabs. For languages where you normally read and write from right to left, you can choose to enforce a visual left-to-right interface if needed.


Open the **Options** window by clicking the **Options** button in the application toolbar:



Application options

Application options let you customize the general behavior and look of your Sony - Network Video Management System Smart Client.

If available, the **Follow Server** column lets you specify that you want your Sony - Network Video Management System Smart Client to follow the server's recommended settings. Certain settings are server-controlled, in which case, configuration on the server decides whether you can override the settings.

Name	Description
<p>Application maximization</p>	<p>Select how the Sony - Network Video Management System Smart Client reacts when you maximize it by clicking the Maximize/Restore button in the application toolbar. If you select Maximize to full screen, the Sony - Network Video Management System Smart Client will cover any Windows task bar on your screen when maximized.</p>  <p>Maximization is not the same as full screen viewing (see "View in full screen" on page 46).</p>
<p>Camera error messages</p>	<p>Select how the Sony - Network Video Management System Smart Client displays camera-related message texts. These can be displayed as an overlay on top of the camera image or on a black background. You can also choose to hide such messages completely.</p>
<p>Server error messages</p>	<p>Select how the Sony - Network Video Management System Smart Client displays server-related message texts. These can be displayed as an overlay or hidden completely.</p>
<p>Default for video indicator</p>	<p>Select whether to show or hide the green video indicator on the camera title bar. Lights up when connection to the camera is established.</p> <p>You can override this setting on individual cameras by adjusting camera properties (see "Camera settings" on page 80) for the camera(s) in setup mode.</p>
<p>Default for camera title bar</p>	<p>Select whether to show or hide the camera title bar. The title bar displays the name of the camera and the colored indicators (see "Camera names and colored indicators" on page 79) signifying events, detected motion, and video.</p> <p>You can override this setting on individual cameras by adjusting camera properties (see "Camera settings" on page 80) for the camera(s) in setup mode.</p>
<p>Show current time in title bar</p>	<p>Select whether to show or hide the current time and date (of the computer running the Sony - Network Video Management System Smart Client) in the title bar.</p>
<p>Show in empty view positions</p>	<p>Select what to show if there are empty positions in views, for example, you can select a logo or have just a black background displayed.</p>
<p>View grid spacer</p>	<p>Select the thickness of the border between camera positions in views.</p>

Name	Description
Default image quality	<p>Select a default for the quality of video viewed in the Sony - Network Video Management System Smart Client. Note that image quality also affects bandwidth usage. If your Sony - Network Video Management System Smart Client is used over the internet, over a slow network connection, or if for other reasons you need to limit bandwidth use, image quality can be reduced on the server by selecting Low or Medium.</p> <p>You can override this setting on individual cameras by adjusting camera properties (see "Camera settings" on page 80) for the camera(s) in setup mode.</p>
Default frame rate	<p>Select a default frame rate for video viewed in the Sony - Network Video Management System Smart Client.</p> <p>You can override this setting on individual cameras by adjusting camera properties (see "Camera settings" on page 80) for the camera(s) in setup mode.</p>
PTZ click mode	<p>Select a default PTZ click mode for your PTZ cameras. Options are click-to-center or virtual joystick. You can override this setting on individual cameras by selecting a different default PTZ click mode for the camera.</p>
Start mode	<p>Select how the Sony - Network Video Management System Smart Client opens after you have logged in. Options are full-screen mode, window mode or your last used mode.</p>
Start view	<p>Select whether the Sony - Network Video Management System Smart Client displays a view immediately after you have logged in. Options are: the view you last used, no view, or that you decide after you have logged in.</p>
Hide mouse pointer	<p>Lets you select whether you want the mouse pointer to be hidden after a period of inactivity. You can specify how much time you want to elapse before hiding the mouse pointer. The default option is after 5 seconds. Options are:</p> <ul style="list-style-type: none"> • Never • After 5 seconds • After 10 seconds • After 20 seconds • After 30 seconds <p>If you move the mouse after a period of inactivity, it is enabled immediately.</p>
Snapshot	<p>Specify whether you want the snapshot feature to be available or unavailable. A snapshot is an instant capture of a frame of video from a camera at a given time.</p>
Path to snapshots	<p>Specify the path indicating where you want your snapshots to be saved to.</p>

Panes options

The **Panes** options let you specify whether you want a pane to appear on a particular tab.

Some panes may contain functionality which may not be available to you, either because of your user rights or the surveillance system (see "Surveillance system differences" on page 11) you are connected to.

The **Mode** column displays where the pane is available, the **Function** column lists the name of the pane, and the **Setting** column lets you specify whether you want the pane to be available or unavailable.

If available, the **Follow Server** column lets you specify that you want your Sony - Network Video Management System Smart Client to follow the server's recommended settings. Certain settings may already be server-controlled, in which case configuration on the server decides whether you can override the settings.

Functions options

The **Functions** options let you specify the functions (for example, playback on the **Live** tab) that you want to display on a particular Sony - Network Video Management System Smart Client tab.

The **Mode** column displays where the pane is available, the **Function** column displays the name of the function, and the **Setting** column lets you specify whether or not you want the pane to be available.

If available, the **Follow Server** column lets you specify that you want your Sony - Network Video Management System Smart Client to follow the server's recommended settings. Certain settings are server-controlled, in which case configuration on the server decides whether or not you can override the settings.

Functions:

Name	Description
Live > Camera playback	The ability to play back recorded video from individual cameras on the Live tab.
Live > Overlay buttons	The ability to view and use overlay buttons on the Live tab for activating speakers, events, output, moving PTZ cameras, clearing indicators from cameras, etc.
Live and Playback > Print	The ability to print from the Live and Playback tab. Note that enabling/disabling this option on the Playback tab will control whether or not the corresponding button is enabled on the Sequence Explorer tab.
Live and Playback > Bounding boxes	The ability to show bounding boxes on live video on the Live tab or on recorded video on the Playback tab on all cameras. Bounding boxes are used for, for example, tracking objects. The bounding box feature is only available if connected to certain surveillance systems (see "Surveillance system differences" on page 11) and to cameras that support metadata. Depending on your user rights, access to bounding boxes from some cameras may be restricted.

Name	Description
Playback > Independent playback	The ability to play back recorded video from individual cameras independently on the Playback tab, where all cameras in a view otherwise by default display recordings from the same point in time (the playback time).
Setup > Edit overlay buttons	The ability to add new or edit existing overlay buttons in setup mode. Note that in order to add overlay buttons, the Setup tab's Overlay Buttons pane must also be made available (you manage this on the Options dialog's Panes tab).
Setup > Edit video buffering	The ability to edit video buffering as part of the camera properties (see "Camera settings" on page 80) in setup mode. Note that in order to edit video buffering, the Setup tab's Properties pane must also be made available (you manage this on the Options dialog's Panes tab).

Timeline options

The **Timeline** options let you specify your general timeline settings.

If available, the **Follow Server** column lets you specify that you want your Sony - Network Video Management System Smart Client to follow the server's recommended settings. Certain settings are server-controlled, in which case, configuration on the server decides whether you can override the settings.

Name	Description
Incoming audio	Select to show or hide incoming audio on the timeline
Outgoing audio	Select to show or hide outgoing audio on the timeline.
Motion indication	Select whether to show or hide motion indication on the timeline.
All cameras timeline	Select whether to show or hide the timeline for all cameras.
Playback	Select whether or not to skip gaps during playback.

Export options

The Export options let you specify general export settings.

If available, the Follow Server column lets you specify that you want your Sony - Network Video Management System Smart Client to follow the server's recommended settings. Certain settings may already be server-controlled, in which case, configuration on the server decides whether you can override the settings.

Name	Description
Export to	Select the path you want to export to.
Privacy mask	Select whether or not privacy masks are available on export.

Name	Description
Media player format	Select whether or not you can export in media player format.
Media player format - video texts	Select whether you want video texts to be optional, required or unavailable when you export in media player format.
Network Video Management System format	Select whether or not you can export in Network Video Management System format.
Network Video Management System format - project comments	Select whether you want project comments to be optional, required or unavailable when you export in Network Video Management System format.
Network Video Management System format - device comments	Select whether you want device comments to be optional, required or unavailable when you export in Network Video Management System format.
Still image export	Select whether or not you can export still images.

Keyboard options

Keyboard options let you assign your own shortcut key combinations to particular actions in the Sony - Network Video Management System Smart Client. The Sony - Network Video Management System Smart Client also features a small number of standard keyboard shortcuts (see "Keyboard shortcuts" on page 47), immediately ready for use.

Name	Description
Press shortcut key	Enter the key combination you want to use as a shortcut to a particular action.
Use new shortcut in	Select to define how you want to apply the shortcut: <ul style="list-style-type: none"> • Global: On all of the Sony - Network Video Management System Smart Client tabs. • Playback mode: Only on the Playback tab. • Live mode: Only on the Live tab. • Setup mode: Only in setup mode.
Categories	Select a command category and then select one of the associated commands. If you want all your views listed to allow you to create keyboard shortcuts for individual views, select the Views.All category. Some commands only work when the keyboard shortcut is used in certain contexts. For example, a keyboard shortcut with a PTZ-related command will only work when using a PTZ camera.
Parameter	If relevant, specify a parameter for the command or action. For example, if you want to specify the window and view position for the Copy the selected camera view item parameter, enter 2;1 to have the camera copied to the floating window (window 2), in the first view position (view position 1).

Joystick options

Even though joystick control is supported for a large number of PTZ cameras, not all PTZ cameras may be joystick-controlled.

When a new joystick is detected by the Sony - Network Video Management System Smart Client, a default pan-tilt-zoom (PTZ) configuration for the joystick is added automatically. However, the Joystick options let you customize the setup for all your Sony - Network Video Management System Smart Client joysticks.

Name	Description
Select joystick	Select from the list of available joysticks.
Axis setup: Name	There are three axes: <ul style="list-style-type: none"> • X-axis (horizontal) • Y-axis (vertical) • Z-axis (the depth or zoom level).
Axis setup: Invert	Select to change the default direction the camera moves in when you move the joystick. For example, select to move a PTZ camera to the left when you move the joystick to the right and move down when you move the joystick towards you.
Axis setup: Absolute	Select to use a fixed rather than a relative positioning scheme (moving the joystick moves the joystick-controlled object based on the object's current position).
Axis setup: Action	Select the function for an axis: Camera PTZ Pan, Camera PTZ Tilt, Camera PTZ Zoom, or No action.
Axis setup: Preview	Test the effect of your selections. When you have selected a function for the axis you want to test, move the joystick along the required axis to view the effect, indicated by a movement of the blue bar.
Dead zone setup: Pan/Tilt	Specify the dead zone for the joystick's pan and tilt functions. The further you drag the slider to the right, the larger the dead zone becomes, and the more you will have to move the joystick handle before information is sent to the camera. Dragging the slider to the far left disables the dead zone (only recommended for high-precision joysticks). Use the Axis setup preview to test the effect of your dead zone settings.
Dead zone setup: Zoom	Specify dead zone for the joystick's zoom function. The further you drag the slider to the right, the larger the dead zone becomes, and the more you will have to move the joystick handle before information is sent to the camera. Dragging the slider to the far left disables the dead zone (only recommended for high-precision joysticks). Use the Axis setup preview to test the effect of your dead zone settings.
Button setup: Name	The name of the button.

Button setup: Action	Select one of the available actions for the required joystick button.
Button setup: Parameter	If relevant, specify a parameter for the command or action. For example, if you want to specify the window and view position for the Copy the selected camera view item parameter, enter 2;1 to have the camera copied to the floating window (window 2), in the first view position (view position 1).
Button setup: Preview	Verify that you are configuring the right button, press the corresponding button on the joystick. The relevant button will display in blue in the Preview column.

Alarm options

Select whether or not you want alarms to play sound notifications.

Advanced options

The **Advanced** options let you customize advanced Sony - Network Video Management System Smart Client options. If you are not familiar with the advanced options and how they work, just keep their default settings. If you connect to some surveillance systems (see "Surveillance system differences" on page 11), you may see **Follow Server** column. You can use this column to make Network Video Management System Smart Client follow the surveillance system server's recommended settings as set up in the Management Client's Smart Client Profiles. You may experience that certain settings are already server-controlled, in which case configuration on the server decides whether or not you are able to override those settings.

Advanced options:

Name	Description
Multicast	<p>Your system supports multicasting of live streams from recording servers to clients. If multiple Network Video Management System Smart Client users want to view live video from the same camera, multicasting helps saving considerable system resources. Multicasting is particularly useful if you use the Matrix functionality, where multiple clients require live video from the same camera.</p> <p>Multicasting is only possible for live streams, not for recorded video/audio.</p> <p>Enabled: is the default setting. In the Management Client, the recording servers and cameras must also have the functionality enabled to make multicasting from servers to clients available.</p> <p>Disabled: multicasting is not available.</p>

Name	Description
<p>Hardware acceleration</p>	<p>Controls if hardware-accelerated decoding is in use. The load on the CPU is high in a view with many cameras. Hardware acceleration moves some of the CPU load to the Graphics Processing Unit (GPU). This improves the decoding capability and performance of the computer. This is useful, mainly if you view multiple H.264/H.265 video streams with a high frame rate and a high resolution.</p> <p>Auto is the default setting. It scans the computer for decoding resources and always enables hardware acceleration if available.</p> <p>Off disables hardware acceleration. Only the CPU processes the decoding.</p>
<p>Maximum decoding threads</p>	<p>Controls how many decoding threads are used to decode video streams. This option can help you improve performance on multi-core computers in live as well as playback mode. The exact performance improvement depends on the video stream. This setting is mainly relevant if using heavily coded high-resolution video streams like H.264/H.265—for which the performance improvement potential can be significant—and less relevant if using, for example, JPEG or MPEG-4. Note that multi-threaded decoding generally is memory-intensive. The ideal setting depends on the type of computer you use, the number of cameras you need to view, and on their resolution and frame rate.</p> <p>Normal means that no matter how many cores your computer has, it will only use one core per camera position.</p> <p>Auto is the default setting. Auto means means that the computer uses as many threads per camera position as it has cores. However, the maximum number of threads is eight, and the number of threads actually used may be lower, depending on which codec (compression/decompression technology) is used.</p> <p>Advanced users can manually select the number of threads used, with a maximum of eight. The number you select represents a maximum; the number of threads actually used may be lower, depending on the codec (compression/decompression technology).</p> <p>This setting affects all camera positions, in all views, in live as well as playback mode. You cannot specify the setting for individual camera positions or views. Because this setting may not be equally ideal for all of your camera positions and views, we recommend that you monitor the effects and, if required, re-adjust the setting to achieve the optimum balance between performance improvement and memory use.</p>

Name	Description
<p>Deinterlacing</p>	<p>Interlacing determines how an image is refreshed on a screen. The image is refreshed by first scanning the odd lines in the image, then scanning every even line. This allows a faster refresh rate because less information is processed during each scan. However, interlacing may cause flickering, or the changes in half of the image's lines may be noticeable. With Deinterlacing, you convert video into a non-interlaced format. Most cameras do not produce interlaced video, and this option will not impact quality or performance of non-interlaced video.</p> <p>No filter is the default setting. No deinterlacing is applied, so the characteristic jagged edges may show up in images if objects are moving. This is because the even and odd lines of the full image are weaved together to compose the full resolution picture. However, these are not captured at the same time by the camera, so objects in motion will not be aligned between the two sets of lines, causing the jagged-edge effect. Performance impact: None.</p> <p>Vertical stretch top field: This option only uses the even lines. Each odd line will be "copied" from the previous (even) line. The effect is that jagged edges do not appear, but this is at the expense of reduced vertical resolution. Performance impact: Less expensive than the No filter option because only half the number of lines will need post-processing.</p> <p>Vertical stretch bottom field: This option only uses the odd lines. Each even line will be "copied" from the following (odd) line. The effect is that jagged edges do not appear, but this is at the expense of reduced vertical resolution. Performance impact: Less expensive than the No filter option because only half the number of lines will need post-processing.</p> <p>Content adaptive: This option applies a filter to areas of the image where jagged edges would otherwise show up. Where no jagged edges are detected, the image is left untouched. The effect is that jagged edges are removed and full vertical resolution is preserved in the areas of the image where no jagged edges are perceived. Performance impact: More expensive than the No filter option because the total CPU cost per decoded and rendered frame is increased by around 10%.</p>
<p>Video diagnostics overlay</p>	<p>View the settings and performance level of the video stream in the selected view. This is helpful when you must verify settings or diagnose a problem.</p> <p>Select between these options:</p> <p>Hide: No video diagnostics overlay. Default setting.</p> <p>Level 1: Frames per second, video codec, and video resolution.</p> <p>Level 2: Frames per second, video codec, video resolution, multicast, and hardware acceleration status.</p> <p>Level 3: Debug level. Mainly for system administrators to troubleshoot or optimize system performance.</p>

Name	Description
Time zone	Select a predefined time zone or a custom time zone. The available options are: Local: the time zone of the computer running the Sony - Network Video Management System Smart Client Master Server's time zone: the time zone of the server UTC Custom time zone: if you want a particular time zone, select this option and then select from the list of available time zones in the Custom time zone field.
Custom time zone	If you have selected Custom in the Time zone field, you can select any time zone known by the computer. This is useful if two users in different time zones need to view an incident—having the same time zone makes it easier to identify and establish that they are watching the same incident.
PDF report format	Select A4 or letter format for your PDF reports. You can create reports of events.
PDF report font	Select a font to be used in your PDF reports.

Language options

Specify the language version of your Sony - Network Video Management System Smart Client. Select from the list of available languages and then restart the Sony - Network Video Management System Smart Client for the change to take effect.

Interacting with Network Video Management System Smart Client

User rights determine the way you work

Your user rights are specified centrally by your surveillance system administrator and these determine your ability to use particular Sony - Network Video Management System Smart Client features.


Basically, your system administrator can restrict your rights to:

- Access the Sony - Network Video Management System Smart Client
- Access each of the tabs: **Live**, **Playback**, **Alarm Manager**, and **Sequence Explorer**
- Use specific features
- Create views (views determine the way in which video from one or more cameras is displayed)
- View video from specific cameras

The ability to use features of the Sony - Network Video Management System Smart Client can vary considerably from user to user. Note that when connected to certain surveillance systems (see "Surveillance system differences" on page 11), user rights may even vary depending on time of day, day of week, etc. For example, you may only be able to view video from a particular camera during certain hours Monday-Friday, but not outside these hours.

About live video

Particular user rights may be required in order to access the **Live** tab. To view live video in the Sony - Network Video Management System Smart Client, the surveillance system's recording server must be running. Depending on your user rights, access to viewing live video from some cameras may be restricted.

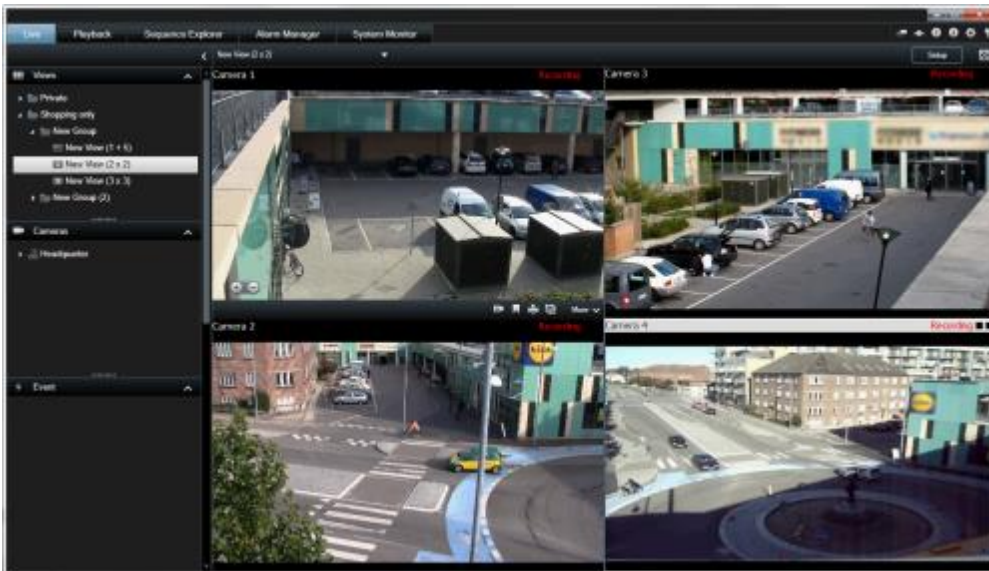

Example: **Live** tab displaying video from four cameras

The **Live** tab (see "The Live tab" on page 25) offers you numerous features, including audio (on page 91), carousels (on page 76), hotspots (on page 77), Matrix, camera shortcut menus, pan-tilt-zoom (PTZ) (see "PTZ and fisheye lens images" on page 51) control, digital zoom, events activation, output activation, quick playback, and more.

Even though you can see live video from a camera on the **Live** tab, the video stream from the camera is not necessarily being recorded. Video is normally recorded as defined by the surveillance system server. Typically, recording takes place according to a schedule (for example, every morning from 10.00 to 11.30) and/or whenever the surveillance system detects special events (for example, motion generated by a person entering a room, a sensor registering that a window is being opened, or manually activating an event in your Sony - Network Video Management System Smart Client). Typically, you view recorded video on the **Playback** tab, but you can also view it on the **Live** tab (see "View recorded video using independent playback" on page 112).

If title bars have been enabled in the camera properties (see "Camera settings" on page 80) in setup mode, the title bar above the camera's image displays **Recording** if video is being recorded.

Tip: To maximize video from a particular view item, double-click the camera position. To return to normal view, double-click the camera position again.

You may notice that sometimes the camera is recording for short periods only. This is because the surveillance system server may have been configured to only record the video stream from a

camera when there is motion, when a door is open, or similar, which can lead to many short periods of recordings.

You can therefore still select **Start Recording for # Minutes** even though the video stream from a camera is already being recorded; this way you can make sure that the video stream from the camera will be recorded without interruption for the specified number of minutes.


If multiple streams have been set up on the server, you can temporarily view a different stream by selecting this from the camera toolbar. On the camera toolbar, click **More** and then select a stream from the available list.


Manual recording of video

The functionality of the manual recording feature depends on the surveillance system you are connected to and on your user rights. Recording while watching live video is useful if you see something of interest. On the camera toolbar for the position in the view you want to record, select:

-  Start recording for # Minutes

Once started, recording will continue for the number of minutes determined by your surveillance system administrator. You cannot change this, and you cannot stop recording before the specified number of minutes has passed.

-  Start manual recording


Once started, recording will continue for the number of minutes determined by your surveillance system administrator or you can click the icon again  to stop manual recording.

Tip: You can start recording the video stream from more than one camera simultaneously, although you must select them one by one.

About recorded video

You view recorded video on the **Playback** tab of the Sony - Network Video Management System Smart Client. When you select the **Playback** tab, the Sony - Network Video Management System Smart Client connects to the surveillance system server and displays recorded video from the cameras in the selected view. In this way, you can play back recorded video.

Particular user rights may be required in order to access the **Playback** tab, and, depending on your user rights, access to browsing video from some cameras may be restricted.

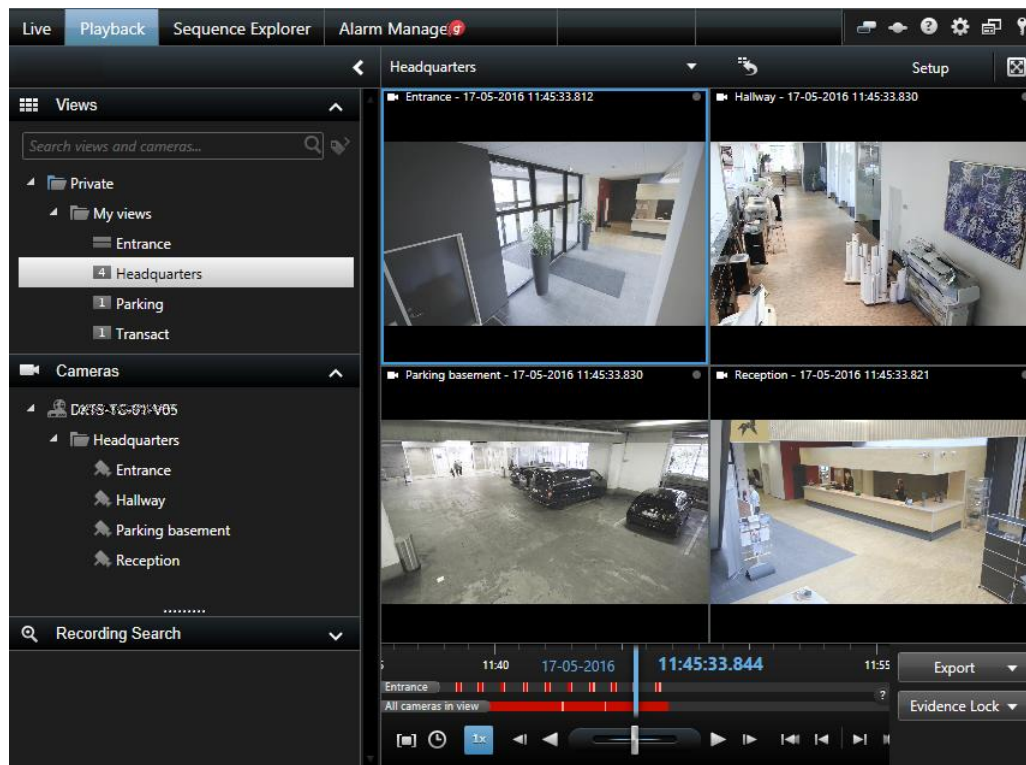

The **Playback** tab offers you numerous advanced features for browsing recorded video, including the timeline (see "Time navigation controls" on page 123), smart search (which lets you search for motion in selected areas of recordings from a particular camera), and two types of sequences browsing (either through a simple list with a preview option or through the Sequence Explorer (see "Searching video using Sequence Explorer" on page 114)'s thumbnail view of multiple sequences).

In addition to the video browsing features, the **Playback** tab also lets you listen to audio (when connected to selected Sony surveillance systems only), use hotspots, use digital zoom (on page 49), navigate fisheye lens images (see "PTZ and fisheye lens images" on page 51), print images (see "Print evidence" on page 137), and export video evidence (see "Network Video Management System format settings" on page 132) as AVIs (movie clips), JPEGs (still images) as well as Network Video Management System format.

Tip: To maximize video from a particular position in a view, double-click the camera position. To return to normal view, simply double-click the camera position again.

On the **Playback** tab, all cameras in a view display recordings from the same point in time (the master time) by default. However, you can view and navigate recordings from individual cameras independently of the master time (if this is enabled in the **Options** (see "**Functions options**" on page 35) window).

You can use independent playback to view recorded video from the **Live** tab or to view video independently of the master time.

View recorded video using independent playback


You can only use this feature for ordinary single-camera positions, not for hotspots, carousels, or Matrix positions.

1. Move your mouse across the camera that you want to view recorded video for. On the toolbar that appears, click the **Independent Playback** button.



The independent playback timeline appears:




2. Drag the timeline (see "The timeline" on page 124) to select the time containing the video that you want to view.
3. If you want to view recorded video for the selected time on all the cameras in your view at once, on the toolbar, click the **View recordings from selected time on Playback tab** button: . This displays the **Playback** tab with all cameras synchronized to the time you have selected.

Enter setup mode

- To enter setup mode, on the Sony - Network Video Management System Smart Client toolbar, click **Setup**.

In setup mode, the **Setup** button and panes (such as the **Properties** (see "**Camera settings**" on page 80) pane) are highlighted in orange in the left side pane.



To return to the default view, click the **Setup** button again.

Select a view


You can select a view from the **Views** pane on the **Live** and **Playback** tab.

- In the **Views** pane, select either **Private** or **Shared** views, and in the relevant view group, select one of the available views.

If neither the pane nor the shortcut is available, check the pane's availability in the Options (see "Panels options" on page 35) window.

If views have been assigned shortcut numbers (see "Assign a shortcut number to a view" on page 63), you will also be able to select a view by using keyboard shortcuts (see "Keyboard shortcuts" on page 47).

View in full screen

- To view your Sony - Network Video Management System Smart Client in full screen mode, on the Sony - Network Video Management System Smart Client toolbar, click the **Full Screen**  button (or press F11 on your keyboard).

When you change to full screen mode, the toolbars and panes are hidden. To display them, move your mouse to the top of the screen.

To return to the default view, press ESC or F11 on your keyboard.

Copy single images

You can copy single still images from selected cameras. Copied images can then be pasted (as bitmap images) into other applications, such as word processors, e-mail clients, etc. You can only copy a single image from one camera at a time.

- On the camera toolbar, click the **Copy to Clipboard** icon to copy an image.



Keyboard shortcuts

When you work on the **Live** and **Playback** tabs, a number of simple keyboard shortcuts are available.

The PLUS SIGN in the following shortcuts does not indicate the key but the combination of pressing two or more keys. For example, the keyboard shortcut **/+ENTER** indicates that you press the slash (/) key and then the ENTER key.

These shortcuts cannot be used for positions in views containing Matrix content or static images.

Press these keys	To do this
ENTER	Toggle maximized/regular display of the selected position in the view.
ALT	Select a specific view item. When using ALT, you can navigate to a view item by typing the numbers displayed on the screen. When a view item is in focus, it is marked with a blue frame. If you are using a PTZ (on page 165) camera or a hotspot (see "Hotspots" on page 77), this allows you to control cameras with a joystick or to send the view item directly to the hotspot without using the mouse.
/+<camera shortcut number>+ENTER	Change the camera in the selected view item to the camera with the matching shortcut number. Example: if the required camera has the shortcut number 6 , press /+ 6+ENTER . Camera shortcut numbers may not necessarily be in use on your surveillance system. Camera shortcut numbers are defined on the server.
/+ENTER	Change the camera in the selected view item to the default camera.
/+/+ENTER	Change the cameras in all view items to the default cameras.
*+<view shortcut number>+ENTER	Change the selected view to the view with the matching shortcut number. Example: if the required view has the shortcut number 8 , press *+ 8+ENTER . View shortcut numbers may not necessarily be used. If view shortcut

Press these keys	To do this
	numbers are used, you can see them on the Live tab in the Views pane, where they appear in parentheses before the views' names. View shortcut numbers are defined on the Live tab in setup mode.
6 (numeric keypad only)	Move the view position selection one step to the right.
4 (numeric keypad only)	Move the view position selection one step to the left.
8 (numeric keypad only)	Move the view position selection one step up.
2 (numeric keypad only)	Move the view position selection one step down.

You can also assign your own custom shortcut key combinations (see "Keyboard options" on page 37) for particular actions in Sony - Network Video Management System Smart Client.

Digital zoom, pan-tilt-zoom, and fisheye lens images

Digital zoom

About digital zoom

Digital zoom lets you magnify a portion of a given image so you are able to have a closer look at it. Digital zoom is therefore a useful feature for cameras that do not have their own optical zoom capabilities. Your use of digital zoom will not affect any recording of the video; any recording will still take place in the camera's regular format. If you later wish to play back the recordings, you can use digital zoom on the **Playback** tab as well.

For non-PTZ cameras, digital zoom is enabled by default. If you enable or disable digital zoom on one camera, all cameras in your view are affected. For PTZ cameras, this setting only applies to one camera at a time.

When you export evidence (see "Network Video Management System format settings" on page 132), you can choose to export the regular images or the digitally zoomed images in AVI or JPEG formats. When you export to database format, this is unavailable, because the recipient can use digital zoom on the exported recordings. If you print (see "Print evidence" on page 137) an image on which you have used digital zoom, the digitally zoomed area of the image will be printed.

Use digital zoom

1. On the **Live** or **Playback** tab, in a carousel or in a map preview, on the camera toolbar, click **More > Digital zoom** to enable it.



Tip: If you don't want the camera toolbar to pop up when you move your mouse over the view, press and hold the CTRL key while moving the mouse.

A small overview frame (the zoom indicator) appears in the bottom right corner of the view, providing an overview of the full image when you zoom in on an area.




2. Click and hold down the mouse button inside the image to zoom. The area you select is highlighted by a white border. When you release the mouse button, the zoom will take effect.



3. If you want to move to other areas of the image while maintaining your zoom level, in the overview frame, drag the highlighted area to the required position.



4. To adjust the zoom level using the zoom level slider, press and hold down the SHIFT key, click inside the image and while holding both down, move your mouse up or down the zoom level slider.

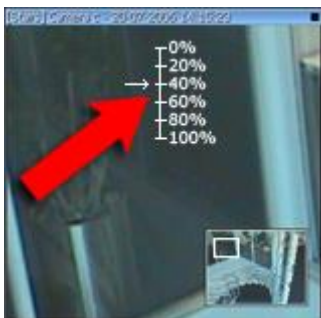

5. Selecting a zoom level of **0%** lets you view the full image again.

Tip: If your mouse has a scroll wheel, you can also use the scroll wheel to control the zoom level. On many mice, clicking the scroll wheel or middle mouse button quickly lets you view the full image again.

Frequently asked questions: digital zoom

What is the difference between optical and digital zoom?

With optical zoom, a camera's lens physically moves to provide the required angle of view without loss of image quality. With digital zoom, the required portion of an image is enlarged by cropping

the image and then resizing it back to the pixel size of the original image—a process called interpolation. Digital zoom simulates optical zoom, but the digitally zoomed portion will have a lower quality than the original image.

Is digital zoom relevant for PTZ cameras?

When viewing live video from a pan-tilt-zoom (PTZ) camera, you can use the PTZ camera's own optical zoom features, so digital zoom is not highly relevant for PTZ cameras. You can, however, use the digital zoom feature if, for example, your user rights do not allow you to use the PTZ camera's own optical zoom features.

Why can't I see any navigation buttons?

If the camera you are viewing video for is not a PTZ camera, you will only be able to zoom in on an area of the image and you will only see the zoom buttons. Once you have zoomed in on an area of the image, you will have access to the PTZ navigation buttons, which let you navigate within this zoomed area.

PTZ and fisheye lens images


The use of fisheye cameras is not supported by all surveillance systems and some fisheye cameras are not supported by the 64-bit version of Microsoft Windows.

Depending on your user rights, access to pan-tilt-zoom (PTZ) controls from some cameras may be restricted. PTZ features may be limited when connecting to selected surveillance systems.

For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

Fisheye lens images

If your views include fisheye cameras or lenses, you can navigate fisheye cameras images by clicking either the arrow mouse pointer (the virtual joystick) or the PTZ navigation buttons that appear inside the image (some types of fisheye cameras have their own zoom buttons). The PTZ middle navigation button lets you quickly move the camera to its default position. Zoom in and out using the **plus** and **minus** buttons. If your mouse has a scroll wheel, you can use scroll to zoom in and out; click the scroll wheel or middle mouse button to return to the default view.

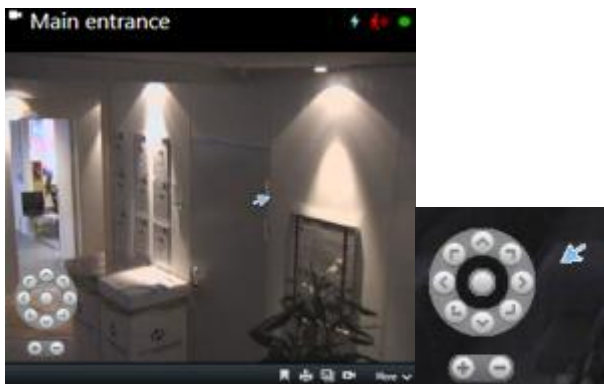

The PTZ navigation buttons and the virtual joystick mouse pointer

On individual mice, the scroll wheel may have been reserved for special purposes, in which case zooming may not be possible. Refer to your mouse configuration manual.

You cannot use presets (see "Move the camera to a PTZ preset position" on page 52) for navigating fisheye lens images but you can save a favorite position.

Define a favorite fisheye lens position

You can only save positions for fisheye cameras.

1. Navigate to the position in the fisheye lens image that you want to save.
2. On the camera toolbar, click **More > Save Fisheye Lens Positions** to save the position.



3. When you want to return to the fisheye lens position, on the camera toolbar, click **More > Load Fisheye Lens Positions**.

PTZ images

If your views (including those in a carousel or a map preview) contain PTZ camera images, you can control the PTZ cameras using the overlay PTZ navigation button.

In **Setup** mode, on the **Properties** pane, you can define the PTZ click mode for the view item. You can choose between click-to-center and virtual joystick. Click-to-center is the default mode when you start using Network Video Management System Smart Client. You can change the default selection in Sony - Network Video Management System Smart Client options (see "Configuring your Network Video Management System Smart Client" on page 32).

Tip: Most PTZ cameras support joystick and point-and-click control. You can customize (see "Joystick options" on page 38) the joystick control.

You can also control most PTZ cameras simply by pointing and clicking inside the camera images. If you see a set of crosshairs when placing your mouse pointer over the images from a PTZ camera, the camera supports point-and-click control.




Crosshairs indicate point-and-click control. For some cameras, crosshairs may look different.

Some cameras have crosshairs surrounded by a square. When this is the case, you can zoom in on an area by dragging a square around the area in the image you want to magnify. For such cameras, zoom level is controlled by holding down the SHIFT key on your keyboard while moving the mouse up or down; this will display a zoom level slider inside the image.

Move the camera to a PTZ preset position

To make the PTZ camera move to a predefined position, select a PTZ preset from the list of available positions defined for the PTZ camera.

1. On the **Live** tab, on the camera toolbar, click the PTZ icon  to open the PTZ menu.
2. Select a PTZ preset in the menu to move the camera to the required position. The icon turns green.


If you select the preset **Home**, the camera moves to its default position.


Manage PTZ presets


Depending on your surveillance system (see "Surveillance system differences" on page 11), you can create, edit and delete PTZ presets.

Add PTZ presets

You can define additional PTZ presets:

1. In the view, select the relevant PTZ camera that you want to give a new PTZ preset.
2. On the camera toolbar, click the PTZ icon  to open the PTZ menu.
3. Click **Manage PTZ presets** to open the dialog box.

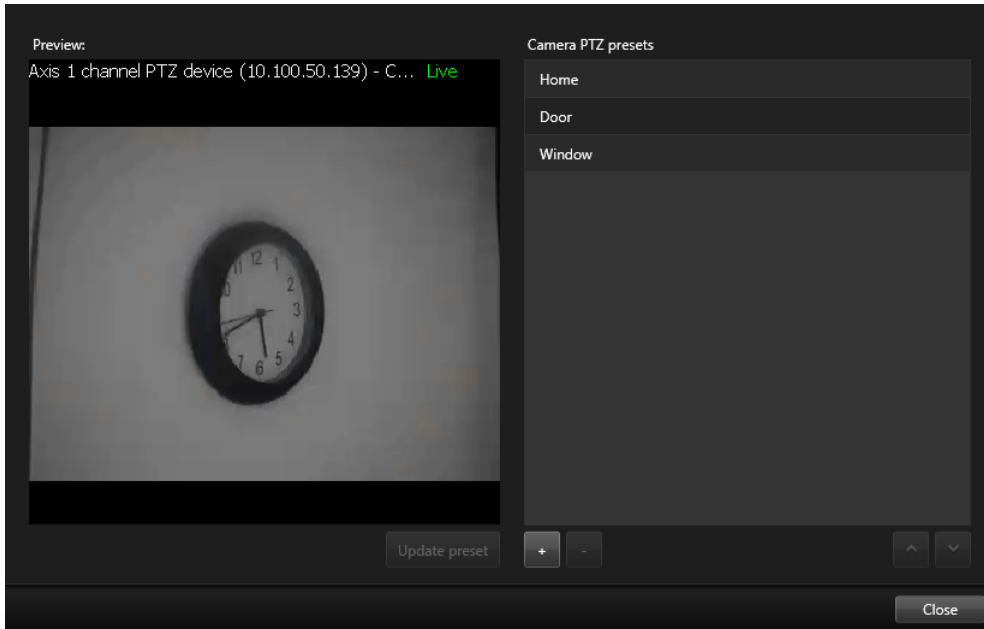

4. Click  to add a new preset entry.
5. Select the PTZ preset entry and type a new name for the PTZ preset.
6. Use the PTZ buttons to navigate to the relevant position and click **Update preset** to save.
7. Use the arrows to move a PTZ preset up or down in the list. This can be useful if your list contains many presets.


Delete PTZ presets

To delete an existing preset, select it and click .

Edit PTZ presets

1. To edit the name of the PTZ preset, select the PTZ preset name.


2. Double-click the text and overwrite the existing name.

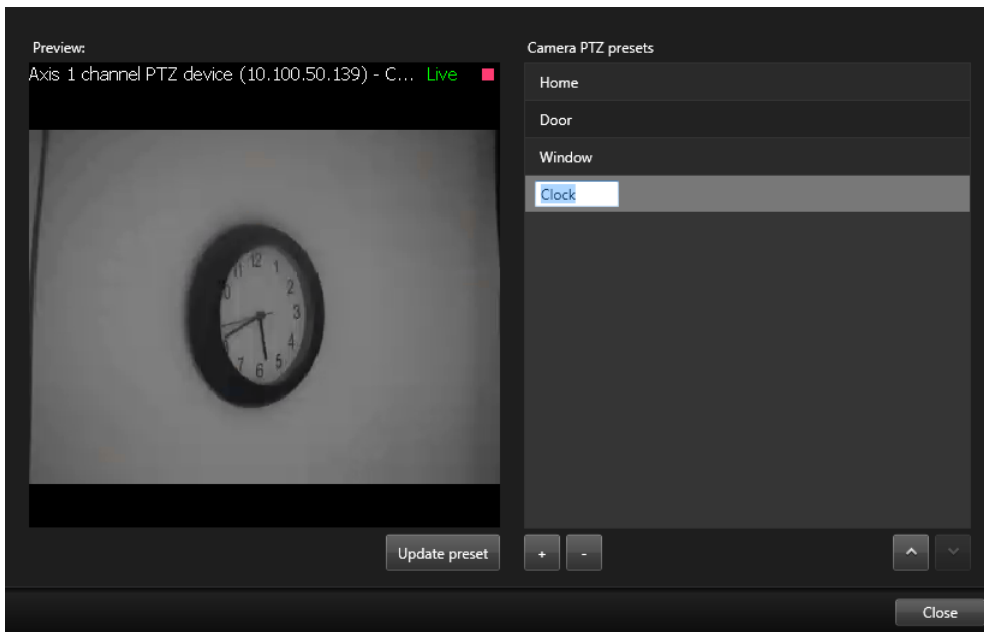


3. Use the PTZ buttons to navigate to the required position and then click **Update preset** to save.
4. Click **Close**.

Edit PTZ presets

You can make changes to existing PTZ presets, such as renaming or changing the preset position:

1. In the view, select the PTZ camera with the PTZ preset you want to modify.
2. On the camera toolbar, click the PTZ icon  to open the PTZ menu.
3. Click **Manage PTZ presets** and in the dialog box, select the PTZ preset.

4. To edit the name of the preset, ensure the name of the PTZ preset is highlighted. Click the text and overwrite the existing name.

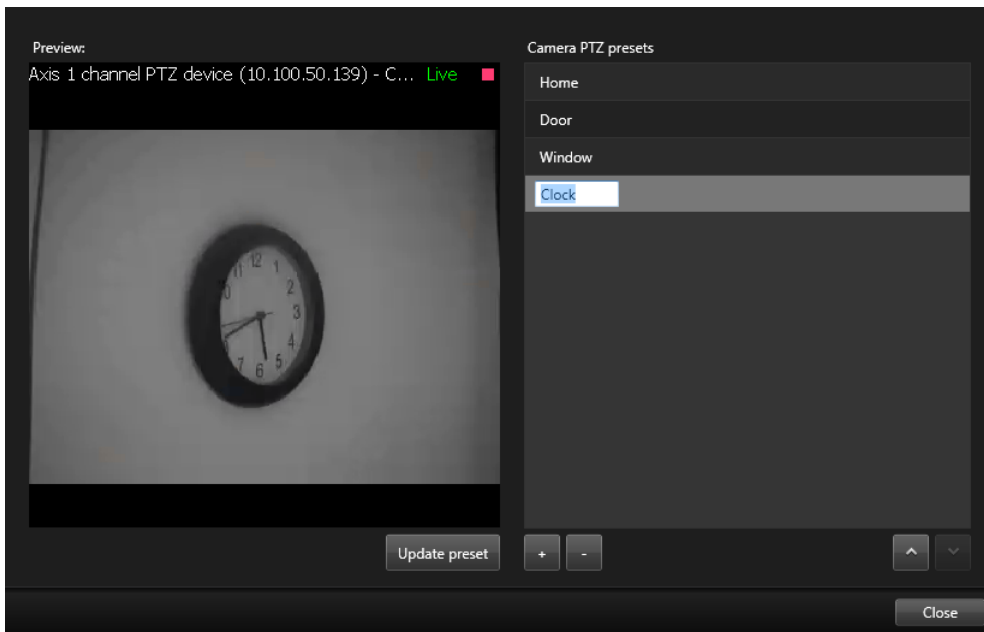


5. If the camera is not in the correct position, use the PTZ buttons to navigate to the required position and then click **Update preset** to save.
6. Use the up or down arrows to arrange the PTZ presets on the list.
7. Click **Close**.

Locked PTZ presets

Depending on your surveillance system (see "Surveillance system differences" on page 11), you may experience that a PTZ preset is locked.

A system administrator can lock a PTZ preset to protect it from being renamed or deleted or to avoid that someone changes its position.

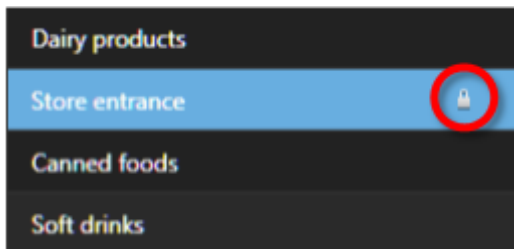


The system administrator decides whether a PTZ preset is locked or unlocked.

Stop PTZ patrolling

A PTZ camera can continuously move between a number of PTZ presets according to a schedule. You can stop an ongoing system patrolling.

Only stop system patrolling when there is an important reason to do so. Normally your system administrator has planned the patrolling carefully to meet your organization's surveillance needs.


1. On the **Live** tab, select the required view.
2. On the camera toolbar, click the PTZ icon  to open the PTZ menu.
3. Select **Stop PTZ patrolling** and you can patrol manually.
4. To resume the system patrolling, select the **Stop PTZ patrolling** command again.


Pause patrolling


Depending on your surveillance system (see "Surveillance system differences" on page 11), you can pause a patrolling.

If you have the necessary PTZ priority, you can pause a system patrolling or a manual patrolling started by another user. You can always pause your own manual patrolling. This can be useful when you need a longer timeout to control the camera.

Patrolling is paused for 10 minutes by default, but your system administrator may have changed this.

1. In the view, select the PTZ camera that you would like to pause patrolling on.
2. On the camera toolbar, click the PTZ icon  to open the PTZ menu.
3. Click **Pause patrolling**.

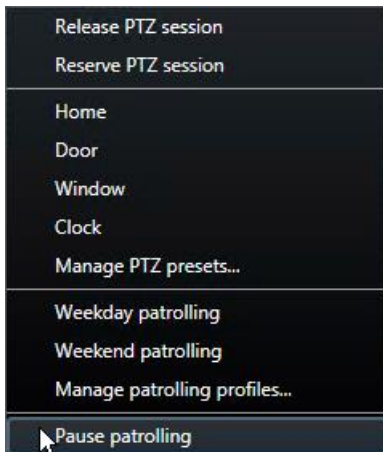

While patrolling is paused, there is a check mark  in front of the **Pause patrolling** menu item for all users. The PTZ icon turns green for you and red for all other users, so they can see that someone controls the camera.


If you move the camera to a PTZ preset or move it manually, the timeout of the pause patrolling resets. If you start a manual patrolling, you lose the pause patrolling session.


4. To stop pausing, select **Pause patrolling** again.

The system resumes its previous patrolling or the camera is made available for other users.

If a user with a lower PTZ priority than you has started a manual patrolling, for example **Weekday**, you can pause it and take control of the camera:

1. Click **Pause patrolling**.

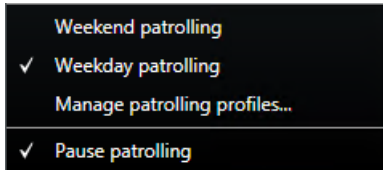

While you have paused another user's manual patrolling, there is a check mark  in front of the **Pause patrolling** menu item and the patrolling profile for all users. The PTZ icon turns green for you and red for the other users, so they can see that someone controls the camera.



2. To stop pausing, select **Pause patrolling** again.

The system resumes to the manual patrolling, in this example **Weekday**.

Manually activate output

If external output has been defined on your surveillance system, for example, switching on lights or sounding a siren, this can be activated from the **Live** tab. Note that, depending on your user rights, access to activating output may be restricted.

There are two ways of manually activating output, either by using the **Output** pane or by clicking the overlay button if this is available (if an overlay button is available, it appears when you move your mouse over the view).

- On the **Live** tab, in the **Output** pane select the required output, and then click **Activate**. The list of selectable output is grouped by server  in some surveillance systems, while in others, they are grouped by cameras. If a server is listed with a red icon , it is unavailable, in which case you cannot activate output on that server.



If activation fails, a message appears.

Observe and communicate

Whether you're guarding a one room shop or a large industrial complex, your Network Video Management System system can help you stay on top of what's going on in your environment. The topics in this section provide information about how to view and interact with content in Network Video Management System Smart Client.

About views

Network Video Management System Smart Client can show different functionality in **Live** and **Playback** mode. Before you begin to set this up, it may be useful to know the terminology to denote what you see and what you can set up to create a working area that matches your requirements.

	<p>VIEW</p> <p>The graphical layout that displays content is called a view.</p> <p>A view can contain content from up to 100 cameras, web pages, still images, text and more, according to what you need to display.</p> <p>Your Sony - Network Video Management System Smart Client can handle an unlimited number of views, allowing you to switch between content from various groups of cameras or other content.</p> <p>You can customize each view's layout to fit its content.</p>
	<p>VIEW ITEM</p> <p>The red square in the illustration indicates one of the four view items present in this view.</p> <p>A view includes a number of view items, the cells that contain whatever content you add to them.</p> <p>You add content to your view items individually.</p>

<ul style="list-style-type: none">• Video feed (from a live camera or a video file played back)• Camera Navigator• Carousel• Hotspot• HTML page• Map• Matrix• Smart Wall (may be an add-on to your system)• Text	<p>CONTENT</p> <p>Once you have set up the view with the layout you prefer, you can add functionality or content to your view items.</p> <p>Add content to a view item by dragging the relevant content from the System Overview window in the left side pane of your Network Video Management System Smart Client.</p>
--	--

To help you maintain an overview, all views are placed in folders called groups. A group can contain any number of views and, if required, subgroups. Views can be private or shared with other users.

Your user settings, including information about your views, are stored centrally on the surveillance system server, so you can use your views, private as well as shared, on any computer that has a Sony - Network Video Management System Smart Client installed. This is provided you log in with your own user name and password.

Create and manage views

Certain user rights are required in order to create views.

In setup mode, you can create groups and views, and specify which cameras should be included in each view. If a top-level folder has a red background, it is protected:



You can still access any views under the protected top-level folder, but you cannot create new views or edit existing views under it.

Your ability to edit views and groups depends on your user rights. Basically, if you can create the view or group, you can also edit it. Consult your surveillance system administrator if in doubt.

To create a view, you must first have a group to add it to. You can either create a new view in an existing group or create a new group for the view. To create a view under a shared top-level folder, you must first create a group within this shared folder.

A group can contain an unlimited number of views. You can also create any number of subgroups if required.

Creating private and shared views

Views can be private or shared:

- **Private** views can only be accessed by the user who created them.
- **Shared** views allow many Sony - Network Video Management System Smart Client users to share the same views. This is possible because all views are stored on the surveillance

system server. Depending on your type of surveillance system (see "Surveillance system differences" on page 11), shared views can be shared by all Sony - Network Video Management System Smart Client users, or access to selected shared views can be given to certain Sony - Network Video Management System Smart Client users.


Typically, only a few people in an organization can create and edit shared views. For example, the surveillance system administrator may create and maintain a number of shared views, so users do not need to create their own views.

Views and view groups

If you have a large or complex hierarchy of view groups, the search function does not only ease the navigation. It also adds the ability to search across the existing structure. How well this goes, depends on your organization having worked out a well considered and consistent naming convention for views and cameras.

The example below shows the benefit of searching instead of navigating through a complex hierarchy when you need to get an overview of related views:

Objects shown in view group hierarchy.

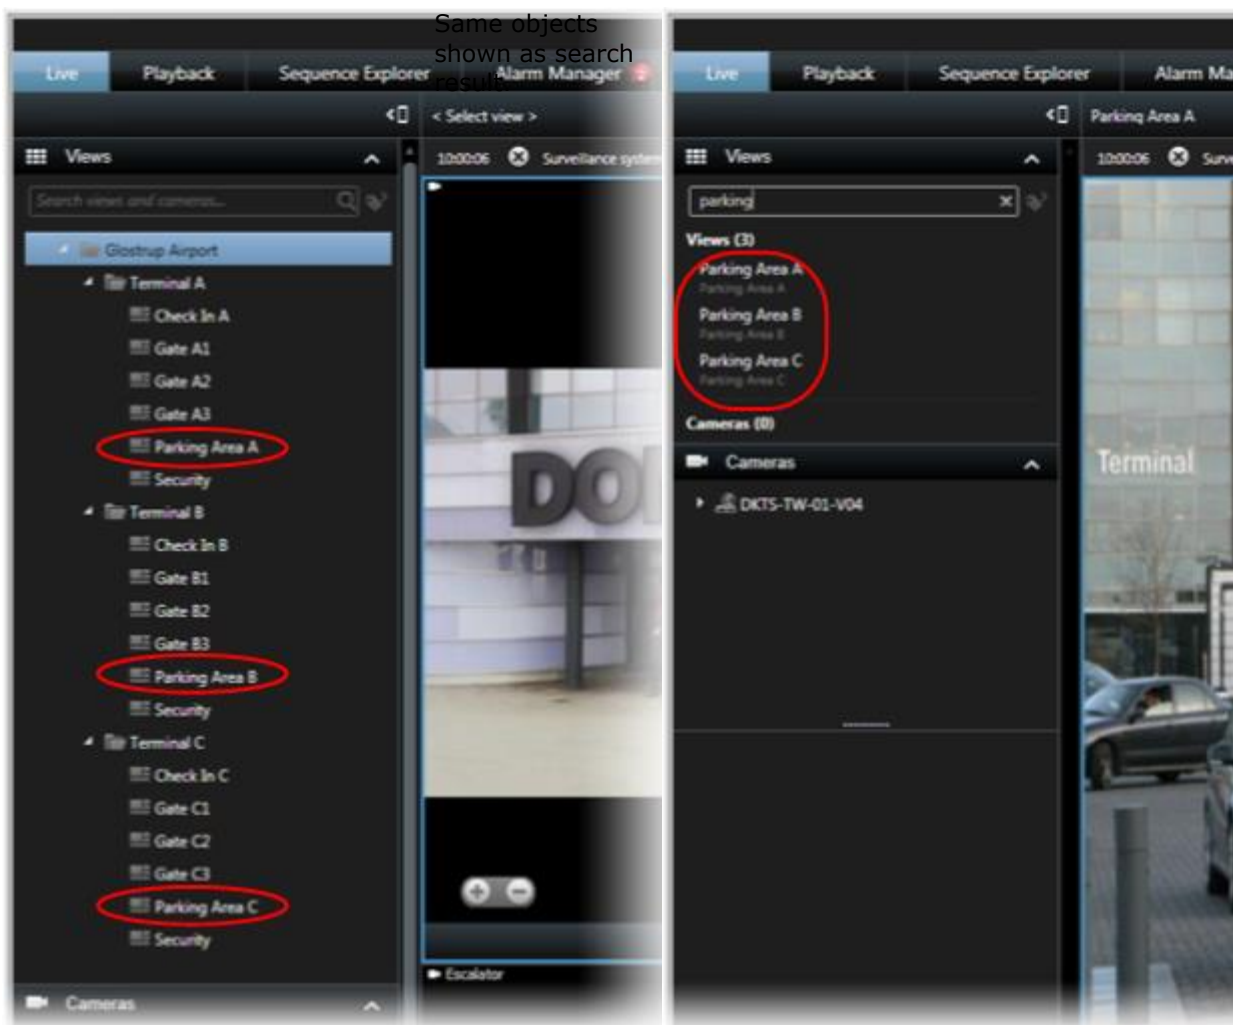

You can search for views that contain specific cameras or view item types. For example, if you want to see all views that contain PTZ cameras, cameras from a certain manufacturer or views that contain these view item types:

- Map
- Alarm
- Matrix
- HTML
- Name of camera in view
- Add-on products

Finally, you can search for keywords.

Create a view group

1. In setup mode, in the **Views** pane, select the **Private** or **Shared** top-level folder you want to add a group to.
2. Click **Create New Group**:



A new group is created named **New Group**.

3. Select and click the **New Group** to overwrite the name.
4. You can now create views within this group.


Create a view

Not all users may have access to all cameras on the surveillance system and some of the features you include in your shared view may not be supported in earlier versions of the Sony - Network Video Management System Smart Client. Therefore, always make sure that the users you want to share with have the necessary rights and are running the same Sony - Network Video Management System Smart Client version as yourself. To check your Sony - Network Video Management System Smart Client version, click ⓘ in the top right corner of the Sony - Network Video Management System Smart Client window.

1. In setup mode, in the **Views** pane, select the group in which you want to create the view.
2. Click the **Create New View** button:



3. Select a layout for your new view. You can select layouts for displaying up to 100 (10×10) cameras in a single view. Available layouts are grouped according to their aspect ratio (height/width relationship: 4:3 or 16:9), and according to whether they are optimized for regular content or content in portrait mode (where the height is greater than the width).

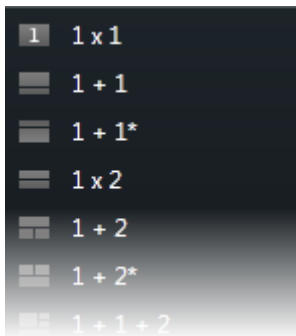

4. Enter a name for the view by overwriting the default **New View** name.

Copy, rename, or delete a view or group

Important: Views can only be copied within the same session; you cannot copy views from one Sony - Network Video Management System Smart Client to another.

If you have a view and you want to reuse it, you can copy it. You can also copy a group of views or a private view to a shared view.

1. In setup mode, in the navigation pane, select the view.
2. Click **Copy**.



Or press CTRL+C.

3. Browse to where you want to copy the view, select **Paste**.



Or press CTRL+V.

Tip: Alternatively, you can select and drag the view to another folder.

4. The copied view is by default named the same as the original followed by (2). To change the name, click **Rename**.



Or right-click and select **Rename**.

- To delete a view, select the relevant view, and either click **Delete**.



Or right-click and select **Delete**.

Important: Deleting a group will delete all views and any subgroups within the group as well.

Assign a shortcut number to a view

In setup mode, you can assign shortcut numbers to views to let users select views using standard keyboard shortcuts (see "Keyboard shortcuts" on page 47).

1. In setup mode, in the **Views** pane, select the view you want to assign a shortcut to.
2. In the **Shortcut** field, specify a shortcut number, and then press ENTER. The shortcut number appears in parentheses in front of the view's name.
3. Repeat as necessary for other views.

Privacy masks

Privacy masks are available only for selected surveillance systems (see "Surveillance system differences" on page 11).

You can use privacy masks to protect sensitive information in recorded video by blocking out certain areas in a camera's field of view. For example, if a camera overlooks the windows of a private residence, you can apply privacy masks to the windows.

In the following illustration, privacy masks are applied to five windows in an adjacent building.




Privacy masks are applied to cameras by system administrators, and you cannot add or remove them from views in Network Video Management System Smart Client. You can, however, add privacy masks when you export (see "Network Video Management System format settings" on page 132) video. For more information, see Mask areas in a recording during export (on page 136).

Note: If you export video that contains privacy masks, the export process may take significantly longer and the export file size may be larger than usual, particularly if you export in Network Video Management System format.

Add content to views

Search for views and cameras

With the search function for views and cameras you can search directly for available views and cameras. Not only by searching for names, but also by searching for description, type and keywords.

You can find an overview of common keywords if you click  next to the search field.

You can see matching results for views and cameras while you type.

Search for a camera

When you search for cameras in live and playback mode, you can view the cameras in a temporary view that is optimized for the amount of cameras you select.

You can click a single camera to view it in a 1:1 view, or you can click the heading of the camera results to view all discovered cameras (or the first 25). You can also select cameras manually if you press either **CTRL** or **Shift** while clicking one or more cameras. Press **Enter** to view the cameras.


You cannot create new views based on temporary views.

You can search for these camera characteristics:

- Name
- Description
- Capability:
 - PTZ
 - Audio
 - Input
 - Output
- Views containing a specific camera
- Recording Server name or address (shows connected cameras)

TIP: Your system administrator can add free text tags in the camera description field on the surveillance server to make it possible to group cameras and search for these tags. An example could be that all outdoor cameras use the tag "Outdoor" in the description field. In that case, all cameras of this type can easily be found.

Add a camera to a view

1. In setup mode, select the view you want to add a camera to.
2. In the **Overview** pane, expand the required server  to view a list of available cameras from that server.

Network Video Management System Smart Client 2016 R3 - User Manual

Often, you only see a single server, but if you are connected to a large surveillance system, you may see a hierarchy of several servers. If a server is listed with a red icon, it is unavailable, in which case you cannot view cameras from that server.

3. Select the camera from the list and drag it to the position in the view. An image from the camera may appear in the selected position if a connection is established. If a connection cannot be established, just the camera name is displayed. If parts of images are black, it is because privacy masks (on page 63) are in use.


You can specify the camera properties (such as quality, frame rate and more) in the **Properties** pane (see "Camera settings" on page 80). Repeat for each camera required in the view.

If you want to add multiple cameras to a view in one go (for example all of the cameras from a camera folder under a server), simply drag the folder to the view. This automatically adds all the folder's cameras in the view from the selected position onwards. Make sure a sufficient number of positions are available in the view.

You can easily change which cameras are included in your view by dragging a different camera to the position.

Add an HTML page to a view or a Smart Wall


You can add HTML pages to views and Smart Walls. For example, this is useful for displaying instructions, company web pages, Internet map services, collections of links, e-learning pages, and so on.

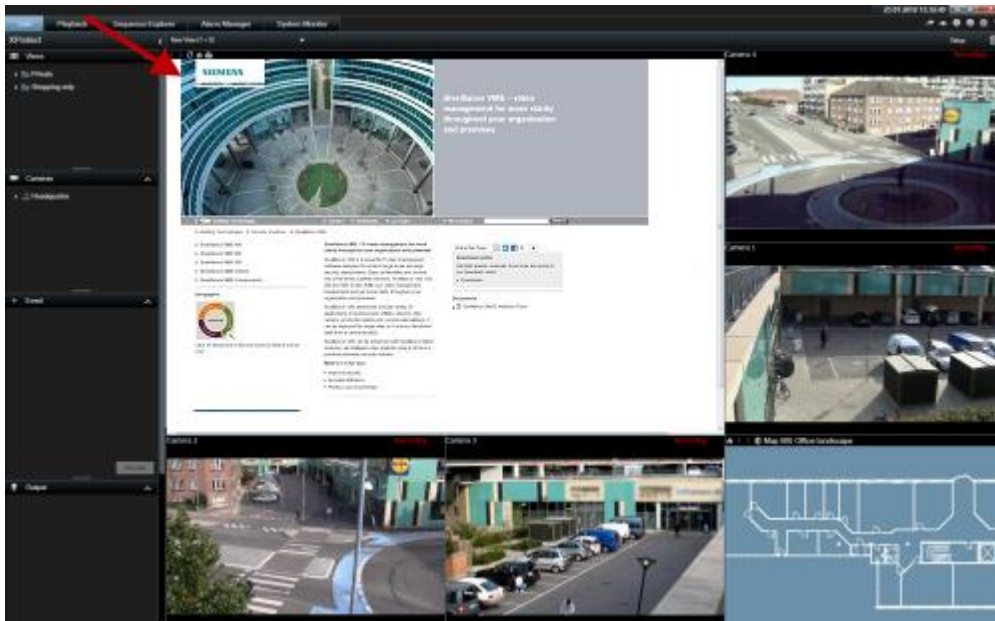

Example: A company web page inserted in a view

1. In setup mode, in the **System Overview** pane, click and drag the **HTML Page** item to the view.

2. The **Open URL** window opens.

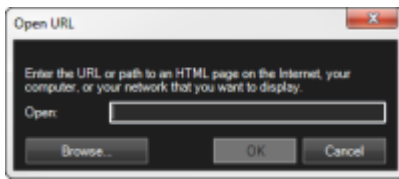

3. In the **Open URL** window's **Open** field, enter the location of the required HTML page (example: `http://www.mywebsite.com/mywebpage.htm`).


- or -

If the HTML page is stored locally on your computer, specify its location on your computer (example: `C:\myfiles\mywebpage.htm`), or click **Browse...** to browse for the required HTML page.

4. Click **OK**.

After you add an HTML page to a view, you can specify properties for the page:

1. In setup mode, select the imported HTML page in the view. In the **Properties** pane, change the necessary properties.

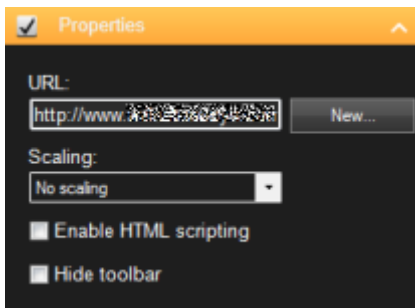

- **URL:** Click **New** to specify a new URL or location of the HTML page.
- **Scaling:** Select the scaling of the HTML page. The optimal scaling depends entirely on the content of the imported HTML page and how you want to display it.

As a rule, with a high scaling value, e.g. 1280×1024, text on the HTML page will appear relatively small, and a considerable amount of content will be visible without the need for scrolling. With a low scaling value, e.g. 320×200, text on the HTML page will appear relatively large, and a relatively small amount of content can be displayed without the need for scrolling.

- **Enable HTML scripting:** Only select this feature if the HTML page is a custom-made HTML page for navigating or triggering features inside the Sony - Network Video Management System Smart Client itself (see examples of custom-made HTML pages in Use an HTML Page for Navigation (on page 71)).

If selected, a client script required for navigating and controlling a number of features inside the Sony - Network Video Management System Smart Client will be added to the HTML page. For HTML pages which are not going to be used for such purposes, the client script cannot be used, and may even cause the HTML page to malfunction.

- **Hide toolbar:** By default, a simple navigation bar is inserted above each imported HTML page. The navigation bar has the following five buttons: **Back**, **Forward**, **Refresh**, **Home** and **Print**:



If you do not want the navigation bar, you can hide it by selecting **Hide toolbar**.

When an imported HTML page contains links, we recommend that the links have the `target='blank'` attribute (example: `Link`). This makes the links open in separate windows, which will help you avoid losing view of the Sony - Network Video Management System Smart Client window when a link opens a web page in the same browser as the Sony - Network Video Management System Smart Client.

Display an HTML page on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display HTML pages.

1. Follow the steps for adding an HTML page to a view.
2. Click **More**, **Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Display an image on a Smart Wall

You can display static images on your Smart Wall. For example, this is useful when you want to share a snapshot of a suspect, or a diagram of emergency exits.

If you are sharing an image with users or Smart Walls that cannot access the network location of the image file, you can embed the image by clicking **Embed** on the **Properties** pane. When you embed an image it is stored in Smart Client, and the connection to the original file location is removed. If you remove or replace an embedded image from a Smart Wall and want to display it again, you must add the image file to the Smart Wall again.

Tip: If you want to share floor plans or maps, consider using the Map feature (see "Maps" on page 94). The Map feature is available only for certain surveillance systems (see "Surveillance system differences" on page 11).

The procedures in this topic assume that you have already added a Smart Wall overview to a view. For more information, see Start working with a Smart Wall (on page 142).

To display an image on a Smart Wall, follow these steps:

1. On your computer, go to the location of the image file.
2. In Smart Client, on the Navigation pane, select the view that contains your Smart Wall overview.
3. Drag the image file to the tile in the overview where you want to display the image.

Note: When you drag an image to the Smart Wall overview, the system automatically embeds the image and the Properties pane is not available.

To display an image on more than one Smart Wall, follow these steps:


1. Select the view that contains your Smart Wall overview, and then click **Setup**.
2. In the **System Overview** pane, drag the **Image** item to a position in the view.
3. Select the image file that you want to add, and then click **Open**.

Note: When you add an image to a view, the system resizes the image to fit the position. This can distort the image. To avoid distortion, in the **Properties** pane for images, select the **Maintain image aspect ratio** check box.

4. On the **Properties** pane, click **Embed**.
5. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it. Repeat this step to send the image to each Smart Wall.

Take a snapshot and then display it on the Smart Wall

You can share a snapshot of an incident in the following ways:

1. On the **Live** or **Playback** tab, roll the mouse over the view item that is showing the footage.
2. On the view item toolbar, click the **Create Snapshot** icon . The system saves the image to the location specified in Application options.
3. To display the snapshot, drag the snapshot from the folder to a tile in the Smart Wall overview.



Add an overlay button to a view

You can activate speakers, events, output, and more through overlay buttons which appear when you move your mouse over individual camera positions in views on the **Live** tab.

You can add as many buttons as needed.

1. In setup mode, in the **Overlay Buttons** pane, select and drag the action onto the camera position.
2. When you release the mouse, the overlay button appears. To resize the button, drag the handles that appear.



3. If you want to change the text of the overlay button, double-click the text, overwrite it, and then click the check mark button  to save. To undo, click the cancel button . When you save, the text scales to the largest possible size on the button.

Add text to a view item or a Smart Wall

You can add text to a position in a view. For example, this is useful when you want to send a message or instructions to operators, or post a work schedule for security personnel. You can use up to 1,000 characters.

To add text to a view item, follow these steps:

1. Click **Setup**.
2. On the **System Overview** pane, drag the **Text** content to the view.
3. In the **Text Editor** window, you can do the following:
 - Enter the text that you want to display
 - Paste text that you copied from an external text editor, for example Microsoft Word or WordPad, by right-clicking and choosing **Paste**.
 - Apply basic formatting to the text, such as font types, sizes, and colors.
4. To save your text and start displaying it, click **Save**. If you want to change your text after you save it, you can open the Text Editor again from the **Properties** pane by clicking **Edit**.

Notes:

Resizing the Text Editor window changes the size of the text. Content added to view items is resized to fit the view item when it is displayed.

You can insert tables from products such as Microsoft Word and Microsoft Excel, but you cannot make changes to the tables. For example, you cannot resize rows, or add or remove them. Additionally, to accommodate for Network Video Management System Smart Clients dark and light themes, the system tries to change the color format of light or dark texts. If your text is not visible, apply a different color format to the text.

Display text on a Smart Wall

If you are using the Network Video Management System Smart Wall add-on, you can also display text on your video wall. For example, this is useful when you want to provide information to anyone who can see the video wall. The best way to share text depends on whether you want to display it on one Smart Wall, or send it to more than one Smart Wall.

Note: When you send text to a Smart Wall, only the original text displays. That is, if you edit the text in the view, the change does not display on the Smart Wall.

To display text on more than one Smart Wall, follow these steps:

1. Perform the steps described earlier in this topic for adding text to a view item.
2. After you save, click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the position on the monitor. Repeat this step to send the text to each Smart Wall.

To display the text on one Smart Wall, follow these steps:

Note: The steps in this procedure require that your text editor supports drag and drop operations. If your text editor does not, use the previous procedure in this section to send the text to the Smart Wall.

1. In Network Video Management System Smart Client, on the Navigation pane, select the view that contains your Smart Wall overview.

2. In your text editor, enter the text that you want to display, and then select it. If the text already exists, just select it.
3. Drag the text to the tile in the overview where you want to display it.
4. In the Text Editor, review the text, and make any changes required.
5. To save your text and start displaying it, click **Save**. If you want to change your text after you save it, you can open the Text Editor again from the **Properties** pane by clicking **Edit**.

Send video between views


You can send video from a selected camera position to another single-camera position in a view, including any views you may have in floating windows or on secondary displays. This feature is not available for hotspots (on page 77), carousels (on page 76), or Matrix (on page 107) positions.

- On the camera toolbar, click **More > Send Camera**, select the destination view, and then select the position in the view where you want the video for that camera to display.

If some of the camera positions are not selectable, they might be unavailable or used for hotspots, carousels, or Matrix content.

You can also send video content to separate windows (see "Multiple windows" on page 108) or displays.

Change cameras in views

You can temporarily change the cameras that are displayed in a view. However, this feature is for provisionally switching cameras; it does not permanently change the view. To restore your original view, click the reload view button on the workspace toolbar: . If you want to permanently change the content of a view (see "Add a camera to a view" on page 64), you must be in setup mode.


You cannot change cameras if the view contains a hotspot (see "Hotspots" on page 77), carousel (see "Carousels" on page 76), or Matrix (on page 107) content. If used from the **Cameras** pane, the feature works with Smart Wall (see "Network Video Management System Smart Wall" on page 139) positions as well.

This method can also be used for dragging cameras onto Smart Wall positions, but only if used on the **Live** tab.

1. Select the relevant position in the view.
2. In the **Cameras** pane, drag the relevant camera into the position in the view.

Alternatively, on the camera toolbar, click **More > Camera**, and then select the relevant server and camera.

The original camera is listed at the top of the right-click sub-menu and named (default). This lets you quickly switch back to your original view.


In the **Cameras** pane, the list of cameras is grouped by server . If a server is listed with a red icon, it is unavailable, in which case you will not be able to select cameras from that server.

Tip: If camera shortcut numbers have been defined, you can use keyboard shortcuts (on page 47) to switch between cameras. If a camera shortcut number has been assigned, it appears in parentheses in front of the camera name.

Swap cameras (on page 71)

Swap cameras

You can temporarily swap two cameras in a view by dragging one of the cameras to a different position. The camera in that position then exchanges places with the one you swap it with. You can only swap cameras with other cameras. This can be useful, for example, if you want to keep all your most important cameras in a certain position in your view. If you want to make permanent changes to your view, you must first be in setup mode.

- To swap cameras, click the relevant camera title bar and drag it to the relevant position.
- To restore the original view, click the reload view button on the workspace toolbar: .

Switch cameras in views (see "Change cameras in views" on page 70)

Use an HTML page for navigation

In addition to displaying video, the Sony - Network Video Management System Smart Client is able to display static images and HTML pages. Such HTML pages may be used for intuitively switching between different views in the Sony - Network Video Management System Smart Client.

For example, you may insert a clickable floor plan of a building, and you would be able to simply click a part of the floor plan to instantly switch to a view displaying video from the required part of the building.

In the following, you will see examples of HTML pages for Sony - Network Video Management System Smart Client navigation: a simple HTML page with buttons, and a more advanced HTML page with a clickable image map. For surveillance system administrators wishing to create and distribute such HTML pages to Sony - Network Video Management System Smart Client users, a check list outlining the tasks involved is also provided.

Tip: The Sony - Network Video Management System Smart Client is highly flexible when it comes to customizing navigation and other features. For advanced users it is possible to create approximately 100 different function calls in the Sony - Network Video Management System Smart Client.

Example of an HTML page with button navigation

A very quick solution is to create an HTML page with buttons for navigation. You are able to create a wide variety of buttons on the HTML page. In this example, we will just create two types of buttons:

- **Buttons for switching between the Sony - Network Video Management System Smart Client's views**

Required HTML syntax:

```
<input type="button" value=" Buttontext"
onclick="SCS.Views.SelectView('Viewstatus.Groupname.Viewname');">
```

Where **Viewstatus** indicates whether the view is shared or private (if the HTML page is to be distributed to several users, the view **must** be shared).

Example from a real button:

```
<input type="button" value="Go to Shared Group1 View2"
onclick="SCS.Views.SelectView('Shared.Group1.View2');">
```

This button would allow users to go to a view called **View2** in a shared group called **Group1**.

- **Buttons for switching between tabs: Live and Playback**

Bear in mind that, depending on their user rights, some users may not be able to access all tabs.

Required HTML syntax:


Live tab: `<input type="button" value="Buttontext" onclick="SCS.Application.ShowLive();" >`

Playback tab: `<input type="button" value="Buttontext" onclick="SCS.Application.ShowPlayback();" >`

Tip: For advanced users it is possible to create many other types of buttons using the approximately 100 different function calls available for the Sony - Network Video Management System Smart Client. See Scripting for more information.

In the following we have created two shared groups in the Sony - Network Video Management System Smart Client . We have called them **Group1** and **Group2**. Each group contains two views, called **View1** and **View2**.

We have also created an HTML page with buttons allowing users to switch between our four different views as well as between two of the Sony - Network Video Management System Smart Client 's tabs, **Live** and **Playback**. When viewed in a browser, our HTML page looks like this:

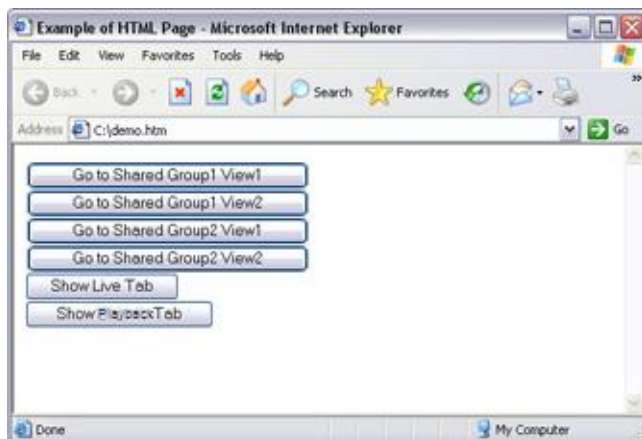


HTML page with buttons for navigating between views and tabs

We have saved the HTML page locally, in this case on the user's C: drive. When the HTML page is to be used for navigation, saving the HTML page locally is necessary because of security features in Internet Explorer.

When saving the HTML page locally, save it at a location to which an unambiguous path can be defined, for example in a folder on the user's C: drive (example: C:\myfolder\file.htm). Saving the HTML page on the user's desktop or in the user's **My Documents** folder will not work properly due to the way Windows constructs the path to such locations.

We then imported the HTML page into the required Sony - Network Video Management System Smart Client views. When importing the HTML page, we made sure to select **Enable HTML scripting** in the HTML page's **Properties** in setup mode.

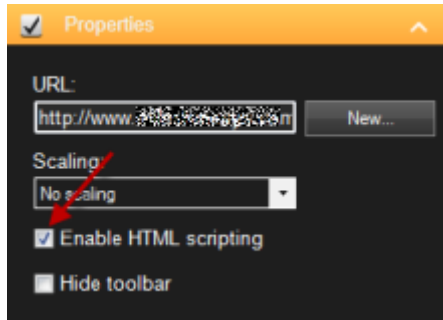


Selecting **Enable HTML scripting** ensures that the scripting required for the buttons to work is automatically inserted in the HTML page.

Example of an HTML page with image map navigation

You can also create an HTML page with more advanced content, for example, an image map allowing users to switch between views.

In the following example we have kept the two groups and two views from the previous example. Instead of using buttons, we have created an HTML page with an image of a floor plan, and created an image map based on the floor plan. Viewed in a browser, our HTML page looks like this:

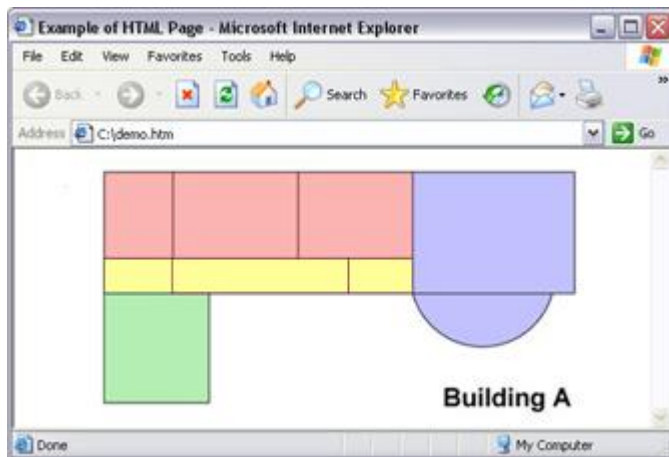

HTML page with image map for navigating between views

For this example, we divided the floor plan into four colored zones, and defined an image map area for each zone. Users can click a zone to go to the view displaying cameras from that zone.

For instance, the red zone on our image map mirrors the **Go to Shared Group2 View2** button from the previous example. If you click the red zone, you will go to View2 in Group2.

Importing the HTML page

Importing a navigation HTML page into a view is in principle no different from importing any other type of HTML page into a view in the Sony - Network Video Management System Smart Client . The two important things to remember are:

- The HTML page should be stored locally on the user's PC

You should make sure HTML scripting is enabled on the HTML page when importing it. To import the HTML page:

1. In setup mode, in the **System Overview** pane, drag the **HTML Page** item to the required position in the required view.
2. In the **Open URL** window, specify the HTML page.
3. Select the position in the view, and in the **Properties** pane, select **Enable HTML scripting**.

Selecting **Enable HTML scripting** ensures that the scripting required for your buttons or other navigation features to work is automatically inserted in the HTML page.

4. Depending on the navigation features you have included on your HTML page, you may often want to import the HTML page into several views in order for the navigation to fully work.

System administrator's check list

Surveillance system administrators wanting to create and distribute navigation HTML pages to Sony - Network Video Management System Smart Client users, do the following:

1. **Create** the required HTML page. The navigation controls in the HTML page must match the views users see in the Sony - Network Video Management System Smart Client. For example, in order for a button leading to View1 to work, a view called View1 must exist in users' Sony - Network Video Management System Smart Clients. If you intend to distribute the HTML page to a group of users, the views in which the HTML page will be used should be placed in shared groups.
2. **Save** the HTML page locally on each computer on which it will be used. When saving the HTML page locally, save it at a location to which an unambiguous path can be defined, for example in a folder on the user's C: drive (example: C:\myfolder\file.htm). Saving the HTML page on the user's desktop or in the user's **My Documents** folder will not work properly due to the way Windows constructs the path to such locations.
3. **Import** the HTML page into the Sony - Network Video Management System Smart Client views in which it will be used. Having imported the HTML page, select its position in the view, go to the **Setup** tab's **Properties** pane, and verify that **Enable HTML Scripting** is selected.
4. **Test** that the navigation controls on the imported HTML page work as intended.
5. **Enjoy** simple and intuitive Sony - Network Video Management System Smart Client navigation, tailored to meet your organization's needs.

Troubleshooting

If your HTML navigation page does not work as intended, consider the following:

- Have you used the correct syntax in your HTML?
- Have you selected **Enable HTML Scripting** after importing the HTML page?
- Does the intended audience have the rights to required benefit from the HTML navigation page? Bear in mind that depending on their user rights, some users may not have access to certain cameras, views, features or tabs in their Sony - Network Video Management System Smart Client.

Frequently asked questions: views

Can I view video immediately without setting up views?

Yes. Many Sony - Network Video Management System Smart Client users can view video in their Sony - Network Video Management System Smart Client immediately, without the need to set up views first.

Private views: If connected to certain types of surveillance system (see "Surveillance system differences" on page 11)—primarily small surveillance systems with few cameras—the surveillance system server can automatically generate a single private view with all the system's cameras. Such a view is called a **default view**. If you have access to a default view, you can begin viewing video in your Sony - Network Video Management System Smart Client immediately because the default view will automatically be displayed the first time you log in to your Sony - Network Video Management System Smart Client.

Shared views: Shared views may already have been created by the surveillance system administrator or by some of your colleagues. If shared views already exist, and you have access to them and the cameras they contain, you can begin viewing video in your Sony - Network Video Management System Smart Client immediately.

Why do I need to recreate my views?

From time to time your surveillance system administrator may make changes to camera or user properties on the surveillance system. Such changes take effect in the Sony - Network Video Management System Smart Client when you log in for the first time after the changes were made, and they may occasionally require you to re-create your views.

What if I cannot create private or shared views?

Typically only a few people in an organization are able to create and edit shared views. Your surveillance system administrator may create and maintain a number of shared views. When you log in, the shared views will automatically be available to you, so you will not need to create further views.

How can I see which views I have access to?

Typically, your surveillance system administrator will have told you if you have access to shared views. If not, you can quickly determine if any shared views are available to you.

On the **Live** or **Playback** tab, the Views pane will always contain a top-level folder called Private. The Private top-level folder is for accessing private views, and its content depends upon which views—if any—you have created for yourself.

Any other top-level folders in the Views pane are for accessing shared views. The names of these top-level folders depend on what has been configured.

The fact that the Views pane contains one or more top-level folders for accessing shared views does not in itself guarantee that shared views are actually available. To verify if any shared views are available under the top-level folders, expand the folders.

How can I see which views I can edit?

If a folder has a padlock icon, it is protected and you cannot create new views or edit existing views to it.

Can I see my views on different computers?

Your user settings, including information about your views, are stored centrally on the surveillance system server. This means that you can use your views, private as well as shared, on any computer that has a Sony - Network Video Management System Smart Client installed, provided you log in to the Sony - Network Video Management System Smart Client with your own user name and password.

Can I add an overlay button for an action if I do not have rights to perform the action myself?

Yes. This enables you to make buttons available on shared views, where colleagues with the necessary rights will be able to use the buttons, even if you do not have rights to use them yourself.

When you add a button for an action you do not have rights for, the button will appear dimmed in setup mode and will not appear when you use the **Live** tab. Colleagues with the necessary rights will be able to use the button on the **Live** tab.

What if my rights change after I have added an overlay button?

Changes to your rights will affect the way you can use any buttons and they will either appear dimmed or available depending on whether or not you have user rights for those actions. For example, if you add a button for an action you do not have rights to perform and then your user rights change so that you do have the necessary rights, the button will change to available.

How do I delete an overlay button?


In setup mode, right-click the button, and select **Delete**.

Will overlay buttons appear in exported video?

No, if you export (see "Using the advanced workspace" on page 20) video, overlay buttons are not included in the export.

Carousels

About carousels

A carousel is used for displaying video from several cameras, one after the other, in a single position in a view. You can specify which cameras to include in the carousel as well as the interval between camera changes. Carousels are displayed with the carousel icon on the toolbar: .

Fisheye lens cameras cannot be included in a carousel.


You can maximize a carousel by double-clicking the carousel position. When you do this, video from cameras included in the carousel is by default displayed in full quality, regardless of your image quality selection. This default cannot be overridden for carousels.


Place your mouse over the carousel toolbar to access the carousel buttons that let you copy the current carousel image to your clipboard, take a snapshot, pause or play the carousel, or step forward or backward in the camera sequence.



You can use digital zoom and PTZ controls from a carousel if the camera supports this. When you use the PTZ (see "PTZ images" on page 52) or digital zoom controls that appear, the carousel pauses automatically.

Add a carousel to a view or a Smart Wall

1. In setup mode, in the **System Overview** pane, click and drag the **Carousel** item to the position in the view.
2. In the **Carousel Setup** window, on the left, click to expand the servers  and then click to select the camera you want to include in the carousel. Click Add. Repeat for each camera you want to include in the carousel.

If a server has a red icon , it is unavailable, in which case you will not be able to view a list of cameras from that server.

3. To determine the sequence the cameras appear in the carousel, in the **Selected cameras** list, select the camera and move up or down.
4. Enter the number of seconds each camera appears in the carousel. You can specify a value for all cameras, or for each camera.
5. Click **OK** to close the **Carousel Setup** window.

To change settings for the carousel, click **Setup**, and in the **Properties** pane, click **Carousel Setup** to open the **Carousel Setup** window.

Display a carousel on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display carousels.

1. Follow the steps for adding a carousel to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the carousel to a tile in the overview.

Carousel settings

In the **Properties** (see "Camera settings" on page 80) pane, you can specify the settings for the carousel. The **Live Stream, Image Quality, Frame Rate, and Maintain Image Aspect Ratio** settings apply to all cameras in the carousel.


Hotspots

About hotspots

A hotspot lets you view magnified and/or higher quality video from a selected camera in a dedicated position in a view. Hotspots are useful because you can use a low image quality and/or frame rate for cameras in the view's regular positions and a high image quality and/or frame rate for the hotspot. This saves bandwidth on your remote connections.

There are two types of hotspots:

- Global hotspots, which display the selected camera regardless of whether the camera is in the main window or in a secondary display
- Local hotspots, which only display the selected camera of the local display

It is a good idea to have a hotspot in one of the view's larger positions, for example, the large position in a **1+7** view: .

If a position in one of your views contains a hotspot:

- When you click a camera in a view, the hotspot position updates with that camera's feed
- The title bar displays the hotspot icon: 

When you view live or recorded video, you can double-click a hotspot (or any other camera position in a view) to maximize it. When you do this, the video in the hotspot is displayed in full quality, regardless of your image quality selection. If you want to make sure that the selected image quality also applies when maximized, in **Setup** mode, in the **Properties** pane, select **Keep when maximized**.

Add a hotspot to a view or a Smart Wall

1. In setup mode, in the **System Overview** pane, click and drag the **Hotspot** item to the required position in the view.

Tip: Note that the position now displays a hotspot icon:  to indicate that it is a hotspot.

2. Specify the properties for the hotspot (see "Hotspot settings" on page 78) in the **Properties** pane. To save bandwidth, you can specify a low image quality for the other positions in your view and a high quality for the hotspot.

Add a hotspot to a Smart Wall

If you are using Network Video Management System Smart Wall, you can display hotspots.

1. Follow the steps for adding a hotspot to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the hotspot to a tile in the overview.


Hotspot settings

In the **Properties** (see "Camera settings" on page 80) pane, you can specify the settings for the hotspot. The **Live Stream, Image Quality, Frame Rate, and Maintain Image Aspect Ratio** settings apply to all cameras in the hotspot.

Cameras

Some of the following features are only available in certain surveillance systems (see "Surveillance system differences" on page 11).

Add a camera to a view

1. In setup mode, select the view you want to add a camera to.
2. In the **Overview** pane, expand the required server  to view a list of available cameras from that server.

Often, you will only see a single server, but if you are connected to a large surveillance system, you may see a hierarchy of several servers. If a server is listed with a red icon, it is unavailable, in which case you will not be able to view cameras from that server.

3. Select the camera from the list and drag it to the position in the view.

An image from the camera will—provided a connection can be established—appear in the selected position. If a connection cannot be established, just the camera name is displayed.

Tip: If parts of images are black, it is because privacy masks (on page 63) are in use.

You can specify the camera properties (such as quality, frame rate and more) in the **Properties** pane (see "Camera settings" on page 80).


Repeat for each camera required in the view.

Tip: If you want to add multiple cameras to a view in one go (for example all of the cameras from a camera folder under a server), simply drag the folder to the view. This automatically adds all the folder's cameras in the view from the selected position onwards. Make sure a sufficient number of positions are available in the view.

Tip: You can easily change which cameras are included in your view by dragging a different camera to the position.

Camera names and colored indicators

By default, the camera title bar displays the name of the camera. You can change this in setup mode on the **Live** tab, in the Properties pane (see "Camera settings" on page 80).

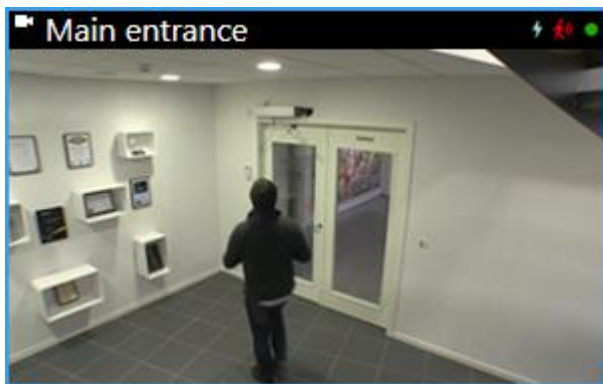

The round video indicator is placed in the upper right corner of the camera title bar. This indicator changes color to display the current status of the video in the view item. The list below describes the different colors:


- **Green** ● - A connection to the camera is established
- **Red** ● - Video from the camera is being recorded
- **Yellow** ● - Playing back recorded video
- **Gray** ● - The video has not changed for more than two seconds

The motion indicator 🚨 appears when motion is detected. Click inside the image to reset the motion indicator. This indicator will not appear if no motion has been detected.

The event indicator ⚡ appears when specific events occur. This is defined by the surveillance system administrator. Click inside the image to reset the event indicator. The indicator will not appear if event indication has not been specified for the camera, or if no specified events have occurred.


Note: This feature is only available in certain surveillance systems (see "Surveillance system differences" on page 11) and requires that notifications on events have been configured on the server.

Tip: Event and motion indications can be accompanied by sound notifications (on page 86).

The camera connection indicator  appears when the server connection to the camera is lost. A camera may stop working for various reasons, for example, if it has been configured only to be available during certain hours of the day, or because of camera or network maintenance, or a change in configuration on the surveillance system server.

Virtual joystick and PTZ overlay button

If your views include Fisheye cameras or lenses, or PTZ devices (see "PTZ and fisheye lens images" on page 51), you can navigate the images by clicking either the arrow mouse pointer (the virtual joystick) or the PTZ navigation buttons that appear inside the image.



The virtual joystick



PTZ overlay

Tip: If you don't want the camera toolbar to pop up when you move your mouse over the view, press and hold the CTRL key while moving the mouse.

Camera settings

In **Setup** mode, in the **Properties** pane, you can view and edit properties for the selected camera (the selected camera is indicated by a bold border in the view).

Name	Description
Camera name	Displays the name of the selected camera. To change the camera, click the ellipsis button to open the Select Camera dialog and select a different camera. This can be useful if you want to change the camera but keep the settings.
Live Stream	If available, select the live stream that you want to display in the view. If multiple streams have been set up on the server, you can select either Default or one of the available stream options. If you select another option than Default , you will not be able to edit Image quality or Frame rate settings.

Name	Description
<p>Image quality</p>	<p>Determines the quality of video when viewed, but also affects bandwidth usage. If your Sony - Network Video Management System Smart Client is used over the internet, over a slow network connection, or if for other reasons you need to limit bandwidth use, image quality can be reduced on the server side by selecting Low or Medium.</p> <p>When selecting a reduced image quality, images from the selected camera are re-encoded to a JPEG format on the surveillance system server before being sent to the Sony - Network Video Management System Smart Client. Re-encoding takes place along the following lines:</p> <p>Full: The default setting, providing the full quality of the original video.</p> <p>Super high (for megapixel): Re-encoding to an output width of 640 pixels (VGA) and a JPEG quality level of 25%.</p> <p>High: Re-encoding to an output width of 320 pixels (QVGA) and a JPEG quality level of 25%.</p> <p>Medium: Re-encoding to an output width of 200 pixels and a JPEG quality level of 25%.</p> <p>Low: Re-encoding to an output width of 160 pixels and a JPEG quality level of 20%.</p> <p>Height will scale according to the width and the aspect ratio of the original video.</p> <p>Your image quality selection will apply for live as well as recorded video, and for JPEG as well as MPEG. For MPEG, however, only keyframes will be re-encoded when viewing live video, whereas all frames will be re-encoded when viewing recorded video.</p> <p>While using a reduced image quality helps limit bandwidth use, it will—due to the need for re-encoding images—use additional resources on the surveillance system server.</p> <p>Tip: You can quickly reduce the bandwidth usage for all cameras in the view by reducing the image quality for a single camera, then clicking the Apply To All button.</p>
<p>Keep when maximized</p>	<p>When you view live or recorded video, you can double-click a particular camera position in a view to maximize it. When you do this, video from the camera is by default displayed in full quality, regardless of your image quality selection.</p> <p>If you want to make sure that the selected image quality also applies when video is enlarged, select the Keep when maximized box, located immediately below the Image quality setting.</p>
<p>Frame rate</p>	<p>Select a frame rate for the selected camera. Select between Unlimited (default), Medium, or Low. The combination of the frame rate you select and the way your surveillance system is set up (see "About frame rate effect" on page 85) affects the quality of your video.</p>

Name	Description
PTZ click mode	<p>Select a default PTZ click mode for your PTZ cameras. Options are click-to-center or virtual joystick. You can override this setting on individual cameras by selecting a different default PTZ click mode for the camera.</p>
Fisheye split mode	<p>Available only if the selected camera is a fisheye camera. Fisheye technology allows the creation and viewing of 360° panoramic images. The Sony - Network Video Management System Smart Client supports up to four different viewpoints from a single fisheye camera. The Fisheye split mode list lets you select the required split mode:</p> <p>No split lets you view a single viewpoint.</p> <p>Two by two lets you view four different viewpoints at a time.</p> <p>When viewed on any of the Sony - Network Video Management System Smart Client's tabs, the fisheye camera will appear as specified, with either one or four viewpoints from the same image.</p> <p>Tip: When you view different viewpoints from a fisheye camera, you can navigate each viewpoint independently by clicking inside each viewpoint, or by using the PTZ presets menu on the camera toolbar.</p>
Maintain Image Aspect Ratio	<p>If selected, video will not be stretched to fit the size of the camera position. Rather, video will be displayed with the aspect ratio (height/width relationship) with which it has been recorded.</p> <p>This may result in horizontal or vertical black bars appearing around the images from some cameras.</p> <p>If check box is cleared, video will be stretched to fit the position in the view; this may lead to slightly distorted video, but you will avoid any black bars appearing around the video.</p>
Update on motion	<p>If selected, video from the selected camera will only be updated on the Sony - Network Video Management System Smart Client's Live tab when motion is detected. Depending on the motion detection sensitivity configured for the camera on the surveillance system server this can help reduce CPU usage significantly.</p> <p>When video is only updated on motion, users will see the message No motion together with a still image in the camera's position in the view until motion is detected. The still image will have a gray overlay, making it easy to identify which cameras have no motion.</p>

Name	Description
<p>Sound on motion detection</p>	<p>When video from the camera is viewed on the Live tab, it is possible to get a simple sound notification when motion is detected.</p> <p>Sound notifications only work if video from the camera is actually displayed in your Sony - Network Video Management System Smart Client. Sound notifications will therefore not work if you minimize the window containing the camera in question. Likewise, if you maximize a camera in a view so only that camera is displayed, it will not be possible to hear sound notifications regarding other cameras.</p> <p>Always off: Do not use sound notifications on detected motion.</p> <p>Always on: Play a sound notification each time motion is detected on the camera.</p>
<p>Sound on event</p>	<p>This feature is only available with certain surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: http://www.sony.net/CameraSystem.</p> <p>Being able to use this feature requires that notifications on events have been configured on the surveillance system server.</p> <p>Sound notifications only work if video from the camera is actually displayed in your Sony - Network Video Management System Smart Client. Sound notifications will thus not work if you minimize the window containing the camera in question. Likewise, if you maximize a camera in a view so only that camera is displayed, it will not be possible to hear sound notifications regarding other cameras.</p> <p>When video from the camera is viewed on the Live tab, it is possible to get a simple sound alert when events related to the selected camera occur.</p> <p>Always off: Do not use sound alerts when events related to the camera occur.</p> <p>Always on: Play a sound alert each time an event related to the camera occurs.</p>

Name	Description
<p>Display settings</p>	<p>Use default display settings: Use default settings, as defined in the Options dialog, for showing title bar and video indicator for the selected camera. If you want a non-default behavior for the selected camera, clear the check box and select whether you want title bar and/or video indicator.</p> <p>Show title bar: Displays a title bar at the top of each camera position. The title bar helps users quickly identify cameras. When displayed on the Live tab, the title bar displays information about detected motion and events, whether the camera is recording, etc. See Camera names and colored indicators (on page 79).</p> <p>Note: If you choose not to display the title bar, you will not be able to see the visual indicators for motion and events. As an alternative, you can use sound notification.</p> <p>Show video indicator: Requires that Show title bar is selected. Displays a flashing green indicator in the title bar when displayed on the Live tab. The indicator changes state every time a new image is received from the camera, an effect which makes it easy to see that video is live. Often, it is evident from the video itself that it is live, but the video indicator can be advantageous at times when not much is happening in the camera's area of view.</p> <p>Show bounding box layer: Displays bounding boxes on individual cameras. Open the Bounding Box Providers (see "About Bounding Box Providers" on page 86) dialog box to specify the metadata devices to provide data to the camera.</p>

Name	Description
Video buffering	<p>This part of the Properties pane may not be visible. To view it, go to the Options window's (see "Configuring your Network Video Management System Smart Client" on page 32) Functions tab, and ensure that Setup > Edit video buffering is set to Available.</p> <p>If you require very smooth display of live video, without any jitter, it is possible to build up a video buffer.</p> <p>If possible, avoid using video buffering. Video buffering can significantly increase memory usage for each camera displayed in a view. If you do need to use video buffering, keep the buffering level as low as possible.</p> <p>When live video is stored in a buffer, it will display smoothly without any jitter, but the building up of the buffer will lead to a small delay in the display of live video. Such a delay is often not a problem for the person viewing the video. However, the delay may become very evident if the camera is a pan-tilt-zoom (PTZ) camera, and especially if you use a joystick to operate the camera.</p> <p>Being able to control the amount of video buffering lets you decide whether you want to prioritize smoothly displayed live video (requires buffering and leads to a small delay) or instant PTZ and joystick operation (requires no buffer, but may—due to the lack of a buffer—lead to a slight jitter in live video).</p> <p>To use video buffering, select Use default video buffer, then select the required buffer, from None to Maximum 2 seconds.</p>
Apply to All	<p>The Apply to All button lets you quickly apply the camera settings for the selected camera to all cameras in the view.</p>

About frame rate effect

The effect of the **Frame Rate** selection can be illustrated as follows:

Effect	Unlimited	Medium	Low
JPEG	Send all frames	Send every 4th frame	Send every 20th frame
MPEG (I-frame) H.264/H.265	Send all frames	Send all frames	Send all frames
MPEG (P-frame) H.264/H.265	Send all frames	Do not send any frames Do not send all frames	Do not send any frames Do not send all frames

Example:

If you set the **Frame rate** option to **Low** in your Sony - Network Video Management System Smart Client, and your system administrator has configured the camera to feed JPEG images at a frame rate of 20 frames per second, you will experience an average of 1 frame per second when viewing video from the camera. If your system administrator then configures the camera with a feed as low


as 4 frames per second, you will experience an average of 0,2 frames per second when viewing video from the camera.

About Bounding Box Providers

Requires that **Show bounding box layer** is selected. In the dialog box, enable the metadata devices that you want to provide data for the bounding boxes in videos from this camera. The list of devices is defined by your system administrator.

Bounding boxes

A bounding box is the rectangular border that encloses, for example, an object in a camera image. In the Sony - Network Video Management System Smart Client, a bounding box displays as a pink border in video.

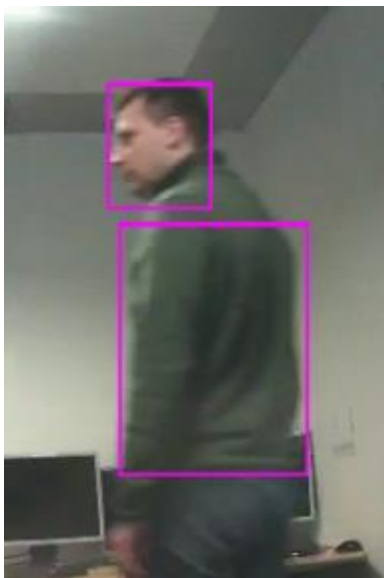

You can show/hide bounding boxes from individual cameras in **Display Settings** in the camera properties.

If bounding boxes are displayed on your screen, they also appear when you export (see "Network Video Management System format settings" on page 132) video in the Network Video Management System format or print (see "Print evidence" on page 137) still images.

Keyboard shortcuts and overlay buttons

Depending on your surveillance system (see "Surveillance system differences" on page 11), you can assign custom keyboard shortcuts (see "Configuring your Network Video Management System Smart Client" on page 32) and overlay buttons to trigger auxiliary commands (commands defined by the camera) to the camera positions in the view. Auxiliary commands differ from camera to camera; for details, see the documentation for the camera.

Sound notifications

Your Sony - Network Video Management System Smart Client may have been configured to notify you with a sound notification when:

- motion is detected on one or more specific cameras

- and/or -

- events (on page 129) related to one or more specific cameras occur

When you hear a sound notification, special attention may be required. If in doubt about whether or how sound notifications are used in your organization, consult your surveillance system administrator.

You can temporarily mute sound notifications for a specific camera: on the camera toolbar, click **More > Sound Notifications > Mute**.

When you minimize the Sony - Network Video Management System Smart Client window, sound notification is disabled.

To turn on sound notifications for the camera again, click **More > Sound Notifications > Mute** again.

The ability to mute sound notifications is not available for hotspots (on page 77), carousels (on page 76), or Matrix (on page 107) positions.

Frequently asked questions: cameras

Will I receive lots of sound notifications?

If you select **Always on**, the number of motion-related sound notifications will depend on the motion detection sensitivity of the camera. If motion detection for the camera is highly sensitive, you may receive very frequent sound notifications. The camera's motion detection sensitivity is configured on the surveillance system server. If you select sound notifications for more than one camera, you may also hear more notifications—again depending on the cameras' motion detection sensitivity.

What is jitter?

Jitter is small variations in the video which the viewer can perceive as irregular movement, for example when viewing a person walking.

What is an event?

An event is a predefined incident occurring on the surveillance system. Depending on the surveillance system's configuration, events may be caused by input from external sensors connected to cameras, by detected motion, by data received from other applications, or manually through user input. Events are used by the surveillance system for triggering **actions**. Typically, most events on the surveillance system are generated automatically. For example, detected motion can be defined as an event which in turn triggers an action, for example, recording.

Can I change the notification sound?


By default, the Sony - Network Video Management System Smart Client uses a simple sound file for its sound notifications. The sound file, called **Notification.wav**, is located in the Sony - Network Video Management System Smart Client installation folder, typically **C:\Program Files\Sony\ - Network VMS Smart Client**. If you want to use another .wav file as your notification sound, simply name the file **Notification.wav** and place it in the Sony - Network Video Management System Smart Client installation folder instead of the original file. The file **Notification.wav** is used for event- as well as motion-detection notifications. You cannot use different sound files for different cameras or to distinguish between event- and motion-detection notifications.

The camera navigator

This feature is only available for selected surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

About the camera navigator

The camera navigator allows you to see several cameras in relation to each other, for example, as they are laid out according to a floor plan. This can be useful if you would like to follow someone or something from one camera to another, for example, to follow suspects as they move around a building. By setting up your cameras according to their location on a map or floor plan, you can navigate from one camera to the next from a single view.

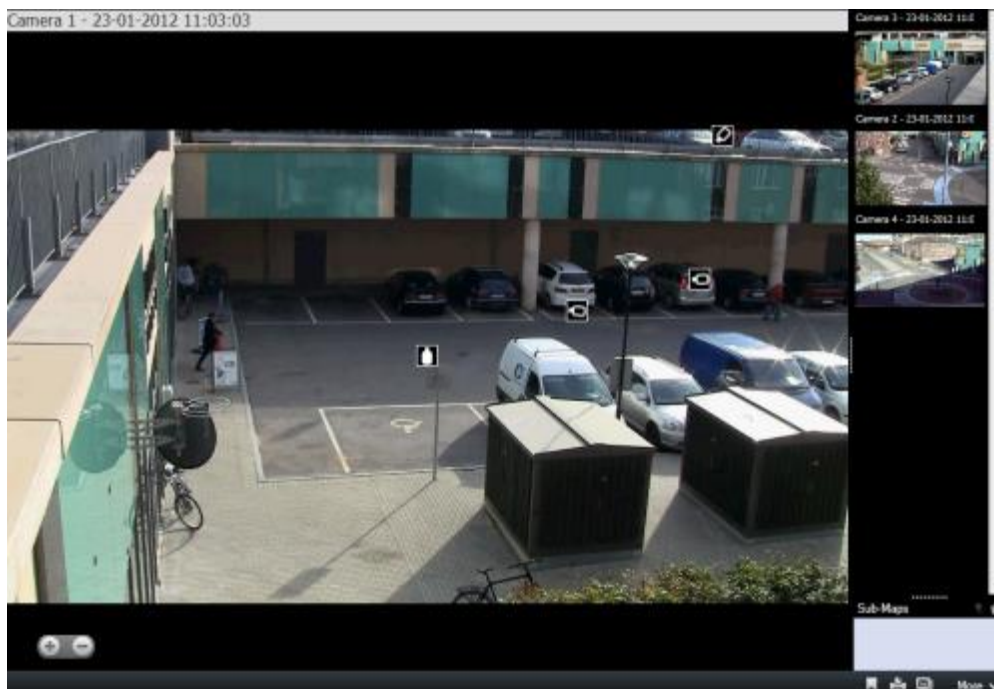

On the **Live** and **Playback** tabs, you can see the video from the current camera in the camera navigator view, with thumbnail views of all the nearby cameras sorted according to proximity on the pane on the right. When you point to any of the other cameras, either in the main view or the pane on the right, the camera is shown highlighted in red. You can click directly on the camera icons or in the pane on the right to change from one camera to the next.

You can base your views on several maps that link to each other through hot zones, allowing you to follow movement from a camera on one map to another camera on a sub-map, just as you would a person moving from one floor to another or outside your building. The **Sub-Maps** pane gives you access to the cameras set up on maps that are linked via hot zones on a map.

When you click from one camera to the next, a **Back** button appears next to the **Home** button above the camera preview pane. This lets you click back through your camera selection or home to your default camera view. In the **Sub-Maps** view, you can also click **Up** to a previous map or **Home** to your default view.

Using the camera navigator

Before you can use the camera navigator, you must set up a map and add cameras to it. When you have added the camera navigator to a view (see "Add a camera navigator to a view or a Smart Wall" on page 90), you can define properties (see "Camera navigator settings" on page 89) for how you want the camera navigator to display the views.

You can add existing maps or create new ones.

1. In setup mode, in the **System Overview** pane, drag the **Map** item to a position in the view.
2. In the **Map Setup** window that appears, select either **Create new map** or **Use existing map**.

A triangle next to a map name indicates that the map might have one or more sub-maps. Sub-maps and the elements they contain are also added.

3. In the **Name** field, enter a name for the map. The name will be displayed in the map position's title bar.

Tip: If you leave the **Name** field blank and click **Browse...**, the **Name** field displays the name of the image file you select.

4. Click **Browse...** to browse for the image file to use as a map.
5. Click **Open** to select image file.
6. Click **OK**.

Display a map on a Smart Wall



If you are using Network Video Management System Smart Wall, you can display maps.

1. Follow the steps for adding a map to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the map to a tile in the overview.

Camera navigator settings

In the **Properties** (see "Camera settings" on page 80) pane, you can specify these settings for the camera navigator.

Name	Description
Home map and camera	Displays the map and default camera that your camera navigator is based on. You can change these settings, by clicking the  button to open the Select Home Map and Camera window.
Maximum camera indicators	Select the maximum number of cameras that you want to include in your main view. Each camera is shown with a camera icon  . You can display an unlimited number of cameras.

Name	Description
Camera indicator orientation	Select Relative to selected camera if you want to display the location and orientation of the cameras as seen from the camera's perspective or Select Relative to map if you want the location and orientation of the cameras to always reflect the layout of the map as seen from above. The selected camera is always the centered one.
Maximum preview cameras	Select the maximum number of cameras that you want to display in your preview pane. Only the cameras that are visible on the screen will use your system's resources. The maximum number of cameras that you can display is 20. Note that the more cameras that you preview, the more of your system resources they will take up.

Add a camera navigator to a view or a Smart Wall

Camera navigators let you set up a complete overview of an area by adding all cameras that cover the area in a single view. For example, this is useful if you want to be able to follow someone around a building. As the person moves, you can switch to the next camera. For more information, see About the Camera Navigator (on page 88).

To add a camera navigator to a view, follow these steps:

1. Click **Setup**.
 - Tip:** To get the most out of the camera navigator and to be able to see the camera views in the pane on the right, select a 1 x 1 view.
2. From the **System Overview** pane, drag the **Camera Navigator** to your view.
3. In the **Select Home Map and Camera** window, select the map that you want to base your navigation on.
4. Click the camera that you want to select as the default camera whenever you open the **Camera Navigator**, and then click **OK**.
5. Click **Setup** to exit setup mode.

Display a camera navigator on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display a camera navigator.

Note: When you send a camera navigator to a Smart Wall, the navigator uses only the original settings. That is, if you select a different camera in the view, the Smart Wall does not display the change.

1. Follow the steps for adding a camera navigator to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the camera navigator to a tile in the overview.

Audio

Support for specific audio features may vary from system to system (see "Surveillance system differences" on page 11). Access to recorded audio, or certain recorded audio features, may be restricted depending on your user rights. Consult your surveillance system administrator if in doubt.

About audio

The Sony - Network Video Management System Smart Client supports both incoming and outgoing audio. You can listen to live recordings from microphones attached to cameras as well as use loudspeakers connected to cameras to talk to audiences. When you play back recorded video, you can hear the corresponding audio if the cameras have microphones and/or speakers attached. When you select a camera or view, the corresponding microphone and/or speaker is also selected by default.

Tip: If your views contain maps, these maps may contain microphones and/or speakers. When this is the case, you can listen to audio by clicking the relevant microphone or speaker element. Click and hold down the mouse button for as long you want to listen or talk.

Audio settings

Tip: You can listen to recorded audio independently of the views/cameras you are watching. You must specify a time in the **Playback** tab's navigation feature to determine what recorded audio to hear.

Name	Description
Microphones	Select the microphone you want to listen to audio from. If the Microphones list displays No microphone hardware, your computer does not have the required hardware for playing audio from the surveillance system. Typically, this occurs because your computer does not have an audio card installed. If the list displays No microphone sources , no microphones attached to cameras are available.
Mute	Select to mute either microphones or speakers (muting speakers is only available on the Playback tab).
Speakers	Select the speaker you want to talk through. If the Speakers list displays No speaker hardware , your computer does not have the required hardware for playing audio from the surveillance system. Typically, this occurs because your computer does not have an audio card installed. If the list displays No speaker sources , no speakers attached to cameras are available. If your surveillance system has speakers attached to multiple cameras (and you have the necessary rights to access them), you can talk through all the speakers simultaneously by selecting All speakers from the Speakers list.

Name	Description
Talk	Click and hold down the mouse button for as long as you want to talk.
Level Meter	The Level Meter indicates the level of your voice. If the level is very low, you may need to move closer to your microphone or adjust your audio settings in Windows. If the Level Meter shows no level at all, check that the microphone is connected and correctly set up.
Lock to selected audio devices	<p>When you select a camera or view, the corresponding microphone and/or speaker is also selected by default. However, if you want audio for a specific camera regardless of the ones you are viewing, you can select Lock to selected audio devices.</p> <p>Example: You need to listen and talk to a crime victim through microphones and speakers attached to camera A, but you also urgently need to view cameras X, Y and Z, some of which are displayed in different positions in the view. By selecting Lock to selected audio devices, you can communicate with the victim on camera A while viewing the other cameras at the same time.</p>
List only devices from current view	<p>If your surveillance system contains large numbers of microphones and/or speakers, the lists from which you select microphones and speakers in the Audio pane can be very long. To avoid this, you can limit the lists to only contain microphones and speakers relevant to your current view by selecting List only devices from current view.</p> <p>Note that in this context, current view also includes any views you have open as floating views and on primary and secondary displays (see "Multiple windows" on page 108).</p>

Talk to an audience

IMPORTANT: The surveillance system can record incoming audio from microphones attached to cameras, even if no video is being recorded. However, outgoing audio transmitted through speakers attached to cameras is only recorded on some surveillance systems (see "Surveillance system differences" on page 11).

There are three ways of talking to audiences through speakers attached to cameras, either by using the **Audio** pane, by using overlay buttons, or by using speaker functionality on maps.

Talk through speakers

1. On the **Live** tab, in the **Audio** pane, under **Speakers**, select the relevant speakers from the **Talk to:** list. See Audio settings (on page 91) for specific information about speaker settings.

If your surveillance system has speakers attached to multiple cameras (and you have the necessary rights), you can talk through all the speakers simultaneously by selecting **All speakers**.

Alternatively, if a position in a view has an overlay button or a map with speaker elements, you can click these.

2. Click and hold down the **Talk** button while you talk. Keeping the button pressed down when you speak gives you full control over what is actually transmitted through the speakers.

Frequently asked questions: audio

Why is the Speakers list not available?

Some surveillance systems do not support two-way audio. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

Can I adjust the recording volume of a microphone connected to a camera?

This feature does not exist in the Sony - Network Video Management System Smart Client. However, you may be able to adjust the recording volume either on the microphone or through the configuration interface of the camera device that has the microphone attached. Consult your surveillance system administrator if in doubt.

Can I adjust the output volume of speakers connected to a camera?

This feature does not exist in the Sony - Network Video Management System Smart Client. However, the **Level Meter** in the **Audio** pane gives an indication of the input level which, in turn, gives an idea of the output level.

You may be able to adjust the output volume either on the speakers or through the configuration interface of the camera device that has the speakers attached. You can also adjust your audio settings in Windows. Consult your surveillance system administrator if in doubt.

Will other Sony - Network Video Management System Smart Client users be able to hear what I say through speakers?

As a rule, other Sony - Network Video Management System Smart Client users cannot hear what you say. However, if microphones are located near the speakers you are talking through, it may be possible to hear you.

Can I talk through multiple speakers at the same time?

Yes, if your surveillance system has speakers attached to multiple cameras (and you have the necessary rights to access them), you can talk through all the speakers at once. In the **Audio** pane, in the **Speakers** list, select **All speakers**, then click and hold the **Talk** button when you talk.

If you have selected List only devices from current view in the Audio pane, you will not see all speakers.

Will audio from microphones attached to cameras be recorded?

Incoming audio, from microphones attached to cameras, is recorded, even when no video is being recorded.

Will what I say through speakers be recorded?

The surveillance system can record incoming audio from microphones, even when no video is being recorded. However, outgoing audio transmitted through speakers can only be recorded, played back, and exported on some surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

Depending on your surveillance system, recordings can be used, for example, to prove that a Sony - Network Video Management System Smart Client operator gave an audience specific instructions through speakers.

Do I get an indication of my voice level when I talk through speakers?

Yes, in the **Audio** pane, the **Level Meter** indicates the level of your voice. If the level is very low, you may need to move closer to the microphone. If the Level Meter shows no level at all, verify that the microphone is connected and correctly set up.


Maps

Introduction to maps

The map feature is only available for selected surveillance systems (see "Surveillance system differences" on page 11). A map position does not display live video, a map is always a still image.

With a map, you get a physical overview of your surveillance system. You can instantly see which cameras are placed where, and in what direction they are pointing. You can use maps for navigation. Maps can be grouped into hierarchies, so you can drill down through hot zones, from large perspectives to detailed perspectives, for example, from city level to street level, or from building level to room level.

Maps may contain elements representing cameras, microphones and similar technology. You can view recorded video from cameras (see "View recorded video from cameras on a map" on page 103) in a preview window when you move your mouse over a camera icon on the map. The status information in playback mode is **not** based on recorded data, but retrieved from the elements' current status, as displayed in live mode.

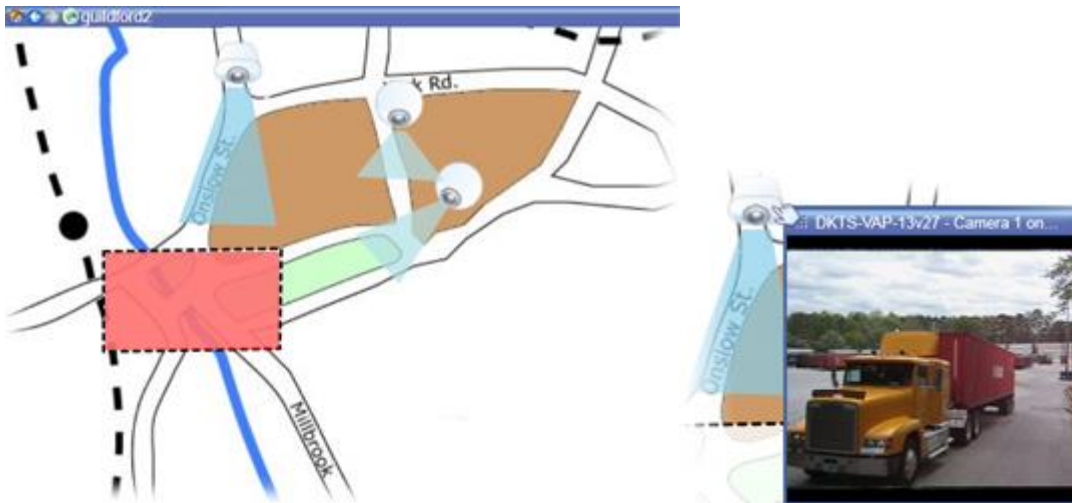

Map with camera elements and hot zone

Maps do not have to be geographical maps, although they often are. Depending on your organization's needs, photos and other kinds of image files can also be used as maps.

You can use map elements to interact with the actual devices in the following ways:

Cameras

Place your mouse pointer over a camera on a map to see a live preview from the camera. Click the title bar of the preview to display it as a separate floating window. You can resize the floating window by pulling its corners. To start recording, right-click the required camera and select **Start Recording for # Minutes**. Particular user rights may be required to use this feature.

A **fixed camera** is displayed on the map with an associated view zone that shows the camera's angle of view. Note that the angle on the map is very likely to need adjustment to match the camera's angle of view. To adjust the angle, simply drag it to a suitable size and position.

A **PTZ camera** is displayed on the map with any PTZ presets defined for the camera on the surveillance system. The presets are illustrated as colored angles that radiate from the PTZ camera icon. Each angle represents a particular preset. Note that the angles are very likely to need adjustment to match the camera's preset angles. To adjust an angle, simply drag it to a suitable size and position. If a camera has more than 25 presets, no angles are initially displayed since the angles would be too small to be useful. In such cases, you can add required angles individually by dragging the presets from the required camera from the **Element Selector** window onto the map. To go to one of a PTZ camera's presets, simply click the preset on the map. This works in the floating preview window, on the map itself, as well as in hotspot positions (see "Hotspots" on page 77). Alternatively, right-click the camera, select **PTZ Presets**, then select the required preset.

Microphones

Place your mouse over a microphone; press and hold the left mouse button to listen to incoming audio from a microphone, or right-click the microphone and select **Listen to Microphone**. You cannot use microphones in map views in playback mode.

Speakers

Place your mouse over a speaker; press and hold the left mouse button to talk through the speaker. You cannot use speakers in map views in playback mode.

Events

Click an event on the map to activate it, or right-click the event and select **Activate Event**. When left-clicking an event, the mouse pointer briefly changes to a lightning symbol to indicate that the event is being activated.

Alarms

Click an alarm on the map to view it, or right-click the alarm and select **Activate Alarm**. Right-click to acknowledge the alarm.

Output

Click an output on the map to activate it, or right-click the output and select **Activate Output**. When you click an output, the mouse pointer briefly changes to a lightning symbol to indicate that the output is being activated.

Hot zones

A hot zone is usually colored, so it is easy to recognize. Click a hot zone to go to the sub-map associated with the hot zone, or right-click the required hot zone and select **Go to Sub-map**.

If the hot zone appears with a dotted outline, no map is associated with the hot zone.

On some surveillance systems, maps from several different servers may be in a map hierarchy. This can mean that when you click a hot zone, the sub-map is unavailable because its server is unavailable. Servers can become unavailable because of scheduled maintenance or network problems. Contact your surveillance system administrator if the problem persists.






A hot zone can point to a map that you do not have access rights to and the Sony - Network Video Management System Smart Client will inform you about this. Because user rights can be time-

based, you might not be able to access a map that you could previously. This can be because you do not have access during certain hours of the day or certain days of the week. Contact your surveillance system administrator if in doubt about your user rights.

Plug-ins

Plug-in elements are available only if used on your surveillance system. Examples of plug-in elements: access control systems, fire detection systems, etc.

Status visualization is a feature that graphically displays the status of elements added to a map. When a map is fully operational and in the normal state, no visual status indication is presented. The **Status Visualization** window lets you define the visual appearance of maps' status indication.

	<p>Attention needed—when an element requires attention, but is still working; for instance when a server is running out of disk space. Note that the device in question is not necessarily included on the map. The default display color is yellow.</p>
	<p>Not operational—when there is an error on the element, for example if a server cannot connect to a microphone or speaker. The default display color is orange.</p>
	<p>Alarms—when an element has an alarm attached to it. The default display color is red.</p>
	<p>Disabled/status unknown—when an element has been disabled on the surveillance server, or when it is not possible to obtain status information from a server. The default color is purple.</p>
	<p>Ignore status—when an element has a status that does not need attention, for example, if you are already aware of what the issue is. The default color is blue.</p>


The status of a map mirrors the status of all elements on the map. Up to four names of affected servers can be listed in the map title bar. In cases where an unavailable server causes disabled elements on the map, but the server itself is not included on the map, the map is displayed in the **not operational** state, even though the map only contains **disabled** elements. If the unavailable server **is** included on the map, the map is simply displayed with the **disabled/status unknown**. Status information is also available in the **Map Overview**.



Example of map with status visualization

Change the appearance of status visualization

1. In setup mode, select the map. Right-click the map and select **Status Visualization**.

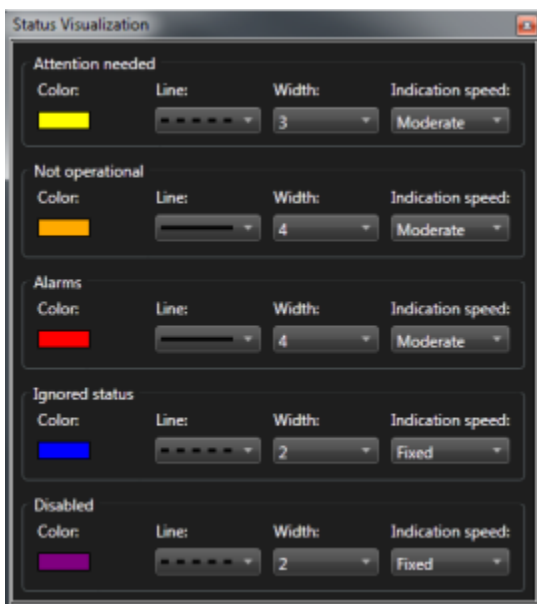


2. In the **Status Visualization** window, click the **Color** box to launch the **Color Selection** tool, and select a color for the status visualization line, then click the **Color** box again to fill the **Color** box with the selected color.
3. Select a line format from the **Line** list.
4. Select line thickness from the **Width** list.
5. To define how fast the status visualization flashes, select a speed from the **Indication Speed** list.
6. In the **Properties** pane, select **Status Visualization** to enable showing status visualization in live mode.

Tip: The status visualization applies to all maps, you do not need to define the status visualization appearance for each individual map.

Your status visualization settings may take some time to load and display correctly if you connect to a very large surveillance system with many maps. On complex systems, it can take 30 seconds or longer to correctly update status visualization.

Map settings

In setup mode, you can use the **Properties** pane to adjust a number of settings for individual maps.














Name	Description
Home map	Displays the map that forms the basis of the particular map view. The field is read-only, but you can change the map by clicking the selection button  to open the Map Setup window.

Name	Description
Change Background	Change the map, but keep the elements on the map in their relative positions to each other.
Rename Map	Edit the name of your map.
Icon size	The Icon size drop-down list lets you select the size of new elements added to the map, ranging from Tiny to Very large . You can re-size icons on the map by pulling the sizing handles in the corners of the icons.
Show name	The Name check box lets you enable/disable whether names of elements are displayed when adding new elements. Tip: If you have added an element to the map and the element name is not displayed on the map, right-click the required element and select Name . If you do not want the element name displayed, right-click the name and select Delete Text . Icon size drop-down list lets you select the size of new elements added to the map, ranging from Tiny to Very large . You can re-size icons on the map by pulling the sizing handles in the corners of the icons.
Allow pan & zoom	Select to allow pan and zoom on the map in live mode.
Auto maximize map	Select to automatically maximize the map to full screen in Live mode when the Sony - Network Video Management System Smart Client has not been used for the number of seconds defined in Timeout . The maximum number of timeout seconds is 99999.
On mouse over	Select to display a live video preview when you move the mouse over a camera.
Use default display settings	Select to define that the preview window looks the same as your other views. Clearing this check box lets you define the Title bar and Video indicator settings for previews. Title bar: select to display a title bar with the name of the camera. Video indicator: select to display the video indicator (see "Camera names and colored indicators" on page 79), which flashes green when the image is updated. You can only select Video indicator if you have also selected Title bar .
Status visualization	Select to graphically display the status of the elements (on page 96) added to a map.
Enable status details support	When selected, you can see status details on cameras and servers in live and playback mode.
Automatically change map on alarm	Select to automatically change the map in the preview when you select an alarm to display the map for the camera that the alarm relates to.
Only show on hover	Select to only show camera view zones and PTZ presets when you move your mouse over the camera, view zone or preset. This setting is useful if you have several cameras on a map with overlapping view zones or several presets. The default value is to show view zones and presets.

The toolbox

The map toolbox consists of a number of tools for configuring the map. Selecting either **Camera**, **Server**, **Microphone**, **Speaker**, **Event**, or **Output** opens the **Element Selector** with a list of cameras, servers, microphones, speakers, events, and output, allowing you to place these elements on the map.

Toolbox icons

	Camera		
	Server		
	Microphone	Selecting either Camera , Server , Microphone , Speaker , Event or Output opens the Element Selector with a list of cameras, servers, microphones, speakers, events, or output, allowing you to place these elements on the map.	
	Speaker		
	Event		
	Output		
	Hot Zone		Activates the hot zone drawing tool, allowing you to place hot zones on the map.
	Text		Opens the text tool, allowing you to place editable text boxes on the map.
	Plug-in	Opens the Element Selector with a list of plug-ins (if used in your organization), allowing you to place a plug-in element on the map.	
	Color Picker	Opens the color selection tool, and activates the color picker, allowing you to use a color already existing on the map.	
	Color Fill	Opens the color selection tool, allowing you to change the color of texts, backgrounds, hot zones, etc.	
	Selector	Activates the selector tool, allowing you to select elements on the map and pan and zoom the map.	
	Map Overview	Opens the Map Overview , allowing you to navigate between different maps.	

The right-click menu

By right-clicking maps or map elements on the **Setup** tab, you get access to a shortcut menu.

The right-click commands

The content of the shortcut menu differs depending on which map element you right-click. Different features are available from shortcut menus when maps are viewed in setup mode.

- **Remove [...]:** Lets you remove the selected element or map.

- **Center Map Here:** Centers the map around the clicked position
- **Zoom In**
- **Zoom Out**
- **Zoom to Standard Size:** Zooms the map to the standard size it was set up with
- **Home:** Lets you quickly jump to your home map
- **Back:** Lets you quickly return to the previous map
- **Forward:** Lets you quickly go to a map you have viewed earlier in this session
- **(From a PTZ camera preset) Go to Preset [preset]:** Lets you direct the camera to an predefined preset.
- **(From a camera) Live Preview:** Lets you see a live preview from the selected camera.
- **(From a camera) View Zone:** Lets you toggle on and off a fixed camera's view zone that shows the camera's angle of view.


The shortcut menu that appears when you right-click the map also displays other features, such as **Home Map Setup, Toolbox, Map Overview, Element Selector, Font Selection, Color Selection,** and **Status Visualization.**

Shortcut menus for individual elements (see " " on page 94) may have other content.

In addition to the common right-click menu items, the right-click menus of events and output also feature **Select Icon Type**, which lets you select whether the event icon or output should be displayed as a lamp, a door, a gate or a switch. Changing the event/output icon to something more adequate to the actual event/output helps end users more quickly get an overview of the actual contents of the map.

To display status details, right-click the required element and select **Status Details**. Status details are displayed in a separate, floating window.

The Map Overview window

The **Map Overview** window provides you with an overview of the map hierarchy set up in the Sony - Network Video Management System Smart Client. To open the **Map Overview** window, right-click the map and select **Map Overview** or click the icon  on the map title bar.

A plus sign (+) next to a map indicates that the map could have one or more sub-maps attached to it as hot zones. Clicking a map in the **Map Overview** immediately displays the selected map in the view.

Content in the **Map Overview** may take some time to load if you are connected to a very large surveillance system with many maps.

Frequently asked questions: maps

Which image file formats and sizes can I use for maps?

You can use bmp, gif, jpg, jpeg, png, tif, tiff, and wmp file formats for maps.

Image file size and resolution should preferably be kept under 10 MB and 10 megapixels. If you use larger image files, this can cause low performance in the Sony - Network Video Management System Smart Client. You cannot use images larger than 20 MB and/or 20 megapixels.

Maps are displayed in the Sony - Network Video Management System Smart Client on the basis of the graphic file's properties, and adhering to Microsoft standards. If a map appears small, you can zoom in.

Can I change the background of a map but keep the cameras in their relative positions?

Yes. If you need to update the map but want to keep all the information on it, you can just replace the map background (if you have the necessary map edit rights). This allows you to keep all your cameras, and other elements in their relative positions on a new map. Select **Change map background**, by right-clicking the map or in the **Properties** pane.

Add a map to a view or a Smart Wall

You can add existing maps or create new ones.

1. In setup mode, in the **System Overview** pane, drag the **Map** item to a position in the view.
2. In the **Map Setup** window that appears, select either **Create new map** or **Use existing map**.

A triangle next to a map name indicates that the map might have one or more sub-maps. Sub-maps and the elements they contain are also added.

3. In the **Name** field, enter a name for the map. The name will be displayed in the map position's title bar.

Tip: If you leave the **Name** field blank and click **Browse...**, the **Name** field displays the name of the image file you select.

4. Click **Browse...** to browse for the image file to use as a map.
5. Click **Open** to select image file.
6. Click **OK**.

Display a map on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display maps.

1. Follow the steps for adding a map to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the map to a tile in the overview.

Send cameras from a map to a floating window

To view all the cameras (a maximum of 25 in one view) on a map simultaneously in a floating window:

1. On the Live tab or the Playback tab, select the map that contains the cameras you want to view in a floating window.
2. At the top of the map title bar, click the **Send all cameras to floating window** icon:



The floating window displays a maximum of 25 cameras in the view.

If you have more than 25 cameras on a map, when you click this button, it will not always be the same cameras you see.

Change the background of a map

If you need to update the map but want to keep all the information on it, you can just replace the map background (if you have the necessary map edit rights). This allows you to keep all your cameras, and other elements in their relative positions on a new map. Select **Change map background**, by right-clicking the map or in the **Properties** pane.

Remove the map

Right-click the map in the view, and select **Remove Map**. This will remove the entire map, including added elements representing cameras, microphones, speakers, etc. The map is only removed from the view. The image file will still exist on the surveillance system, and can thus be used for creating a new map.

You can also remove a map through the **Map Overview**.

Add and remove elements from maps

1. In setup mode, right-click the map and select **Toolbox**.
2. In the toolbox, click the required element icon to open the **Element Selector** window.
3. You can use the filter to quickly find a required element: type a search criterion to narrow down the list of displayed elements to fit your search criterion.
4. Select the element and drag it onto the map.

Tip: You can use the selector tool from the toolbox to select and move elements on a map, or to pan the map.

Removing elements

To remove an element, right-click the unwanted element (camera, hot zone, server, event, output, microphone, or speaker) and select Remove [element].

Move elements

To move an element, click and drag it to a new position on the map.

Rotate elements

To change the orientation of an element, select it and place your mouse over one of the element's sizing handles. When the mouse pointer changes appearance to a curved arrow, click and drag the element to rotate it.




Tip: If your map has a color that makes it difficult to see the elements on the map, try creating a text box and fill it with a color that makes it stand out from the map. Add the required elements to the map, then drag them into the text box.



View recorded video from cameras on a map

You can view recorded video from cameras in a preview window when you move your mouse over a camera icon on the map. The status information in playback mode is retrieved from the camera's current live status.

- You can use digital zoom and PTZ controls from the camera preview if the camera supports this. In the preview window, either click the More button and select digital zoom or use the PTZ (see "PTZ images" on page 52) controls that appear. If you have PTZ presets set up for a particular camera, you can activate the preset by selecting the preset in the preview.
- To view all the cameras (a maximum of 25 in one view) on a map simultaneously in a floating window, click the **Send all cameras to floating window** icon at the top of the map title bar: .

If you have more than 25 cameras on a map, when you click this button it will not always be the same cameras you see.

Add a hot zone to a map

1. In setup mode, right-click the map and select **Toolbox** (see "**The toolbox**" on page 99).
2. In the toolbox, select the Hot zone tool:



3. Move the mouse pointer onto the map. The mouse pointer now displays the hot zone icon and a small white cross to indicate that hot zone drawing is enabled.



To draw the hot zone, click the map where you want to start drawing the hot zone. The starting point is now indicated by a large blue dot—also known as an anchor—on the map:



The hot zone drawing tool makes straight lines only; if you want a rounded hot zone border, you must use several small straight lines.

4. Click the hot zone starting point to complete drawing the hot zone. The hot zone is now outlined with a dotted line, indicating that no sub-map has been attached to the hot zone.

Tip: You can alter the outline of a hot zone by pulling the hot zone anchors.

5. To attach a sub-map to the hot zone, double-click the dotted hot zone to open the **Map Setup** window.


You can change the color of the hot zone using the color tool. Using different colors for hot zones helps users differentiate between adjacent hot zones.

Change the appearance of map elements

1. You can change the color of texts, backgrounds, hot zones, etc. on maps to differentiate map elements from each other. In **setup** mode, right-click the map and select **Toolbox**.

2. Select the element that you want to change.

3. In the toolbox, select the color fill tool . This will open the **Color Selection** window.

Tip: Use the color picker tool  to use an existing color from the map.


4. Only relevant for text elements: Select whether you want the color change to apply to text or background.
5. Select the color from the color palette—you can see a preview of the selected color in the EXAMPLE box.
6. Click the map element to fill it with the new color.

Adjusting Gradient

Use the **Gradient** slider to adjust how the element color fades from left to right.

Dragging the slider to the far right will make the element color fade instantly. Dragging the slider to the far left will make the element color almost not fade at all.

Drag the **Gradient** slider to the required level, then click the map element to apply color and gradient.

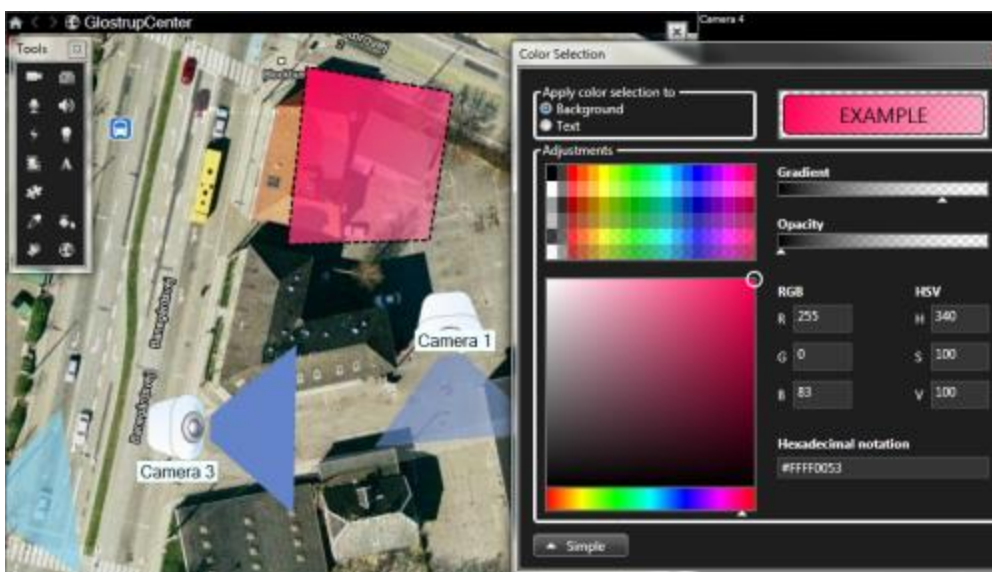


Adjusting Opacity

Use the **Opacity** slider to adjust the transparency of the color fill.

Observe and communicate

Dragging the **Opacity** slider to the far right will make the color completely transparent, while dragging the **Opacity** slider to the far left makes the color completely solid.

Drag the **Opacity** slider to the required level, then click the map element to apply color and opacity.

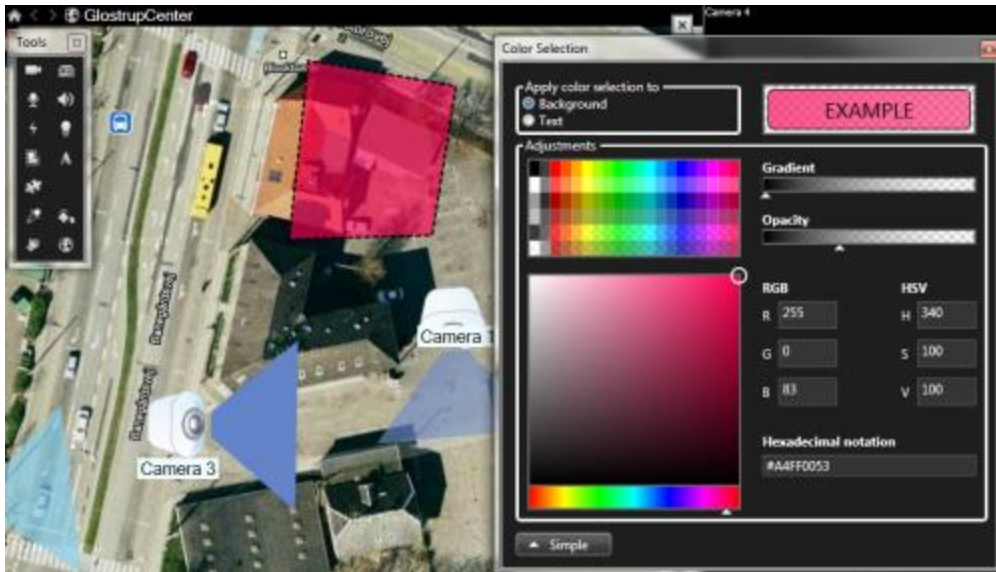

Advanced Color Change

You can fill map elements with any color you like. Click the **Color Selection** window's **Advanced** button to access the advanced color selection options.

Use the color slider to select the main color shade, then drag the color circle to select the required tone.

- or -

Type the hexadecimal color code in the **Hexadecimal notation** field.

Edit and rotate labels on a map

All elements on a map have a label, making it easy to identify them.

If you have a great number of elements on a map, it can be difficult to have enough room for all the labels. You can edit the name of the devices, by selecting the label and then typing in a new (shorter) name for the device.

When you rename a label, you are only changing the label on the map, not the name of the camera or element in the system.

You can also make sure your labels don't overlap by rotating them. To rotate a label on a map:

- Select the label and place your mouse over one of the sizing handles. When the mouse pointer changes appearance to a curved arrow, click and drag the label to rotate it.

Another way to save space on a map is to select only to show view zones and PTZ presets on hover (see "Map settings" on page 97).


Add/edit text on a map

You can insert text anywhere on the map, for example, to inform users of maintenance situations.

1. In setup mode, right-click the map and select **Toolbox**.
2. In the toolbox, select the text tool:



3. In the **Font Selection** window, edit your text settings.



Tip: You can always edit your text settings; click the required text box and select the text tool from the toolbox, then change the text settings for the selected text box.

4. On the map, click where you want to place the text.
5. Type your text. Press ENTER on your keyboard to make the text box expand downwards.

Tip: You can use the color fill tool to change the text color and background.

Tip: You can move the text box around; select the selector tool, grab the text box on the map and move the text box.

View status details

Status details are available for cameras (for example, resolution, image size, and bit-rate) and servers (for example, CPU usage, memory, network usage).

- To display status details, right-click the required element and select **Status Details**. Status details are displayed in a separate, floating window.

If you see the error message "Event Server has insufficient access rights to the recording servers," you will not be able to view status details from recording servers. The error message relates to the Event Server service, which handles map-related communication on the surveillance system. The Event Server service is managed on the surveillance system server. Contact your surveillance system administrator, who will be able to handle the issue.

Zoom and auto maximize

If the map is larger than the view area in the Sony - Network Video Management System Smart Client, or if you have zoomed in on the map, you can pan the map to see otherwise hidden areas. Click the map anywhere outside of added elements, and the map centers on the clicked spot. Pan the map by clicking and dragging the map in any direction.

- To use the zoom function on a map, right-click the map and select **Zoom In** or **Zoom Out** as required. Or use the **Zoom to Standard Size** function to zoom back to normal size.

Tip: Alternatively, use your mouse's scroll wheel to zoom; scroll up to zoom in, scroll down to zoom out.

If **Auto maximize map** is enabled and your map position in the view is part of a view with several view positions, the map is automatically maximized to full screen after a period of time as defined in setup mode in the **Properties** pane. To revert to the original view, double-click the map anywhere outside of any added elements.

Matrix


The ability to add Matrix content to views is only available when connecting to selected surveillance systems (see "Surveillance system differences" on page 11). Matrix is only available if Matrix has been configured on your surveillance system, and you have the required user rights.

About Matrix

Matrix is a feature that lets you send or receive video from any surveillance system camera to any monitor (known as a Matrix-recipient) on a network. A typical Matrix configuration automatically presents live video on the required Matrix-recipient when a defined event occurs, for example, when motion is detected or when another user wants to share important live video. Provided Matrix has been configured on the surveillance system server, you can include Matrix content in your Sony - Network Video Management System Smart Client views. When a particular event occurs, or another user wants to share video with you, live video will automatically appear in your Matrix views.

Viewing Matrix content

The event or the camera used in the Matrix setup depends entirely on the Matrix configuration on the surveillance system server or on what other users want to share with you. You cannot control this in Network Video Management System Smart Client. However, you can add Matrix content to as many positions in the view as required, so you can watch live video from several Matrix-triggered sources at the same time.

A Matrix position is displayed with a Matrix icon on the toolbar: . You can maximize a Matrix by double-clicking it.

A view can contain several Matrix positions. This lets you watch live video from several Matrix-triggered sources at the same time. If your view contains several Matrix positions, the positions are always ranked—one of the positions will be the primary Matrix position, another the secondary, and so on. When the first Matrix-triggered live video stream is received, it is automatically presented in the primary Matrix position. When the next Matrix-triggered video stream is received, a first-in-first-out principle applies: the previously received video stream is transferred to your view's secondary Matrix position, and the newest video stream is presented in your primary Matrix position, and so on. The Matrix positions' ranking is applied automatically: the first Matrix position you add is the primary Matrix position, the next one you add is the secondary one, and so on. You can change this ranking in setup mode, see Matrix properties (see "Settings" on page 107).

On the **Playback** tab, Matrix positions display video from the cameras with which the Matrix positions were last used on the **Live** tab. You can, of course, play back this video using the **Playback** tab's navigation features.

Settings

In setup mode, in the **Properties** (see "**Camera settings**" on page 80) pane, you can specify the settings for Matrix positions.

Name	Description
Window index	Change the Matrix position's ranking by choosing a different number. You can only choose a number in the range that corresponds to the number of Matrix positions in your view. 1 is the primary position in which video from the newest event is always shown, 2 displays video from the previously detected event, 3 displays video from the event detected before the event in position 2 , and so on.
Connection Settings...	Lets you specify the TCP port and Password for transferring Matrix-triggered video from the surveillance server to the Sony - Network Video Management System Smart Client view. This is only available when Matrix position 1 is selected; other Matrix positions inherit the connection settings specified for position 1 . By default, the TCP port used for Matrix is 12345. Consult your surveillance system administrator about which port number or password to use.

Add Matrix content to a view

1. In setup mode, in the **System Overview** pane, drag the **Matrix** item to the position in the view where you want to add Matrix content. A blue border appears indicating that the position in the view has Matrix content.
2. When you select a Matrix position, you can specify its properties in the **Properties** pane.

When viewing live or recorded video, you can double-click a Matrix position (or any other camera position in a view) to maximize it. When maximized, video from cameras in the Matrix position is displayed in full quality by default, regardless of your image quality selection. If you want to make sure that the selected image quality also applies when maximized, select **Keep when maximized**.

3. Repeat for each Matrix position you want to add.

Manually send video to a Matrix recipient

You cannot send video to a hotspot (see "About hotspots" on page 77) or carousel (see "About carousels" on page 76).

1. Select the view.
2. On the camera toolbar, click **More > Matrix**, and then select the relevant Matrix recipient.

Multiple windows


This feature is only available for selected surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.


Network Video Management System Smart Client 2016 R3 - User Manual

You can send individual views to separate windows or displays, while keeping the main window of the Sony - Network Video Management System Smart Client in the background, so you can watch several views simultaneously. The selected camera or item is always displayed with a blue border.

You can send any view to:

- A primary display to show the view in a separate full-screen window on your computer's main display with the main window hiding behind it.
- A secondary display to show the view in a full-screen window on another monitor (if available).
- A floating window to show the view in a small separate window. You can use any number of floating windows and you can resize these to suit your needs.

The primary and secondary display show the window in full screen with the tabs and controls hidden. To display the tabs and controls, click the **Full screen** icon: .

The floating window shows the selected view, with the **Live** and **Playback** tabs. You can select a new view from the toolbar by clicking the dropdown button. You can toggle between displaying the floating window as a full-screen with no tabs and as a smaller floating window with tabs by clicking the **Full screen** icon: . You can also choose to link the floating window to the main window to synchronize time or to follow the **Live** or **Playback** tab.

Your view setup is stored in the Sony - Network Video Management System Smart Client, so next time you log in, you can reuse it. However, this only applies to the computer on which you set it up. If you want to use multiple windows with the Sony - Network Video Management System Smart Client on more than one computer, you must configure your multiple window setup on each computer.

Primary display



Example of a view sent to the **Primary display**. While you are viewing the separate full screen window, the main Sony - Network Video Management System Smart Client window is hidden behind it.

Secondary display



Example of an 8x8 view sent to a **Secondary display**. In this example, the main Sony - Network Video Management System Smart Client window is available on the left display.


Floating window



Example of a view sent to a **Floating window**. The main Sony - Network Video Management System Smart Client window is immediately available behind the floating window.

Send a view between displays

1. In the **Views** pane, right-click the relevant view (or in the **Cameras** pane, the camera in the view).
2. Click **Send View To** and then select where you want your view to display.

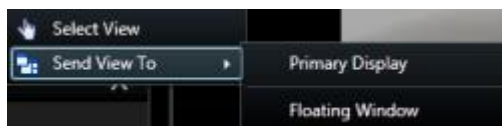

If more secondary displays are available, they will be numbered.

3. Click **Link window** to synchronize your view in the floating window with that of your main view. If you link the floating window, the corresponding timeline is not displayed in your floating window but is included in the timeline on the main window.
4. To close a separate view window, click the **Close** button in the right corner of the window:



If a view is sent to Primary Display or a Secondary Display the title bar is hidden. To display the title bar and get access to the Close button, move your mouse to the top of the view.

Any hotspots, carousels, Matrix positions, still images or HTML pages included in the view will work as usual in a floating window.

Frequently asked questions: multiple windows

How many secondary displays can I use?

In the Sony - Network Video Management System Smart Client there is no limitation. However, the number of secondary displays you can use depends on your hardware (display adapters, etc.) and your Windows version.

I want to close a view sent to Primary Display or a Secondary Display; where is the Close button?

In order to allow the maximum possible viewing area, the title bar of a view sent to primary display or a secondary display is hidden. To show the title bar, and get access to the Close button, move your mouse pointer to the top of the view.

I watch the same carousel in two different windows; why are they out of sync?

A carousel changes cameras at a specific interval, configured in setup mode. Example: With an interval of 10 seconds, the carousel will show Camera 1 for 10 seconds, then Camera 2 for 10 seconds, etc. The timing begins when you start watching a view containing the carousel. When you later begin watching the same carousel in another view, perhaps even in another window or another display, the timing for that instance of the carousel begins. This is why the carousel appears to be out of sync: in reality, you are watching two separate instances of the carousel. For more information, see Carousel properties (see "Carousel settings" on page 77).

Investigate and document

After an incident has occurred, you can investigate the recorded video to find out exactly what happened, and when it happened. For example, you can quickly find an incident in the following ways:

- Simply play the video and watch it
- Slice the video into short sequences that you can examine
- Search for motion in selected areas in the recording

The topics in this section describe each of these techniques for investigating recorded video.

Search recorded video

You can search recorded video using the Sequence Explorer, the **Recording Search** pane, or **Smart Search** (see "**Search using the Smart Search pane**" on page 121) pane.

On the **Playback** tab, you can use the **Recording Search** pane to quickly search for recorded sequences for a single selected camera or for all cameras in a view. Alternatively, you can use the **Smart Search** pane to search for motion in one or more selected areas of recordings from a particular camera.

Smart search cannot be used for video from fisheye lens cameras. Depending on your user rights, access to smart search may be restricted.

View recorded video using independent playback


You can only use this feature for ordinary single-camera positions, not for hotspots, carousels, or Matrix positions.

1. Move your mouse across the camera that you want to view recorded video for. On the toolbar that appears, click the **Independent Playback** button.



The independent playback timeline appears:




2. Drag the timeline (see "The timeline" on page 124) to select the time containing the video that you want to view.
3. If you want to view recorded video for the selected time on all the cameras in your view at once, on the toolbar, click the **View recordings from selected time on Playback tab** button: . This displays the **Playback** tab with all cameras synchronized to the time you have selected.

View exported video

The exports you create in Network Video Management System Smart Client are stored in a default folder on your local computer, unless you have specified a different folder. You can view an export immediately after creating it, or later.

1. To view the exported video immediately after creating it:
 1. Create the export as described in Export a video clip, audio, Network Video Management System data or a still image (on page 134).

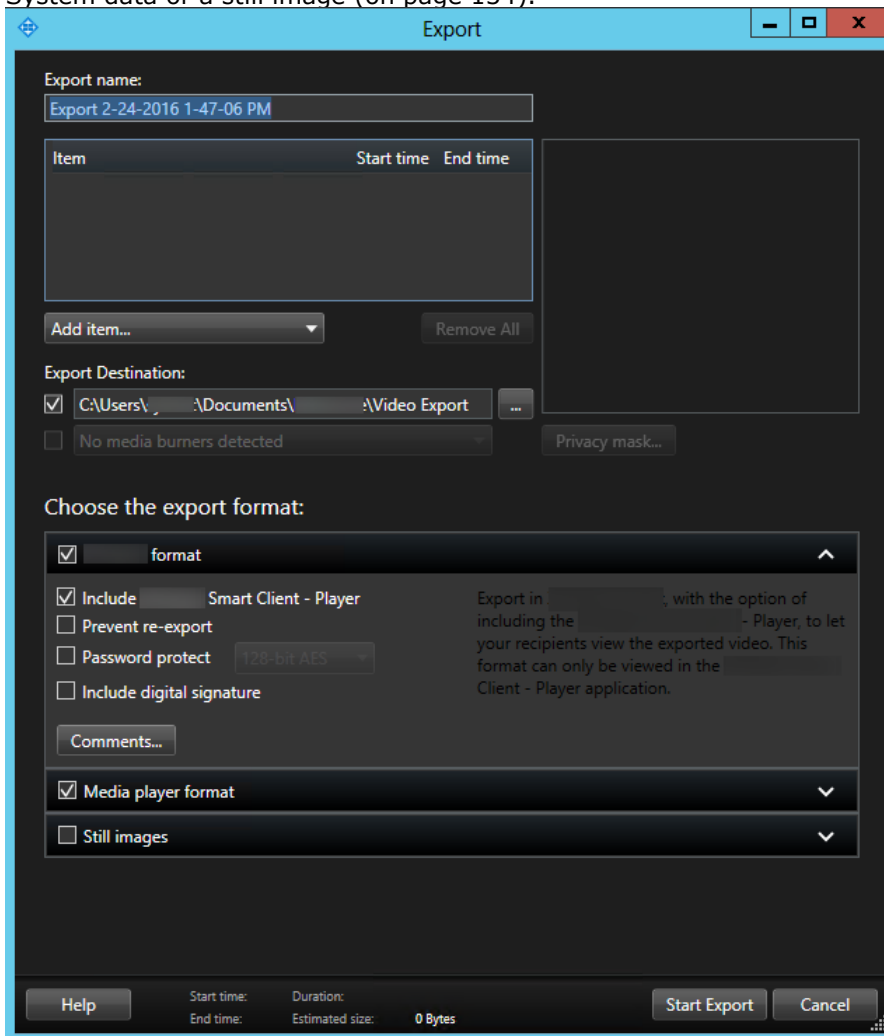

2. Click the **Details** button in the upper right corner when the export is complete. A dialog box appears with a link to the output folder.
3. Click the link to open the output folder.
2. If you have exported video at a previous point in time:
 1. Go to the folder where you store export files. The default location is `C:\Users\<username>\Documents\Sony\Video Export`. You can check the folder location in the **Export** window. This works only if you always use the same export destination.

2. Depending on the output format, open the relevant folder and double-click the video file or still image. If the format is **Network Video Management System format**, double-click the Smart Client Player file with the .exe extension.

Searching video using Sequence Explorer

The **Sequence Explorer** tab lets you investigate an incident by searching sequences of video.

- **Sequence Search**


Search in recording sequences on one or more cameras based on motion detection or events.

- **Smart Search**


Search for motion only in selected areas on a single camera.

Sequence Search

With Sequence Search you can easily investigate recordings from selected cameras. The recorded video is shown in a thumbnail overview from where you can browse recordings and play them instantly in the player window.

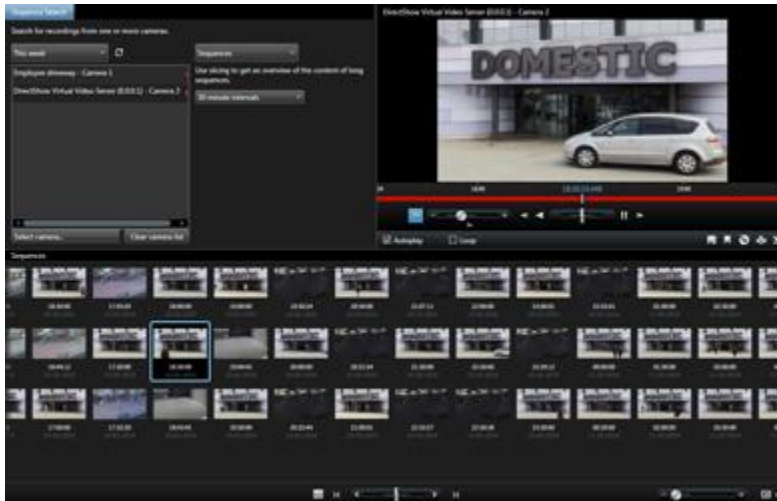

The thumbnail overview display content chronologically from left to right, with the most recent thumbnails towards the bottom right part of the view:

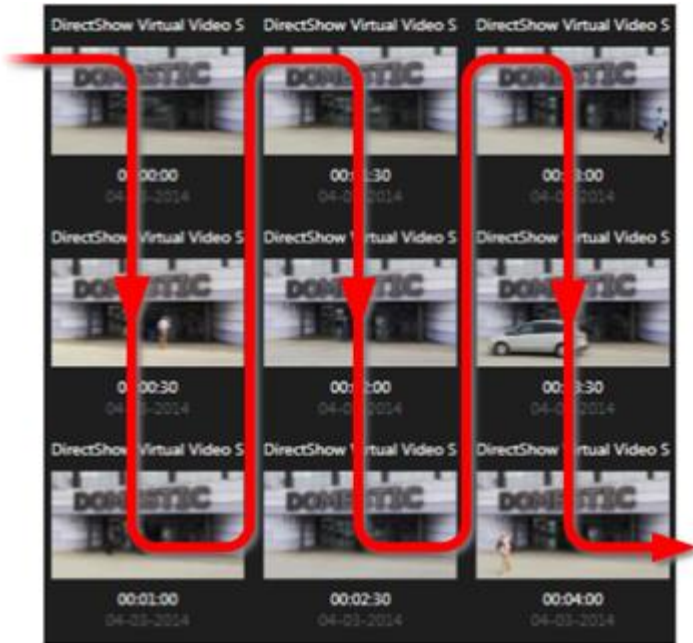


You can adjust the size of the thumbnails by dragging the **Size Slider** below the thumbnail overview:



The thumbnails can relate to an individual selected camera or several selected cameras in a view. The fact that you can compare the thumbnails side-by-side, while navigating in time by dragging the thumbnail overview, enables you to look at large amounts of recorded video and identify the most relevant video, which you can then immediately play back.

To view video associated with a particular thumbnail, click the thumbnail. When you click a thumbnail, it becomes highlighted and (provided **Autoplay** is selected) the associated sequence is played back in the right side of the Sequence Explorer.

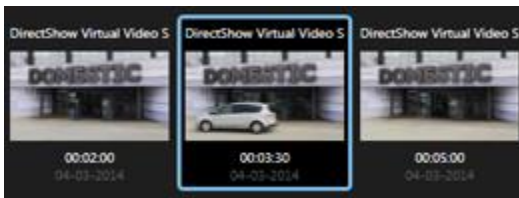

Tip: If you have clicked a thumbnail, and then navigated away from it by dragging the thumbnail overview left or right, you can quickly return to the selected thumbnail by clicking the refresh button.

The thumbnail overview only shows recording within the time interval you have specified. Unless you have selected to view all sequences, you can navigate the timespan backward or forward by placing the mouse in the left or right side of the thumbnail overview.

Search for sequences

1. Select **Sequences** in the menu.

2. Use the slicing functionality to display thumbnails for specific intervals of time. For example, one thumbnail for every 30 seconds. You can also specify your own intervals with **Custom slicing interval...** If you have continuous recordings, or recordings of long duration, it is especially useful to use slicing to divide the thumbnails into shorter sequences.
3. Watch the list of thumbnails update. The list is now ready for you to view the selected sequences.

Define search

1. On the **Sequence Explorer** tab, select **Sequence Search**.
2. In the **Select camera...** menu, find the camera that you want to view sequences for. You can add up to 100 cameras in a sequence search:
 - Use the search field to search for a camera name or description, or
 - Navigate to the camera in the list
3. Click the camera to add it to the view.

The timeline

The timeline on the Sequence Explorer (see "The timeline" on page 124) lets you navigate through video content.

Navigating sequences

You have several options for navigating the thumbnails.

Click and drag


Click and drag the thumbnail overview to the left (backward in time) or right (forward in time) inside the thumbnail overview.


The sequence slider



Drag the sequence slider, located below the thumbnail overview, to the left (backward in time) or right (forward in time).



Date and time

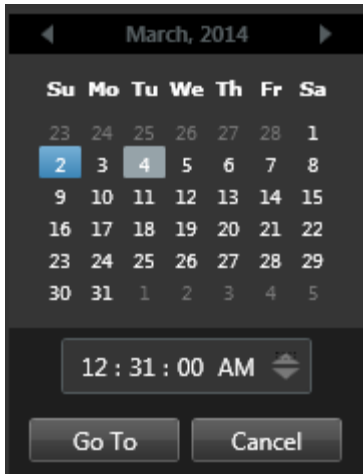Click the **Calendar** icon  below the thumbnail overview to access a calendar where you can specify a date and time. Click **Go To** to see thumbnails for the new date and time.



Tip: In the calendar, a blue background  indicates the selected date. A gray background  indicates the current date.

Thumbnails with exclamation point

Depending on your navigation method, you may occasionally see placeholder thumbnails with exclamation points if there is no recorded image from a specific point in time:



These appear when the Sequence Explorer cannot retrieve a proper thumbnail, for example, because of a server communication error, a decoding error, or similar. However, placeholder thumbnails may also appear when thumbnails retrieved from the surveillance system do not exactly match requested points in time. This is because deviating thumbnails could otherwise cause confusion.

If you have selected slicing in Sequence Search, a placeholder thumbnail appears if the retrieved thumbnail is outside of the requested time interval. Example: You request a time interval of 12:00:00, 12:00:30, and the first available thumbnail is at 12:00:33. If there are no recording sequences that cover this interval, the system makes no attempt to retrieve a thumbnail and the next thumbnail displayed is from the next interval (12:00:30-12:01:00). If there are recording sequences that cover this interval, a placeholder thumbnail will appear instead.

In Sequence Search, a placeholder thumbnail appears if the retrieved thumbnail is more than three seconds off compared with the requested time, for example the time when recording of the sequence in question was triggered on the surveillance system.

You can still click a placeholder thumbnail to view video; it will take you to the first available recording **after** the point in time represented by the placeholder thumbnail.

Thumbnail overview navigation

You can navigate forward and backward in time by dragging the thumbnail overview left or right, or you can use the navigation controls below the thumbnail overview.

Click the **Calendar** icon below the thumbnails to access a calendar where you can specify a date and time. Click the arrows to go backward and forward in time. Click **Go To** to see thumbnails for the new date and time.

The thumbnail overview only shows recordings within the specified time interval. Unless you have selected to view all sequences, you can expand the timespan backward or forward by using the buttons in the left and right side of the thumbnail overview.



Go to earliest sequences.



Go to latest sequences.



Expand time interval to show earlier sequences.



Expand time interval to show later sequences.




End of database. No more sequences available.

Searching for motion in recorded video

Smart Search is available only for selected surveillance systems (see "Surveillance system differences" on page 11). Depending on your user rights, the ability to search from some cameras may be restricted.

Use Smart Search to search for motion in selected areas of a recording. For example, Smart Search is useful when you want to identify when a package was removed from a shelf, or when a person entered through the back door. If you know where an incident occurred and the camera that covers the area, you can look for motion in that specific area in the recording. To make it easy to find and play back incidents, the system displays search results as thumbnail sequences with green boxes around areas with motion.

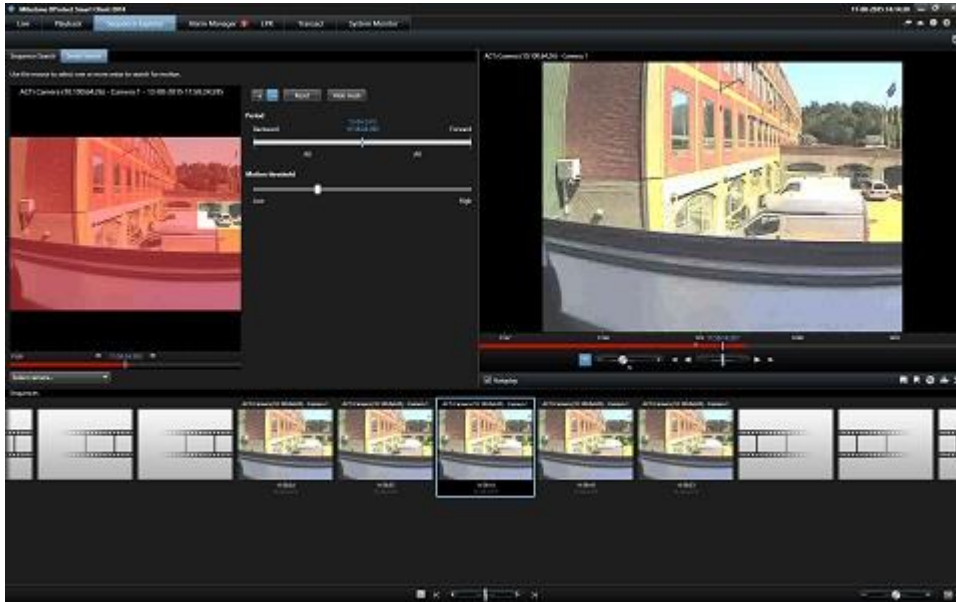


Note: Smart Search is based on motion metadata that is generated along with the motion-recorded video. Your system administrator can enable or disable Smart Search for cameras on the server, and can specify settings such as sensitivity, processing time, and detection methods. If your search does not produce results, it may be that Smart Search is not enabled for the camera. Contact your system administrator for more information.

Search for motion in recorded video in Network Video Management System Enterprise Edition

Use Smart Search to investigate an incident by searching for motion in selected areas of a recording. For more information, see Smart Search (see "Searching for motion in recorded video" on page 118).

Note: Smart Search functionality differs depending on the Network Video Management System product that you are using. If the following procedure does not match your product, see Search using the Smart Search pane (on page 121).


To search for motion in recorded video, follow these steps:

1. Do one of the following to access the **Smart Search** tab:
 - If you are already viewing the camera feed that you want to search, on the view item toolbar, click the **Smart Search** icon  to open the **Sequence Explorer** window with the **Smart Search** tab and camera selected.
 - Click the **Sequence Explorer** tab, and then click the **Smart Search** tab. You will have to select the camera.

2. If the camera is not already selected, below the selection image click **Select camera**, and then select the camera that recorded the video. The system displays an image from the camera with a mask applied. Masked areas are excluded from the search. This helps make the search results more precise.




Masked image

3. Under **Period**, use the time selector to specify a time-frame for the search.
4. Under **Motion threshold**, use the slider to specify how much motion to search for. Higher thresholds require more motion and produce fewer search results, and lower thresholds produce more.
5. To specify where to search, click the  button, and then click and drag in the selection image to unmask an area. For example, if you want to find out when someone entered a room, select the area around the door. Repeat this step to unmask more areas.



Masked image with an area selected

Note: The selection image contains an invisible grid. When you unmask an area, what you're actually doing is clearing cells in the grid. If the area you unmask includes any portion of a cell, the system unmask the entire cell. The result can be that the system unmask slightly more of the image than you intended.


Tip: You can temporarily switch between mask and unmask modes by holding the CTRL button. For example, if you unmask a larger area than you wanted, you can press the CTRL button and then mask part of the selection without having to click the  button. If you want to clear all selections, click **Reset**.

6. After you select an area, the system displays the sequences where motion was detected and plays the first sequence that was found. Use playback controls and toolbar options to investigate the video.

Search using the Smart Search pane

The Smart Search pane is not supported on all products, but is located on the Sequence Explorer tab on newer versions.


1. On the **Playback** tab, in the **Smart Search** pane, expand the Search area and select **Show grid**.
2. Select the camera in the view. A blue grid overlay appears.

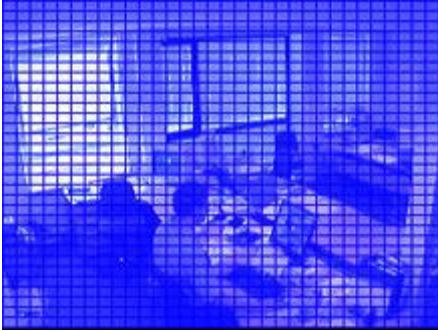

For a better view, double-click the image to enlarge it.

3. Click and drag inside the image to select the area in which you want to use smart search. You can select more than one area.

The areas you select will become visible through the blue overlay. The blue overlay indicates the areas that are excluded from the smart search.

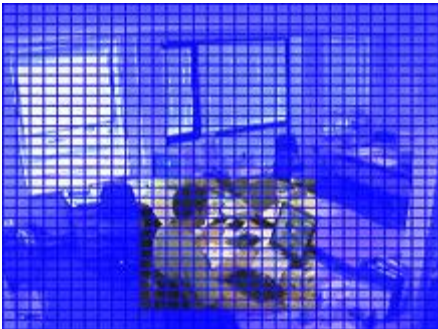

You can toggle between including or excluding the areas that you select by clicking **Include** or **Exclude** options. Alternatively you can invert your selection to include or exclude everything you have selected. With the **Smart Search** pane's **Include** and **Exclude** options, you can toggle between including/excluding areas when you drag.



Example of inverted selection


Tip: As an alternative to clicking **Invert**, press the SHIFT key while clicking/dragging to select an area.

4. Click **Save** to save your search area settings.

Tip: If you want to experiment with further changes to the search area, you can return to your saved search area settings by clicking **Load**.

5. In the **Sensitivity** list, select the search sensitivity, and in the **Interval** list, select the image interval. If you select **All images**, all images will be analyzed. If you select e.g. 10 seconds, only one image per ten seconds of recordings will be analyzed. Selecting a long interval will greatly reduce the search time. However, with a long interval, the search may not find motion sequences that are shorter than the specified interval.
6. Click the **Next** (to move forward in time) or **Previous** (to move back in time) to search through sequences with motion detected in the selected areas.

When a sequence with motion inside the selected area(s) is found, it is displayed with the motion highlighted.

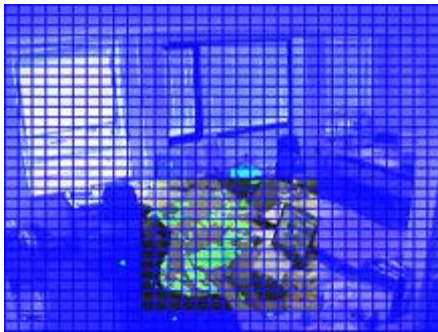

Tip: The **Playback** tab's **timeline displays** the corresponding time information.


7. If required, click the **Next** or **Previous** to continue the smart search.

Adjust time

You can set the time that you want Smart Search to search from. The preview image is shown from the selected time.

You can also define a period to search within. The period is always based on the start time that you have selected. To select a start time, you have two options:

- Drag the timeline below the preview grid left or right to set the start time. Available recordings are indicated with colors. You can also use the arrows to go to previous or next frame.
- Click the current time to access a calendar where you can specify a date and time. Click **Go To** to set this time as start time.



About motion threshold

The motion threshold allows you to define the smart search sensitivity.


The **higher** the threshold you select, the more motion you need in the selected areas before the motion is detected by Smart Search.

The **lower** the threshold you select, the less motion you need in the selected areas before the motion is detected by Smart Search.

A low threshold does not necessarily give more results. A high threshold does not necessarily give less results.

Take a snapshot

As an alternative to exporting video evidence, you can take a quick snapshot of an image if you want to save or share a still image. You can take a snapshot from the Live, Playback or Sequence Explorer tab, or from a carousel, hotspot or the camera navigator.

- To take a snapshot, on the camera toolbar of a selected camera, click the snapshot icon: . When a snapshot is taken, the snapshot icon momentarily turns green.

You can view your snapshot, by browsing to the snapshot file location. Snapshot files are saved in the default file location specified in Application options (see "Configuring your Network Video Management System Smart Client" on page 32).

If the image contains a privacy mask, this privacy mask is also applied to the snapshot image.

Time navigation controls

The timeline buttons and controls



- 1: Playback date
- 2: Timeline time
- 3: Playback time
- 4: Time selection mode
- 5: Set start/end time
- 6: Playback speed and playback speed slider

Play buttons:

- 7: Previous image

8: Play backward

9: Shuttle slider

10: Play forward

11: Next image

Navigation buttons:

12: First sequence

13: Previous sequence

14: Next sequence

15: Last sequence

16: Time span slider

The timeline

The timeline displays an overview of periods with recordings from all cameras displayed in your current view. For example, the timeline is displayed on the **Playback** and **Sequence Explorer** tabs, in independent playback mode.

Two timelines are displayed in the timeline area (see "The timeline buttons and controls" on page 123). The upper timeline shows the selected camera's recording periods and the lower one is for all the cameras in the view including the selected camera. If you have linked floating windows, these will also be included on the lower timeline.

Drag the timeline to the right to move backward in time; drag to the left to move forward in time. You can also use the scroll wheel of your mouse to move the timeline backward and forward. To zoom the range of the timeline so it increases or decreases the units of time, press CTRL and use the scroll wheel at the same time.

The timeline is displayed in light-red to indicate recording, red for motion, light-green for incoming audio, and green for outgoing audio. The **Timeline time** is indicated by a blue vertical line.

You can switch between a simple and an advanced timeline by toggling the **Simple/Advanced Timeline** button in the bottom right corner. If you select the simple timeline, you only see the shuttle slider, the time span slider, the **Play Backward** and **Play Forward** buttons and the **Next Image** and **Previous Image** buttons.

The first time you open the Network Video Management System Smart Client – Player, it opens in simple timeline mode.

On the timeline, to the far right, click the small question mark for a legend of color codes.





Playback date and time

The area in the upper part of the timeline shows the playback time and date of the recordings in blue. The playback time is the time to which all the cameras are tied (except if you are in independent playback mode). When you play back recordings, all video in the view will be from the same time. Some cameras, however, may only record if motion is detected. Also, there may be no recorded video from one or more cameras in the view matching the specified point in time. When this is the case, the last image in the camera's database prior to the specified point in time will be displayed in the view, and the image will be dimmed.

Date and time navigation

Click the **Playback Date** or **Playback Time** to open the **Go to** window, where you can select the date and time that you want to go to. Double-clicking anywhere on the timeline moves it to that particular time.

Time selection

Click **Set Start/End Time**  to jump to a specific point in time, by specifying the date and time. Clicking **Time selection mode**  lets you select a period of time by dragging the start and end time indicators on the timeline (typically when you are exporting video (see "Network Video Management System format settings" on page 132)). Click again to see the timeline with no time selected.

Playback Speed

The playback speed slider lets you change the current playback speed. Move the slider to the left, for slow motion, and to the right for fast motion. Click 1x for normal speed.

Playback buttons

Use the playback buttons to play back recordings:



Previous image: Moves to the image just before the one currently viewed



Play backward in time



Play forward in time



Next image: Moves to the image just after the one currently viewed



Pause: When you click either **Play backward in time** or **Play forward in time**, the button turns into a pause button. This lets you pause playback without having to move your mouse pointer.



Shuttle slider: Lets you adjust the speed. Drag it to the right to increase forward play speed. Drag to the left to increase backward play speed.

To browse the video recordings, drag the timeline to the left or right.

Navigation buttons

Use the navigation buttons to navigate through recording sequences.



First sequence: Moves to the first image in the database for the selected camera



Previous sequence: Moves to the first image in the previous sequence



Next sequence: Moves to the first image in the following sequence



Last sequence: Moves to the last image in the database for the selected camera



Time span slider: Lets you specify the time span of playback in the timeline

Time span

The time span slider lets you specify the time span of playback, independent playback, and sequences (for example, 1 hour, 2 hours, or up to 4 weeks) of your recordings in the timeline.

Events and alarms

Working with alarms

From the alarm list, you are able to acknowledge alarms, edit details of alarms, or print reports with information about alarms.

View and edit details of an alarm

After you add the Alarm List to a position in a view, you can double-click an alarm to view information about it in a separate window. A window shows a preview of the alarm incident and live video.

You can manage the alarm in the following ways:

- **State:** The state of the alarm indicates if someone has addressed the event. You can change the state of the alarm. Typically, you would change the state from **New** to **In progress**, and then later to **On hold** or **Closed**; but if required you can also change state from, for example, **On hold** to **New**.
- **Priority:** Lets you change the priority of the alarm.
- **Assigned to:** Lets you assign the alarm to a user in your organization, including yourself if required. The person to whom you assign the alarm becomes the owner of the alarm, and will be listed in the alarm list's **Owner** column.
- **Comment:** Write comments and remarks that are added to the alarm history. Comments typically relate to the actions you have taken. For example, "Suspect detained by Security," or "Suspect handed over to police," or "False alarm."
- **Alarm History:** The alarm history is a summary of how you have handled the alarm. Any changes you or your colleagues make to alarm state or priority, any reassigning of alarms between users as well as any comments added will automatically be included in the alarm history. To view the alarm history, click the button in the bottom left side of the edit dialog.

Note: Depending on surveillance system server configuration, the alarm history can contain instructions about what to do when handling the alarm. The instructions are defined on the server side as part of the alarm definition. When that is the case, the alarm history is automatically displayed when you edit the alarm.

- **Print:** Lets you print a report that contains information about the alarm, such as the alarm history and a still image from the time of the alarm, if an image is available.

Acknowledge an alarm

- To record that you have received an alarm, and that you will do something about it, right-click the alarm and select **Acknowledge**. This will change the state of the alarm from **New** to **In progress**. You can only acknowledge new alarms.

You can acknowledge multiple alarms simultaneously; press and hold down the CTRL key, and then select the alarms you want to acknowledge.

Disable an alarm

If you know that certain activity is causing false alarms, you may want to disable alarms on this type of activity for a period of time. This can make it hard for you to see the real alarms that you need to address. For example, if there is a lot of movement around a particular camera and this is generating several false alarms, you can disable alarms on motion detection for this camera for 10 minutes.

1. In the **Alarm list**, select the alarm.
2. Right-click it and select **Disable new alarms**.
3. In the **Disable alarms** window, specify how long you want to disable the alarm.

Ignore an alarm

On a map, you can ignore an alarm for an element for a duration of time. For example, if a camera is being repaired and therefore disconnected, you might want to ignore the error showing up on the map during the repair. When you ignore an alarm on a map, this does not remove the alarm from the alarm list, just the map.

Print a report with alarm information

Alarm reports are available only if you are using Enterprise Edition.

From the alarm list, you can print a report with information about the alarm, including the alarm history and—if available—a still image from the time of the alarm, right-click the alarm in question and select **Print**. You cannot use the print feature if you have selected multiple alarms in the alarm list.

View alarm reports

Alarm reports are available only if you are using Enterprise Edition.

- Click the **Report** button to open the **Alarm Report** window, where you can view two graphs representing one of the following predefined reports:
 - Category
 - State
 - Priority
 - Reasons for closing
 - Site
 - Response time



You can filter the interval of the report, so it displays alarms over a period of 24 hours, 7 days, 30 days, 6 months, or a year.

Select the categories, states, priorities, reasons for closing, sites, or response times to display in each of the two graphs so you can compare these side by side. The graphs display the number of alarms on the vertical axis and the time frame on the horizontal axis.

Filter alarms

There are several ways you can filter the alarm list, so it displays just the alarms or events that you are interested in; you can click an element on a map to see only alarms associated with that element, you can click a predefined filter in the Filter pane, or you can define your own custom filters.

- To filter the alarm list's content, in the **Alarm List** toolbar, click **Filter** to open the **Filter** pane above the alarm list. Enter filter criteria on any of the columns you want to filter on. For example, if you enter a user ID in the **ID** field, the list will only display alarms assigned to that particular user.

You can combine filters (for example, for a location on a certain date). When you apply a filter, the filter section will change background color from blue  to orange . To return to the unfiltered alarm list, click the **Clear filter** link in the Alarm List toolbar.

Tip: In fields where you type your filtering criteria, typing the first few characters of the required name, location or similar is often enough.

Having entered filtering criteria, note that the alarm list will not be updated until you move the insertion point to another filter field.

Tip: If your alarm handling views contain map content, you can also filter the alarm list by right-clicking an element (camera, server, or similar) on the map, then selecting **Show Alarms**. This will make the alarm list show only alarms from the selected element.

- To sort the alarm list's content, in the **Alarm** list, click the  button at the top of the column.

Events


An event is a predefined incident on the surveillance system that can be set up to trigger an alarm. Events are either predefined system incidents or user-specified events (for example, analytics events, generic events, or user-specified). Events are not necessarily linked to an alarm, but they can be.

Typically, events are activated automatically and in the background (for example, as a result of input from external sensors, detected motion or by data from other applications), but can also be manually activated. Events are used by the surveillance system to trigger actions, such as starting or stopping recording, changing video settings, activating output, or combinations of actions. When you activate an event from your Sony - Network Video Management System Smart Client, it automatically triggers actions on the surveillance system, for example recording on a particular camera with a particular frame rate for a particular period of time as well as sending of a mobile phone text message with a predefined incident description to a particular security officer.

Your surveillance system administrator determines what happens when you manually activate an event. Your surveillance system administrator may use the terms event buttons, user-defined events or custom events for manually activated events.

Manually activate an event

- On the **Live** tab, in the **Event** pane, select the relevant event and click **Activate**.

The list of selectable events is grouped by server, and the camera/device with which the event is associated. Hierarchically, global events will appear under the relevant server. If a server is listed with a red icon , it is unavailable and you cannot activate events on it.

Alternatively, if available for the camera, click the overlay button that appears when you move your mouse over the image.

There is no confirmation once you have activated an output.

Exporting evidence

About the settings in the Export window

Depending on your user rights, type of server, and what has been set up on the server, certain export settings may be restricted and unavailable.

With the Sony - Network Video Management System Smart Client you can quickly export recorded evidence in movie clip, audio, still images, or in the Network Video Management System format. The export can be either a single sequence or a storyboard (see "About exporting storyboards" on page 133). The format and settings you choose are stored and displayed next time you export.

General export settings

Name	Description
Export name	The program automatically fills this in with the local date and time, but you can rename it. The folder or disk that you save or burn to inherits the export name.
Item	<p>Lists the items selected for export, for example video sequences. For each item, you can change the time and date. If you click the date, a calendar opens. Here, you can select a new date to view. Click Go To to change date. You can change the start and stop time of the item by using the time indicator underneath the calendar.</p> <p>Click an item to see a preview of the export clip in the preview pane to the right of the Item list. If you select more items by holding down the SHIFT or CTRL button and clicking extra items, you get access to multiple previews. You can adjust the start and stop time on the timeline for each preview.</p> <p>You can delete an item from the Item list by clicking the red x next to it. The red x appears when you hover over the item with your mouse. If you want to split the item into two, click the split icon. In the preview pane, you can edit the start and end time of each item.</p>
Add Item	Use the Add item... button to select other items that you want to include in the list for exporting. Use the Remove All button to clear the list in the Item window.
Export destination	<p>Path - You can specify a path yourself (the field may suggest a path for you). When you specify a path this way, the folders you specify do not have to be existing ones. If they do not already exist, they are created automatically.</p> <p>Media burner - Select a burner. You can specify a burner that you want to send the export to. In this way, you create the export and make sure it is written directly to an optical media in one go.</p>

Name	Description
Privacy mask	Click to set a privacy mask on the camera. This covers the area that you select in a black area of solid color, so those parts of the image are not viewable. You cannot remove existing privacy masks, you can only add new ones.

You can use privacy mask, the media player format, and still images only in the advanced mode.

Network Video Management System format settings

Export in the Network Video Management System format is available when connected to selected surveillance systems (see "Surveillance system differences" on page 11) only. Depending on your user rights, access to exporting evidence from some or all cameras may be restricted.

Name	Description
Include Network Video Management System Smart Client – Player	Select to include the Network Video Management System Smart Client – Player application with the exported data. The Network Video Management System format can only be viewed with the Network Video Management System Smart Client – Player.
Prevent re-export	Select that you do not want to allow the video or audio to be re-exported—your recipients will not be able to export in any format.
Password protect	Select the strength of the encryption you want to apply to the exported data. When you click Start Export , the system asks you for a password that must contain at least eight characters.
Comments	Click to open the Add Comments to Export window, where you can add comments to individual cameras or to the project as a whole.

Media player format settings

The media player format allows you to export a standard video clip and/or audio clip that can be viewed and/or listened to from computers that have a standard media player installed. The computer must also have the codec installed that you use for the export.

Name	Description
Select content	Select if you want to export video only, audio only, or both video and audio.
Select format	Select if you want to export video in AVI format or MKV format.

Name	Description
Codec	<p>A video codec is a particular compression/decompression technology used when generating video files. Your choice of codec will affect the quality and size of the AVI file.</p> <p>The list contains the video codecs available on your PC.</p> <p>You can change the codec, but we recommend that you keep the default codec settings, unless you have a good reason to change these.</p> <p>The codec that you use must be similar on the computer that you play the video clip from.</p>
Include timestamps	Select if you want to add the date and time from the surveillance system to the exported images. The timestamp will be displayed at the top of the exported video.
Reduce frame rate	Select to reduce the frame rate for the export; every second image will be included, yet still play back in real-time.
Video texts	Click to open the Video Texts window where you can create pre- and post-texts for the AVI file. These texts will be added to all cameras for the export and displayed as still images before (Pre-slides) and/or after (Post-slides) the video.

Important: When you perform an export in MKV format: if you have not used privacy masking in video recorded in JPEG or MPEG-4/H.264/H.265 formats, no transcoding takes place on recorded video in the export (the recorded video is kept in the original quality). In contrast, if you have used privacy masking or have recorded video using any other codec (for example MxPEG or MPEG-4 short header mode), recorded video is transcoded into JPEG in the export.

Still images settings

If you want to export single video frames, you can export these as still images.

Name	Description
Include timestamps	Select if you want to add the date and time from the surveillance system to the exported images. The timestamp will be displayed at the top of the exported video.

About exporting storyboards

The storyboard function helps you paste together video sequences from one camera or from multiple cameras into one cohesive flow. You can use the sequence of events, the storyboard, as proof of evidence in internal investigations or the court of law.

You can skip all sequences that are not relevant and avoid wasting time looking through long sequences of video that you do not need. Also, you avoid wasting storage space on stored sequences that do not contain relevant video.

When you select the video sequences that make up the storyboard (see "Export a storyboard" on page 135), you can work from the **Playback** tab in time selection mode. Here you can use the **Export > Add to export list** function to store multiple sequences in a list without opening the **Export** window. When you have built the entire list, you can then export the collection of

sequences, the storyboard, in one go. You can also export items directly from the Export window (on page 135).

Export a video clip, audio, Network Video Management System data or a still image

1. On the **Playback** tab, in the timeline, click the **Time Selection Mode** button to select the start and end time (see "Time selection" on page 125) of the sequence you want to export.

If you want to export a storyboard (on page 135), you can select multiple sequences that you set individual start and end time on.

If you want to export items directly from the **Export** window (see "Export items directly from the Export window" on page 135), you can skip time selection mode.

2. To the right of the timeline, click **Export > Export...** to open the **Export** window.
If you want to add additional items to the one you have selected and they contain relevant video data, you can include these in the export by using the **Add item...** button to select them. You can also change your selection in the **Export** window.
3. In the **Export name** field, enter a name for the export. The system automatically creates a name with the current date and time. You can change the name.
4. Specify a path and/or media burner for the destination of the export.
5. Click the relevant tab to select one or more of the following formats to export to:
 - **Network Video Management System format** - Export in a Sony Network Video Management System database format, with the option to include the Network Video Management System Smart Client – Player along with the export. You must use Network Video Management System Smart Client – Player to view videos that you export in this format. Other media players will not work.
 - **Media player format** - Export a file in a format that most media players can play. This requires that a media player is installed on the computer that will play the video
 - **Still images** - Export a still image file for each frame for the selected period.
6. Specify settings (see "About the settings in the Export window" on page 131) for the format you have chosen. Based on these settings, the program estimates and then displays the size of the export in the bar at the bottom of the window.

Note: If the video contains items or information that you do not want to be visible in the export, you can add a privacy mask to hide those areas in the video. For more information, see Mask areas in a recording during export.

7. Click **Start Export** to export your evidence.

Tip: If you want to make changes or add more items later, click **Cancel**. When asked if you want to remove the selected export items, click **No**. This ensures that your list of export items is available in the **Export** window when you open it again.

Export a storyboard

If you want to export a number of items that make up a storyboard (see "About exporting storyboards" on page 133), follow these instructions:

1. On the **Playback** tab, in the timeline, click the **Time Selection Mode** button.
2. For each item that you want to export, select the start and end time (see "Time selection" on page 125) and then click **Export > Add to export list**. This adds each item to the list of exports without opening the **Export** window. Repeat until you have added all items that you need for your storyboard.
3. To the right of the timeline, click **Export > Export** to open the **Export** window. All selected items are displayed in the **Item** list, ready for export.

Click **Add item** to add additional items. Click **Delete All** to clear the list.

4. In the **Export name** field, enter a name for the export. The program automatically creates a name with the current date and time. You can change the name.
5. Specify a path and/or media burner for the destination of the export.
6. Click the relevant tab to select a format to export to.
7. Specify the necessary settings (see "About the settings in the Export window" on page 131) for the format you have chosen. Based on these settings, the program estimates the size of the export and displays this in the bar at the bottom of the window.
8. Click **Start Export** to export your evidence.

If you want to make changes or add more items later, click **Cancel**. When asked if you want to remove the selected export items, click **No**. This ensures that your list of export items is available in the Export window when you open it again.

Export items directly from the Export window

To export items by adding them directly in the **Export** window, follow these steps:

1. On the **Playback** tab, to the right of the timeline, click **Export > Export** to open the **Export** window with an empty **Item** list.
2. Click **Add item** to add the items, for example cameras, that you want to add to the export list.
3. Click each export item and then specify its start and end time in the preview pane to the right of the list. Repeat for all items in the list.
4. In the **Export name** field, enter a name for the export. By default, the system uses the current date and time. You can change the name.
5. Specify a path or media burner for the destination of the export.
6. Click the relevant tab to select a format to export to.
7. Specify the necessary settings (see "About the settings in the Export window" on page 131) for the format you have chosen. Based on these settings, the program estimates and displays the size of the export at the bottom of the window.

Note: If the video contains items or information that you do not want to be visible in the export, you can add a privacy mask to hide those areas in the video. For more information, see Mask areas in a recording during export.

8. Click **Start Export** to export your evidence.


Note: If you want to make changes or add more items later, click **Cancel**. When asked if you want to remove the selected export items, click **No**. This ensures that your list of export items is available in the Export window when you open it again.

Mask areas in a recording during export


When you export video, you can add privacy masks to hide selected areas. When someone watches the video, the masked areas appear as solid blocks. For more information, see Privacy masks (on page 63).

Note: Privacy masks affect only the video that you export. The original video is not masked.


To mask one or more areas in the recording, follow this step:

- Click the  button, and then drag the pointer over the area that you want to mask. To mask more areas, repeat this step.

Note: The preview image contains an invisible grid. When you add a privacy mask, what you're actually doing is selecting cells in the grid. If the area you select includes any portion of a cell, the system masks the entire cell. The result can be that the system masks slightly more of the image than you intended.

Tip: You can temporarily switch between mask and unmask modes by pressing the CTRL button while you make a selection. For example, if you added a mask but the selected area is larger than you want, you can press the CTRL button and then unmask part of the selection without having to click the  button.

To unmask part of a privacy mask, follow this step:

- Click the  button, and then drag the pointer over the area of the mask that you want to unmask. Repeat this step for each part to unmask.

To remove all privacy masks, follow this step:

- Click **Reset**.

Tip: If you just want to view the image without masks applied, click and hold the **Hide mask** button. The mask reappears when you release the button.

Frequently asked questions: exporting

Can I export audio too?

When exporting in the media player and Network Video Management System formats, you can—if your surveillance system supports this—include recorded audio in the export. Export in the database format is only available if connected to selected surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>. When exporting in the JPEG (still image) format, you cannot include audio.

If I export a sequence, what is included in the export?

The entire sequence, from the first image of the sequence to the last image of the sequence is included.

Can I export fisheye lens recordings?

Yes, provided your surveillance system supports the use of 360° lens cameras (i.e. cameras using a special technology for recording 360° images).

Why can't I specify an export path?

You can usually specify your own path, but if you are connected to certain types of surveillance systems (see "Surveillance system differences" on page 11), the surveillance system server may control the export path setting and you cannot specify your own path.


Print evidence

You can print single still images or whole views from recorded video in several ways. When you print, the image is automatically included in a surveillance report, in which you can include notes about the recorded incident.



You can also print information about alarms if your organization uses the alarm handling features.

Print a surveillance report

1. Select the relevant camera or view that you want to print as part of a surveillance report.
2. Browse to the relevant time or sequence.
3. Move your mouse over the image and in the menu that appears on the camera's toolbar, click the **Print** icon .

The **Surveillance Report** appears displaying a preview of the image as well as information about:

- Camera name

Network Video Management System Smart Client 2016 R3 - User Manual

- Image capture time
- Print time
- Name of the user

In **User's Note**: you can include a description of the incident.

Tip: If you used digital zoom on the image, only the area on which you have zoomed in will be printed.

Optional: If you want to change or verify paper size, source and orientation for the printout, in the **Surveillance Report** window, click **Page Setup** to open the **Page Setup** window.



When ready, click **OK** to return to the Sony - Network Video Management System Smart Client **Surveillance Report** window. If you want to preview the report, click **Preview**.

4. Click **Print** to print the image and associated details.

Extend

Network Video Management System add-on products are separate software components that extend your video management system with extra value and functionality.

Network Video Management System Smart Wall

About Network Video Management System Smart Wall

This add-on product is available only for selected surveillance systems (see "Surveillance system differences" on page 11). Your user rights may restrict your access to certain features.

Network Video Management System Smart Wall is a collaboration tool that lets you provide security personnel with a rich visual overview of the areas you want to keep an eye on. One or more operators can share a variety of content, such as video, images, maps, text, and HTML pages on monitors and video walls to help security teams respond to incidents quickly and effectively.

Typically, Smart Wall is used by operators in command centers, city surveillance, traffic control centers, and so on.



Example of a video wall

Setting up a Smart Wall

System administrators define the layout and behavior of a Smart Wall. This includes the following:

- General properties, such as the name of the Smart Wall, and whether it displays status text, a title bar, or a live indicator.
- Presets that control the layout of the display, and the default cameras that it shows video from.
- The user roles that can view, operate and add content, or play back content, and when they can do so.
- Events that can be combined with rules to trigger system actions, such as displaying an alarm or content.

- Rules that determine whether an action is triggered by an event, or based on a schedule.

If you want to change any of these settings of behaviors, talk to your system administrator.

Viewing live or recorded content in Network Video Management System Smart Wall

You can view Network Video Management System Smart Wall content on the **Live** and **Playback** tabs in Network Video Management System Smart Client.

Note: User rights can prevent cameras from displaying video on your Smart Wall.

To view content on a Smart Wall, follow these steps:

1. In the **Views** pane, expand **Smart Walls**, expand the Smart Wall folder, and then select the monitor.
2. Depending on what you want to do, click either the **Live** or **Playback** tabs.

View Smart Wall content in a separate window

You can send the Smart Wall content to a separate window on your main computer monitor, or to secondary computer monitors that you're using. For example, this is useful in the following situations:


- You are setting up a video wall for the first time, and want to display content in full-screen on the monitors.
- If you aren't located in the same room as the video wall, and you want to see what it's showing while you work on other tasks.
- If you want to work in Smart Client while you monitor a situation on your Smart Wall. For example, you might want to investigate the situation on the **Playback** tab, or take a snapshot of the suspect.

The following table describes ways to view Smart Wall content in a separate window or secondary display.

Option	Description
Primary Display	View content in full-screen on the display that you're currently viewing. Smart Client remains open behind the Smart Wall content. You can minimize or resize the window. This option is useful when you want to focus on the area that the Smart Wall covers. For example, when you want to watch the front parking lot after security has lost track of a suspect inside the building.
Secondary Display	View content on another display, and continue viewing Smart Client on the current display. This option lets you keep an eye on your Smart Wall while working in Smart Client. For example, you can continue to monitor the parking lot while you export video of the incident.

Option	Description
<p>Primary Display</p>	<p>View content in full-screen on the display that you're currently viewing. Smart Client remains open behind the Smart Wall content. You can minimize or resize the window.</p> <p>This option is useful when you want to focus on the area that the Smart Wall covers. For example, when you want to watch the front parking lot after security has lost track of a suspect inside the building.</p>
<p>Floating Window</p>	<p>View content in a floating window on the display that you're currently viewing. You can maximize or resize the window.</p> <p>For example, this option is useful when you want to display content from multiple Smart Walls. You can watch the parking lot and the roof at the same time.</p>

To send content from a Smart Wall to a display, follow this step:

- At the top of your Smart Wall view item, click the  icon, select **Send View To**, and then select the display option.


Reviewing content without disturbing what's being displayed on the video wall

You can view live or recorded content without changing the content that Smart Wall displays by clicking **Disconnect Smart Wall monitor**. Changes you make while disconnected do not affect the content that the Smart Wall displays. For example, the Smart Wall continues to show the current video although you move backward on the timeline. When you want to reconnect to the shared content, click **Reconnect Smart Wall monitor**.

Note: To work with recorded video on the **Playback** tab, the **Playback** permission must be granted to the user role that you are assigned to. If you do not have this permission and you try to make a change, for example by moving the timeline slider, the system automatically disconnects you from the shared view. To return to the shared view, click **Reconnect Smart Wall monitor**.

Start working with a Smart Wall

After your system administrator sets up a Smart Wall, you can start working with it in Smart Client. By default, the Smart Wall overview reflects the layout, size, and cameras that your system administrator specified, but you can change those settings and add other types of content. For more information, see [Add or remove content on a Smart Wall](#) (on page 143).

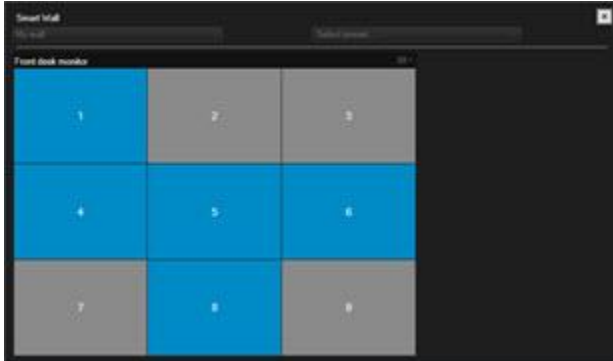

The Smart Wall overview with a 3x3 layout in a view item

Blue tiles in the Smart Wall overview are displaying content. Gray tiles are empty. You can identify the type of content that a tile is displaying by doing the following:

- Hover the pointer over a tile. The number of the tile changes to an icon, such as a camera, that indicates the type of content
- Click the tile to view the content in a **Preview** window

Note: The toolbar in the Preview window provides options for printing the content, or sending it to another Smart Wall.

To add a Smart Wall overview to a view, follow these steps:

1. Click **Setup**.
2. In the **Views** pane, create or select a view.



Tip: Views that contain wide layouts are good for displaying Smart Wall content. For example, the bottom of the 1+1+2 view provides a wide position. The 1×3 view can contain three Smart Walls at the same time.

3. In the **System Overview** pane, drag the **Smart Wall** overview to the position in the view where you want to work with it.
4. Click **Setup** to exit setup mode.
5. In the **Smart Wall** menu, select the Smart Wall that you want to work with.

Show video from a camera

To display video from a camera in your Smart Wall, follow these steps:


1. On the **Live** or **Playback** tab, in the **Views** pane, select the view that contains the Smart Wall overview.
2. To add a camera, use one of the following steps:
 - In the **Cameras** pane, drag the camera to a tile in your Smart Wall overview.

Note: The **Cameras** pane groups cameras by server . A red icon  indicates that a server is not available, and you cannot select cameras from that server.

Drag a camera from a map to a Smart Wall

To display video from a camera on a map, drag the camera from the map to the Smart Wall view item. For example, this is a good way to quickly share video when an alarm triggers.

Tip: You can also drag cameras from maps in other displays, such as floating windows or secondary displays.

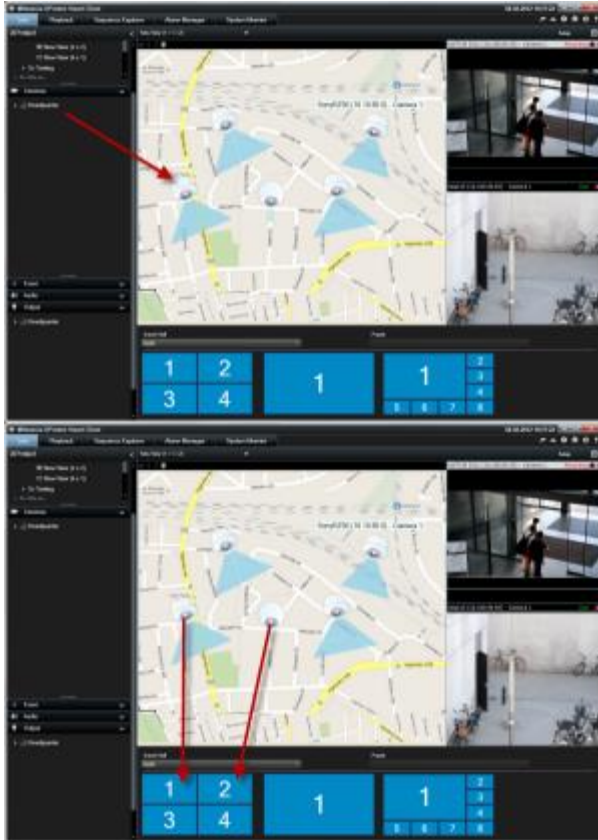

Add or remove content on a Smart Wall

Network Video Management System Smart Wall lets you display content such as video feeds from cameras, HTML pages, images, text, and controls such as hotspots and carousels on monitors and video walls.



Depending on the situation and the environment you monitor, you can combine these different types of content to improve response times and effectiveness. For example, if you want to display a picture of a suspect so that people on patrol know who to look for, you can add an image. If you want to provide guidance for response measures, you can add text.

Display video or an image

Show video from a camera

To display video from a camera in your Smart Wall, follow these steps:


1. On the **Live** or **Playback** tab, in the **Views** pane, select the view that contains the Smart Wall overview.
2. To add a camera, use one of the following steps:
 - In the **Cameras** pane, drag the camera to a tile in your Smart Wall overview.

Note: The **Cameras** pane groups cameras by server . A red icon  indicates that a server is not available, and you cannot select cameras from that server.

Drag a camera from a map to a Smart Wall

To display video from a camera on a map, drag the camera from the map to the Smart Wall view item. For example, this is a good way to quickly share video when an alarm triggers.

Tip: You can also drag cameras from maps in other displays, such as floating windows or secondary displays.

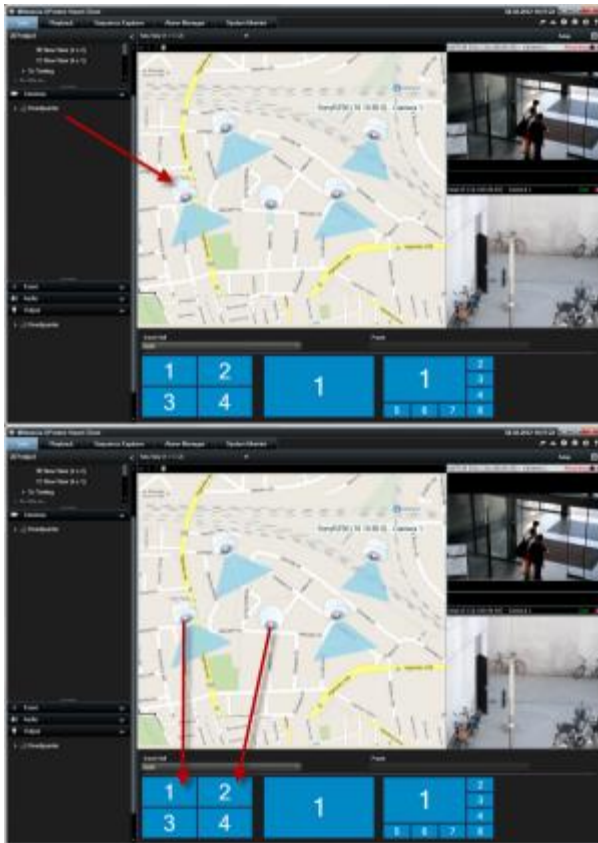

Display an image

You can display static images on your Smart Wall. For example, this is useful when you want to share a snapshot of a suspect, or a diagram of emergency exits.

If you are sharing an image with users or Smart Walls that cannot access the network location of the image file, you can embed the image by clicking **Embed** on the **Properties** pane. When you embed an image it is stored in Smart Client, and the connection to the original file location is removed. If you remove or replace an embedded image from a Smart Wall and want to display it again, you must add the image file to the Smart Wall again.

Tip: If you want to share floor plans or maps, consider using the Map feature (see "Maps" on page 94). The Map feature is available only for certain surveillance systems (see "Surveillance system differences" on page 11).

The procedures in this topic assume that you have already added a Smart Wall overview to a view. For more information, see Start working with a Smart Wall (on page 142).

To display an image on a Smart Wall, follow these steps:

1. On your computer, go to the location of the image file.
2. In Smart Client, on the Navigation pane, select the view that contains your Smart Wall overview.
3. Drag the image file to the tile in the overview where you want to display the image.

Note: When you drag an image to the Smart Wall overview, the system automatically embeds the image and the Properties pane is not available.

To display an image on more than one Smart Wall, follow these steps:


1. Select the view that contains your Smart Wall overview, and then click **Setup**.
2. In the **System Overview** pane, drag the **Image** item to a position in the view.
3. Select the image file that you want to add, and then click **Open**.

Note: When you add an image to a view, the system resizes the image to fit the position. This can distort the image. To avoid distortion, in the **Properties** pane for images, select the **Maintain image aspect ratio** check box.

4. On the **Properties** pane, click **Embed**.
5. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it. Repeat this step to send the image to each Smart Wall.

Take a snapshot and then display it on the Smart Wall

You can share a snapshot of an incident in the following ways:

1. On the **Live** or **Playback** tab, roll the mouse over the view item that is showing the footage.
2. On the view item toolbar, click the **Create Snapshot** icon . The system saves the image to the location specified in Application options.
3. To display the snapshot, drag the snapshot from the folder to a tile in the Smart Wall overview.

Display text, web pages, or alarms

Add text to a view or Smart Wall

You can add text to a position in a view. For example, this is useful when you want to send a message or instructions to operators, or post a work schedule for security personnel. You can use up to 1,000 characters.

To add text to a view item, follow these steps:

1. Click **Setup**.

2. On the **System Overview** pane, drag the **Text** content to the view.
3. In the **Text Editor** window, you can do the following:
 - Enter the text that you want to display
 - Paste text that you copied from an external text editor, for example Microsoft Word or WordPad, by right-clicking and choosing **Paste**.
 - Apply basic formatting to the text, such as font types, sizes, and colors.
4. To save your text and start displaying it, click **Save**. If you want to change your text after you save it, you can open the Text Editor again from the **Properties** pane by clicking **Edit**.

Notes:

Resizing the Text Editor window changes the size of the text. Content added to view items is resized to fit the view item when it is displayed.

You can insert tables from products such as Microsoft Word and Microsoft Excel, but you cannot make changes to the tables. For example, you cannot resize rows, or add or remove them. Additionally, to accommodate for Network Video Management System Smart Clients dark and light themes, the system tries to change the color format of light or dark texts. If your text is not visible, apply a different color format to the text.

Display text on a Smart Wall

If you are using the Network Video Management System Smart Wall add-on, you can also display text on your video wall. For example, this is useful when you want to provide information to anyone who can see the video wall. The best way to share text depends on whether you want to display it on one Smart Wall, or send it to more than one Smart Wall.

Note: When you send text to a Smart Wall, only the original text displays. That is, if you edit the text in the view, the change does not display on the Smart Wall.

To display text on more than one Smart Wall, follow these steps:

1. Perform the steps described earlier in this topic for adding text to a view item.
2. After you save, click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the position on the monitor. Repeat this step to send the text to each Smart Wall.

To display the text on one Smart Wall, follow these steps:

Note: The steps in this procedure require that your text editor supports drag and drop operations. If your text editor does not, use the previous procedure in this section to send the text to the Smart Wall.

1. In Network Video Management System Smart Client, on the Navigation pane, select the view that contains your Smart Wall overview.
2. In your text editor, enter the text that you want to display, and then select it. If the text already exists, just select it.
3. Drag the text to the tile in the overview where you want to display it.
4. In the Text Editor, review the text, and make any changes required.
5. To save your text and start displaying it, click **Save**. If you want to change your text after you save it, you can open the Text Editor again from the **Properties** pane by clicking **Edit**.

Display an alarm, or a list of alarms on your Smart Wall

You can display the Alarm List and one or more individual alarms on a Smart Wall. For example, sharing a list of alarms provides an overview of multiple incidents that people should address. Sharing an individual alarm can focus attention on one particular incident.

Display a list of alarms in a view or Smart Wall

You can share a prioritized overview of all alarms and events by adding the Alarm List. You can then double-click an alarm in the list to view and work with details about the alarm. For more information, see View and edit the details of an alarm (see "View and edit details of an alarm" on page 127). To view a list of events after you add the Alarm List to your view, click **Setup**, expand the **Properties** pane, and in the **Data Source** field select **Event**.

To display a list of alarms, follow these steps:

1. On the **Views** pane, select the view where you want to add the Alarm List, and then click **Setup**.
2. On the **System Overview** pane, expand **Alarms**, and then drag the **Alarm List** overview to a view item.
3. Click **Setup** to exit setup mode.
4. To send the alarm list to a Smart Wall, on the view item toolbar, click **More, Send to Smart Wall**, and then select the Smart Wall, the monitor, and the tile where you want to display the list.

Tip: Alternatively, if the view contains your Smart Wall overview, you can drag the Alarm List directly to a tile in your Smart Wall overview instead.

Display an individual alarm on your Smart Wall

When you add an individual alarm, Smart Wall displays the following details about the alarm:

- The time of day when the event triggered the alarm
- The name and video feed from the device that triggered the alarm, and all devices that are related to it
- You can view additional details and change some settings for the alarm by clicking the arrow in the upper right part of the position in the view. The details are as follows:
 - The person the alarm is assigned to, its priority, and the state of the alarm. You can change these if you want to
 - The source, or what triggered the alarm, such as when a camera detects motion or an analytics event occurs
 - Instructions. Typically, these indicate what to do in response to an alarm. You define instructions for alarms in Management Client.
 - Activities. These are comments that users entered. Typically, they indicate decisions or actions related to the alarm. Additionally, when someone changes the details of the alarm, the system adds the changes to the list of activities
 - You can add comments to the alarm. Comments display as activities

Network Video Management System Smart Client 2016 R3 - User Manual

- If you were recording video when the event occurred, you can view the video of the moment the alarm was triggered by clicking the **Playback** tab, and then **Go To Alarm Time**

Note: The view item toolbar that automatically displays when you hover the pointer over a view item covers the scrollbar, and you cannot scroll to view the details. To view the additional details in the view item, while the pointer is outside the view item, press and hold the CTRL key and then use the scrollbar.


To display an individual alarm, follow these steps:

1. Follow the steps for adding the alarm list to a view.
2. In the **Alarm List**, drag the alarm to the tile in your Smart Wall overview.

Note: To send an individual alarm, you must drag it to the Smart Wall. If you use the More menu, you add the entire list.


Add an HTML page to a view or Smart Wall

You can add HTML pages to views and Smart Walls. For example, this is useful for displaying instructions, company web pages, Internet map services, collections of links, e-learning pages, and so on.

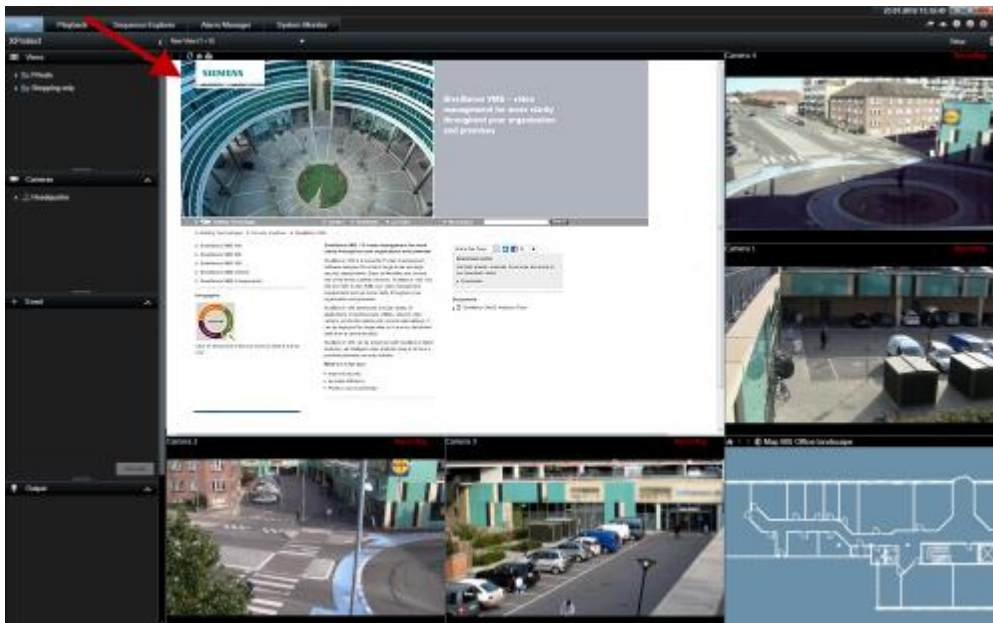

Example: A company web page inserted in a view

1. In setup mode, in the **System Overview** pane, click and drag the **HTML Page** item to the view.
2. The **Open URL** window opens.

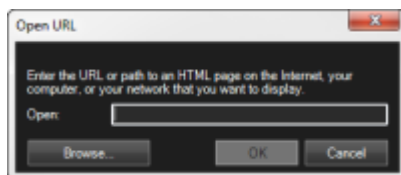

3. In the **Open URL** window's **Open** field, enter the location of the required HTML page (example: <http://www.mywebsite.com/mywebpage.htm>).


- or -

If the HTML page is stored locally on your computer, specify its location on your computer (example: C:\myfiles\mywebpage.htm), or click **Browse...** to browse for the required HTML page.

4. Click **OK**.

After you add an HTML page to a view, you can specify properties for the page:

1. In setup mode, select the imported HTML page in the view. In the **Properties** pane, change the necessary properties.

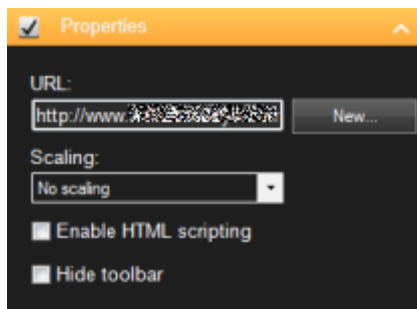


- **URL:** Click **New** to specify a new URL or location of the HTML page.
- **Scaling:** Select the scaling of the HTML page. The optimal scaling depends entirely on the content of the imported HTML page and how you want to display it.

As a rule, with a high scaling value, e.g. 1280×1024, text on the HTML page will appear relatively small, and a considerable amount of content will be visible without the need for scrolling. With a low scaling value, e.g. 320×200, text on the HTML page will appear relatively large, and a relatively small amount of content can be displayed without the need for scrolling.

- **Enable HTML scripting:** Only select this feature if the HTML page is a custom-made HTML page for navigating or triggering features inside the Sony - Network Video Management System Smart Client itself (see examples of custom-made HTML pages in Use an HTML Page for Navigation (on page 71)).

If selected, a client script required for navigating and controlling a number of features inside the Sony - Network Video Management System Smart Client will be added to the HTML page. For HTML pages which are not going to be used for such purposes, the client script cannot be used, and may even cause the HTML page to malfunction.

- **Hide toolbar:** By default, a simple navigation bar is inserted above each imported HTML page. The navigation bar has the following five buttons: **Back**, **Forward**, **Refresh**, **Home** and **Print**:



If you do not want the navigation bar, you can hide it by selecting **Hide toolbar**.

When an imported HTML page contains links, we recommend that the links have the `target='blank'` attribute (example: `Link`). This makes the links open in separate windows, which will help you avoid losing view of the Sony - Network Video Management System Smart Client window when a link opens a web page in the same browser as the Sony - Network Video Management System Smart Client .

Display an HTML page on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display HTML pages.

1. Follow the steps for adding an HTML page to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Add controls that expand Smart Wall functionality

Add the camera navigator to a view

Camera navigators let you set up a complete overview of an area by adding all cameras that cover the area in a single view. For example, this is useful if you want to be able to follow someone around a building. As the person moves, you can switch to the next camera. For more information, see About the Camera Navigator (on page 88).

To add a camera navigator to a view, follow these steps:

1. Click **Setup**.
Tip: To get the most out of the camera navigator and to be able to see the camera views in the pane on the right, select a 1 x 1 view.
2. From the **System Overview** pane, drag the **Camera Navigator** to your view.
3. In the **Select Home Map and Camera** window, select the map that you want to base your navigation on.
4. Click the camera that you want to select as the default camera whenever you open the **Camera Navigator**, and then click **OK**.
5. Click **Setup** to exit setup mode.

Display a camera navigator on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display a camera navigator.

Note: When you send a camera navigator to a Smart Wall, the navigator uses only the original settings. That is, if you select a different camera in the view, the Smart Wall does not display the change.

1. Follow the steps for adding a camera navigator to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the camera navigator to a tile in the overview.

Add a hotspot to a view

1. In setup mode, in the **System Overview** pane, click and drag the **Hotspot** item to the required position in the view.

Tip: Note that the position now displays a hotspot icon:  to indicate that it is a hotspot.

2. Specify the properties for the hotspot (see "Hotspot settings" on page 78) in the **Properties** pane. To save bandwidth, you can specify a low image quality for the other positions in your view and a high quality for the hotspot.


Add a hotspot to a Smart Wall


If you are using Network Video Management System Smart Wall, you can display hotspots.

1. Follow the steps for adding a hotspot to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the hotspot to a tile in the overview.

Add a carousel to a view

1. In setup mode, in the **System Overview** pane, click and drag the **Carousel** item to the position in the view.
2. In the **Carousel Setup** window, on the left, click to expand the servers  and then click to select the camera you want to include in the carousel. Click Add. Repeat for each camera you want to include in the carousel.

If a server has a red icon , it is unavailable, in which case you will not be able to view a list of cameras from that server.

3. To determine the sequence the cameras appear in the carousel, in the **Selected cameras** list, select the camera and move up or down.
4. Enter the number of seconds each camera appears in the carousel. You can specify a value for all cameras, or for each camera.
5. Click **OK** to close the **Carousel Setup** window.

To change settings for the carousel, click **Setup**, and in the **Properties** pane, click **Carousel Setup** to open the **Carousel Setup** window.

Display a carousel on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display carousels.

1. Follow the steps for adding a carousel to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the carousel to a tile in the overview.

Add a map to a view or Smart Wall

You can add existing maps or create new ones.

1. In setup mode, in the **System Overview** pane, drag the **Map** item to a position in the view.
2. In the **Map Setup** window that appears, select either **Create new map** or **Use existing map**.

A triangle next to a map name indicates that the map might have one or more sub-maps. Sub-maps and the elements they contain are also added.

3. In the **Name** field, enter a name for the map. The name will be displayed in the map position's title bar.

Tip: If you leave the **Name** field blank and click **Browse...**, the **Name** field displays the name of the image file you select.

4. Click **Browse...** to browse for the image file to use as a map.
5. Click **Open** to select image file.
6. Click **OK**.

Display a map on a Smart Wall

If you are using Network Video Management System Smart Wall, you can display maps.

1. Follow the steps for adding a map to a view.
2. Click **More, Send to Smart Wall**, select the Smart Wall setup, select the monitor, and then select the tile where you want to display it.

Tip: Alternatively, if your view contains a Smart Wall overview, you can drag the map to a tile in the overview.

Display information that is being shown in another view or Smart Wall

Send video from one Smart Wall to another

Send video from a view item to a Smart Wall

Depending on whether your current view contains your Smart Wall overview, you can send content to your Smart Wall in the following ways.

Current view does not contain your Smart Wall overview

- On the view item toolbar, click **More, Send to Smart Wall**, select the Smart Wall, select the monitor, and then select the position on the monitor.



Current view contains your Smart Wall overview

If your current view contains your Smart Wall overview, you can drag a view item to a tile on your Smart Wall overview.

The way the view item is added depends on how your system administrator set up the element insertion method for the monitor. The content from the view item either replaces the content that

the tile displayed, or pushes it to the next tile in the Smart Wall overview. For example, if you drag content to tile 1, the content of tile one is moved to tile 2, and so on.


Tip: Before you replace the content on your Smart Wall overview, it's a good idea to double-check what the tile is displaying. You can do this by moving the pointer over the occupied tile. The tile displays an icon to indicate the type of content that it is displaying.

Stop displaying some or all content on a Smart Wall

You can stop displaying content on your Smart Wall, for example, when an incident is under control or the content is no longer relevant, in several ways.


Note: Other users can manually change the content on a Smart Wall, and the content can change according to a schedule or rules. This means that the content that you remove can reappear later. To permanently prevent content from displaying, contact your system administrator.

To remove the Smart Wall overview from a view, follow these steps.

1. On the **Views** pane, select the view that contains the Smart Wall, and then click **Setup**.
2. In the view item that contains the Smart Wall overview, click the  icon.

Note: This clears only the view. The tiles in the Smart Wall overview continue to display content on the Smart Wall.

To stop displaying all content on a Smart Wall, follow this step:

- At the top of the Smart Wall overview for the monitor that you want to clear, click the  icon and select **Clear View**.

To remove content from a specific tile in the Smart Wall overview, follow this step:

- In the Smart Wall overview, right-click the tile that you want to clear and select **Remove from View**.

Send content from a view to a Smart Wall

Depending on whether your current view contains your Smart Wall overview, you can send content to your Smart Wall in the following ways.

Current view does not contain your Smart Wall overview

- On the view item toolbar, click **More, Send to Smart Wall**, select the Smart Wall, select the monitor, and then select the position on the monitor.



Current view contains your Smart Wall overview

If your current view contains your Smart Wall overview, you can drag a view item to a tile on your Smart Wall overview.


The way the view item is added depends on how your system administrator set up the element insertion method for the monitor. The content from the view item either replaces the content that the tile displayed, or pushes it to the next tile in the Smart Wall overview. For example, if you drag content to tile 1, the content of tile one is moved to tile 2, and so on.


Tip: Before you replace the content on your Smart Wall overview, it's a good idea to double-check what the tile is displaying. You can do this by moving the pointer over the occupied tile. The tile displays an icon to indicate the type of content that it is displaying.

Change the layout of a Smart Wall monitor

There are several ways you can change the layout of monitors, and how content is arranged on them.

Apply a different layout to a monitor on a Smart Wall

- In a Smart Wall overview, click the  icon for the monitor, select **Change View Layout**, select the display format (for example, 4:3 or 16:9), and then select the layout.

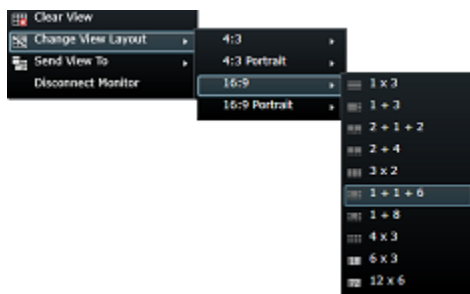


Apply a different preset

You can select a different preset for the Smart Wall overview. Note, however, that changing the preset can change all monitors in the Smart Wall.

- If you want to apply a different preset, use the **Select preset** menu.

Note: Other users can change the preset manually, or rules can change it automatically.

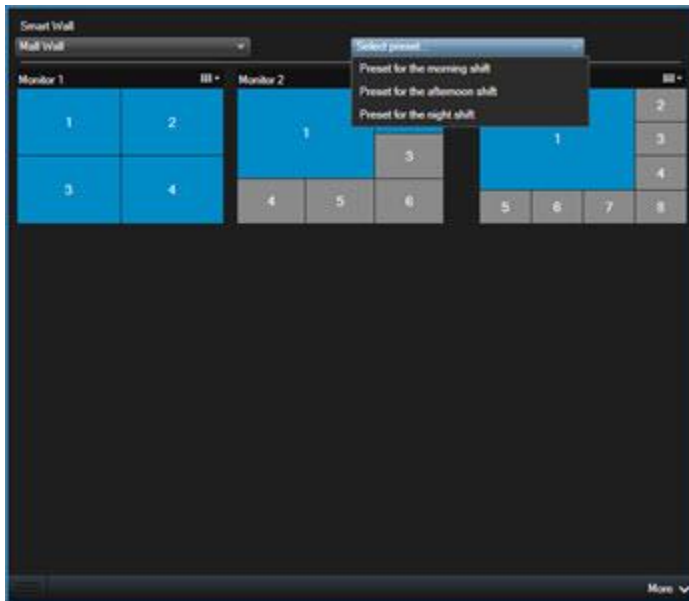

Troubleshooting a Smart Wall

This topic provides troubleshooting assistance for Smart Wall operators. Note that some of the solutions will require help from your system administrator.

Why don't my monitors display the layout that I specified for my Smart Wall?

Typically, this occurs because your system administrator did not activate the preset for the monitor. Ask your system administrator to verify that the preset is active in Management Client.

My camera isn't part of a preset. Why isn't it removed when I activate the preset?

This can be because the **Empty preset item** setting is not selected for the preset. Ask your system administrator to verify the setting for the preset in Management Client.

Why can't I drag an item, for example a camera, to a view? When I click the item, nothing happens

This is a known issue in Microsoft Windows that can also occur in Network Video Management System Smart Wall. The workaround is press ESC one time, and the drag functionality should work again.

When I drag an image from a view to my Smart Wall, it isn't displayed. Why not?

You probably did not embed the image in the view, and the computer that is running the Smart Wall cannot access the image file. To ensure that everyone can see an image, it's a good idea to

embed it in the view. For more information, see Add or remove content on a Smart Wall (on page 143).

Why are my Smart Wall monitors displayed on top of each other?

When your system administrator added monitors to your Smart Wall, he or she did not define the layout of the monitors. When your administrator adds monitors, the system automatically stacks them in the layout in the order in which they were added. Your administrator must then arrange them according to your needs.

Why can't I drag an image from Windows Explorer to my Smart Wall monitor? The cursor doesn't change to the Allow Drop icon

This occurs when your Smart Client is not running under the same user profile as Windows Explorer. For example, you are running Smart Client under the Local administrator user profile, but you are running Windows Explorer as a Standard user. To resolve this issue, ensure that both programs are running under the same user profile.

I have added the Alarm List to a view item, but I can't use the scroll bar to view details

This is a known issue in Network Video Management System Smart Wall. To use the scrollbar, position the pointer outside the view item, and then press and hold the CTRL key. This prevents the view item's toolbar from covering the scrollbar. You can now move the pointer into the view item and use the scrollbar.

Network Video Management System Smart Client – Player

About the Network Video Management System Smart Client – Player


The Network Video Management System Smart Client – Player is a version of the Sony - Network Video Management System Smart Client that can be included with exported video data, letting the recipient view the exported files without having surveillance software installed. An Network Video Management System Smart Client – Player is also automatically included in video archives and recording database folders to ensure availability of recordings if the disk with the recordings is removed. You can use the Network Video Management System Smart Client – Player to view video data and archives and to repair corrupted databases. The application has many of the features of the Sony - Network Video Management System Smart Client and looks similar.

Quick guide to the Network Video Management System Smart Client – Player

The Playback/Sequence Explorer tab

Current view

Timeline

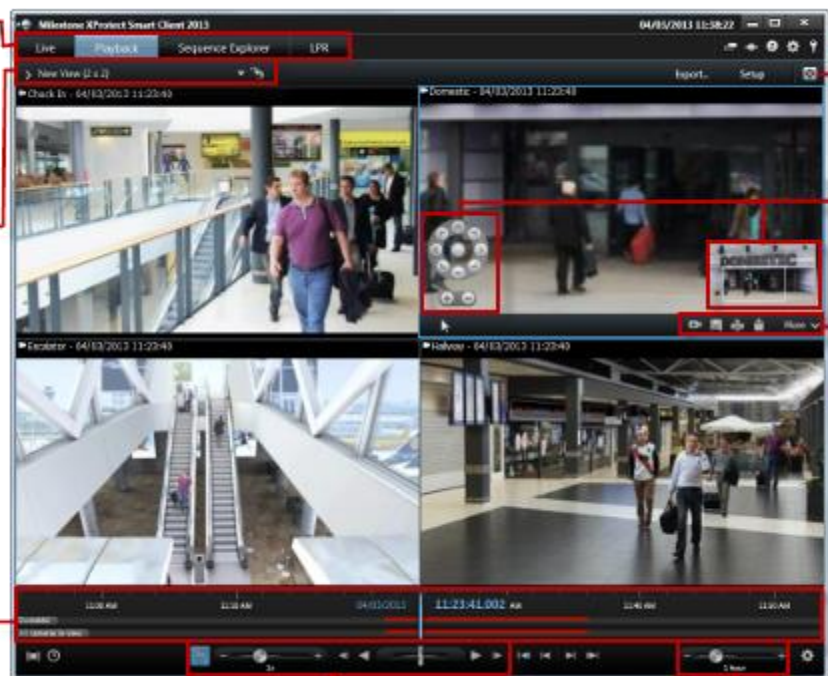

Full screen

Zoom

Copy/print image

Playback

Change timeline span

Work with views in the Network Video Management System Smart Client – Player

You create and manage views by clicking **Setup** on the Network Video Management System Smart Client – Player toolbar.

The Project pane

A project in Network Video Management System Smart Client – Player is a collection of files that are created when video is exported in database format from Sony - Network Video Management System Smart Client.

- Click **Setup** to make changes to a view or your application settings and save these to your project.

Your user settings, including information about your views, are stored as part of a project.

Passwords

You can assign passwords to a project, for example, so only people with permission can view a video. You can also assign passwords to devices when you export them. To avoid having to keep track of several database passwords, you can assign a single password to the overall project. If you do not assign an overall password and you have databases with passwords added to your project, you will be asked to enter a password for each database when you open the project. If you assign a password to a project, you cannot delete it. However, you can change the password or create a new identical project in the **Project** pane:




- Click **New Project** and then click **Open Database**  to start the **Open Database** wizard and add the relevant devices.

The Views pane

In the **Views** pane you can add, create, edit, or delete views. For more information on what you can do with views, see Views (see "About views" on page 58).

The Overview pane


The **Overview** pane displays the cameras, microphones, speakers, HTML, images, and plug-ins assigned to the project.

- Click **Open Database** , to open the **Open Database wizard**. You can rename and delete devices from a project by clicking **Rename**  or **Delete** .

When you delete a device, this does not delete the actual database files associated with the device, it just removes them from the project.


Link Audio

You can link audio to a device:

- Click **Link Audio to Camera**  to have associated audio automatically selected when you view recorded video for a particular camera.

Open Database wizard

The Open Database wizard lets you open a database from an archive or previously exported material. You can use this wizard to open a database and add it to your project, for example, if you

want to view an archived database or previously exported material. The Open Database wizard also repairs corrupted databases automatically. To start the Open Database wizard, on the Sony - Network Video Management System Smart Client toolbar, click Setup, and in the Overview pane, click Open Database: .

WARNING: Do not attempt to open a live database or live archive—this can damage your system.

Select the folder containing the relevant files. When you select a database, the name of the device appears next to the **Camera**, **Microphone**, or **Speaker** field. If the system cannot identify a camera, for example, if you open archived recordings, the name will be **Unknown** and all three types of devices will be added as Unknown devices (even if they don't exist) with the database file name assigned. If there is no device, the field contains **N/A**.

If the database you are trying to open is corrupted, the wizard can repair it.

Scripting

Startup scripting

You can use scripting to control parts or all of the Sony - Network Video Management System Smart Client login procedure.

Examples:

- If using **Basic authentication** or **Windows authentication**, you can make the Sony - Network Video Management System Smart Client login window open with a pre-filled server address and user name fields so users only have to enter a password to log in.
- If using **Windows authentication (current user)**, you can make the Sony - Network Video Management System Smart Client connect to the surveillance system automatically, based on the user's current Windows login.

Some authentication methods are only available if the Sony - Network Video Management System Smart Client user logs in to certain Sony surveillance systems. For a detailed outline of the features available on your particular system, see the Network Video Management System Product Comparison Chart on: <http://www.sony.net/CameraSystem>.

Parameters

You can use the following parameters:

ServerAddress

Refers to the URL of the management server to which the Sony - Network Video Management System Smart Client connects.

The following example shows the Sony - Network Video Management System Smart Client's login window with `http://ourserver` in the **Server address** field:

```
Client.exe -ServerAddress="http://ourserver"
```

The Sony - Network Video Management System Smart Client's default authentication type is **Windows authentication (current user)**. Unless you change this, using the **AuthenticationType** parameter (described in the following section), the login window automatically displays the current Windows user in the **User name** field.

UserName

Refers to a specific user name.

The following example shows the Sony - Network Video Management System Smart Client's login window with `http://ourserver` in the **Server address** field, and **Tommy** in the **User name** field:

```
Client.exe -ServerAddress="http://ourserver" -UserName "Tommy"
```

This parameter is relevant only for **Windows authentication** and **Basic authentication**. You use the **AuthenticationType** parameter to control which authentication method to use.

Password

Refers to a specific password.

The following example shows the Sony - Network Video Management System Smart Client's login window with `http://ourserver` in the **Server address** field, **Tommy** in the **User name** field, and **T0mMy5Pa55w0rD** in the **Password** field:

```
Client.exe -ServerAddress="http://ourserver" -UserName "Tommy" -Password  
"T0mMy5Pa55w0rD"
```

This parameter is relevant only for **Windows authentication** and **Basic authentication**. You use the **AuthenticationType** parameter to control which authentication method to use.

AuthenticationType

Refers to one of Sony - Network Video Management System Smart Client's three possible authentication methods: **Windows authentication (current user)** (called **WindowsDefault** in startup scripts), **Windows authentication** (called **Windows** in startup scripts), or **Basic authentication** (called **Simple** in the startup scripts).

The following example shows the Sony - Network Video Management System Smart Client login window with `http://ourserver` in the **Server address** field, **Basic authentication** selected in the **Authentication** field, **Tommy** in the **User name** field, and **T0mMy5Pa55w0rD** (masked by asterisks) in the **Password** field:

```
Client.exe -ServerAddress="http://ourserver" -UserName "Tommy" -Password  
"T0mMy5Pa55w0rD" -AuthenticationType Simple
```

If you use **Windows authentication**, the example is:

```
Client.exe -ServerAddress="http://ourserver" -UserName "Tommy" -Password  
"T0mMy5Pa55w0rD" -AuthenticationType Windows
```

If you use **Windows authentication (current user)**, the **UserName** and **Password** parameters would not be necessary, and the example looks like this:

```
Client.exe -ServerAddress="http://ourserver" -AuthenticationType  
WindowsDefault
```

Script

Refers to a full path to an `.scs` script (a script type targeted at controlling the Sony - Network Video Management System Smart Client).

The following example uses an `.scs` script to login:

```
Client.exe -Script=c:\startup.scs
```

Example of an `.scs` script for logging in to `http://ourserver` with the current Windows user:

```
<ScriptEngine>
```


Network Video Management System Smart Client 2016 R3 - User Manual

```
<Login>
  <ServerAddress>http://ourserver</ServerAddress>
  <AuthenticationType>WindowsDefault</AuthenticationType>
</Login>
</ScriptEngine>
```

You can use many of the Sony - Network Video Management System Smart Client's function calls (see View a list of function calls) to add further functionality to .scs scripts. In the following example, we have added a line so the .scs script from the previous example will also minimize the Sony - Network Video Management System Smart Client application:

```
<ScriptEngine>
  <Login>
    <ServerAddress>http://ourserver</ServerAddress>
    <AuthenticationType>WindowsDefault</AuthenticationType>
  </Login>
  <Script>SCS.Application.Minimize();</Script>
</ScriptEngine>
```

Format

Valid parameter formats are:

```
{-,/,--}param{ ,=,:} (".' )value(",')
```

Examples:

```
-UserName Tommy
--UserName Tommy /UserName:"Tommy" /UserName=Tommy -Password 'Tommy'
```

Glossary of Terms

A

Alarm

Incident defined on surveillance system to trigger an alarm in Network Video Management System Smart Client. If your organization uses the feature, triggered alarms are displayed in views that contain alarm lists or maps.

Archiving

The automatic transfer of recordings from a camera's default database to another location. This way, the amount of recordings you are able to store will not be limited by the size of the camera's default database. Archiving also makes it possible to back up your recordings on backup media of your choice.

Aspect Ratio

Height/width relationship of an image.

AVI

A popular file format for video. Files in this format carry the .avi file extension.

C

Camera Navigator

A feature that allows you to see all your cameras in relation to each other, for example, as they are laid out according to a floor plan. Using the Camera Navigator, you can navigate from one camera to the next from a single view.

Carousel

A particular position for viewing video from several cameras, one after the other, in a

view (on page 166) in Network Video Management System Smart Client.

Codec

A technology for compressing and decompressing audio and video data, for example in an exported AVI (on page 162) file.

D

Deadzone

A deadzone determines how much a joystick handle should be allowed to move before information is sent to the system. Ideally, a joystick handle should be completely vertical when not used, but many joystick handles lean at a slight angle. When joysticks are used for controlling PTZ (on page 165) cameras, even a slightly slanting joystick handle could cause PTZ cameras to move when it is not required. Being able to configure deadzones is therefore often desirable.

DirectX

A Windows extension providing advanced multimedia capabilities.

E

Event

A predefined incident occurring on the surveillance system; used by the surveillance system for triggering actions. Depending on surveillance system configuration, events may be caused by input from external sensors, by detected motion, by data received from other applications, or manually through user input. The occurrence of an event could, for example, be used for making a camera record with a particular frame rate, for activating outputs, for sending e-mails, or for a combination thereof.

F

Fisheye Lens

A lens that allows the creation and viewing of 360° panoramic images.

FPS

Frames Per Second, a measure indicating the amount of information contained in video. Each frame represents a still image, but when frames are displayed in succession the illusion of motion is created. The higher the FPS, the smoother the motion will appear. Note, however, that a high FPS may also lead to a large file size when video is saved.

Frame rate

A measure indicating the amount of information contained in motion video. Typically measured in FPS (on page 163) (Frames Per second).

G

GOP

Group Of Pictures; individual frames grouped together, forming a video motion sequence.

H

H.264

A compression standard for digital video.

Like MPEG (on page 164), the standard uses lossy compression as it stores only the changes between keyframes, removing often considerable amounts of redundant information: keyframes stored at specified intervals record the entire view of the camera, whereas the following frames record only pixels that change. Together with a very large degree of compression, this helps greatly reduce the size of video in the H.264 format. The very large degree of compression in H.264, however, can use considerable resources on the devices involved in the data communication.

For example, the computer running Network Video Management System Smart Client should be able to use considerable resources on decompressing H.264 video when it receives it from the surveillance system.

Hexadecimal

A numeral system with a base of 16, meaning that it uses 16 distinct symbols. Here used for defining color nuances in the map view's color tool.

Host

A computer connected to a TCP/IP network. A host has its own IP address, but may—depending on network configuration—furthermore have a name (host name) in order to make it easily identifiable.

Host Name

A name by which a particular computer on a network is identified. Host names are often easier to remember than IP addresses.

Hotspot

A particular position for viewing magnified and/or high quality camera images in Network Video Management System Smart Client views (see "View" on page 166).

I

I/O

Short for Input/Output.

I-Frame

Short name for intraframe. Used in the MPEG (on page 164) standard for digital video compression, an I-frame is a single frame stored at specified intervals. The I-frame records the entire view of the camera, whereas the following frames (P-frames) record only the pixels that change. This helps greatly reduce the size of MPEG files. An I-frame is similar to a keyframe.

J

JPEG

An image compression method, also known as JPG or Joint Photographic Experts Group. The method is a so-called lossy compression, meaning that some image detail will be lost during compression. Images compressed this way have become generically known as JPGs or JPEGs.

JPG

See JPEG.

K

Keyframe

Used in the standard for digital video compression, such as MPEG (on page 164), a keyframe is a single frame stored at specified intervals. The keyframe records the entire view of the camera, whereas the following frames record only the pixels that change. This helps greatly reduce the size of MPEG files. A keyframe is similar to an I-frame (on page 163).

M

MAC Address

Media Access Control address, a 12-character hexadecimal number uniquely identifying each device on a network.

Map

1) Network Video Management System Smart Client feature for using maps, floor plans, photos, etc. for navigation and status visualization. 2) The actual map, floor plan, photo, etc. used in a view (on page 166).

Matrix

A product integrated into some surveillance systems, which enables the control of live

camera views on remote computers for distributed viewing. Computers on which you can view Matrix-triggered video are known as Matrix-recipients (see "Matrix-recipient" on page 164).

Matrix-recipient

Computer on which you can view Matrix-triggered video.

Monitor

An individual monitor in Network Video Management System Smart Wall.

MPEG

A group of compression standards and file formats for digital video, developed by the Moving Pictures Experts Group (MPEG). MPEG standards use so-called lossy compression as they store only the changes between keyframes, removing often considerable amounts of redundant information: Keyframes stored at specified intervals record the entire view of the camera, whereas the following frames record only pixels that change. This helps greatly reduce the size of MPEG files.

O

Output

Data going out of a computer. On IP surveillance systems, output is frequently used for activating devices such as gates, sirens, strobe lights, and more.

Overlay button

A button appearing as a layer on top of the video when you move your mouse cursor over individual camera positions in views on the **Live** tab. Use overlay buttons to activate speakers, events, output, move PTZ (on page 165) cameras, start recording, clear signals from cameras.

P

Pane

Small groups of buttons, fields and more located in the left side of the Network Video Management System Smart Client window.

Panes give you access to the majority of the Network Video Management System Smart Client's features. Exactly which panes you see depends on your configuration and on your task, for example on whether you are viewing live video on the **Live** tab or recorded video on the **Playback** tab.

P-Frame

Short name for predictive frame. The MPEG (on page 164) standard for digital video compression uses P-frames together with I-frames (see "I-Frame" on page 163). An I-frame, also known as a keyframe, is a single frame stored at specified intervals. The I-frame records the entire view of the camera, whereas the following frames (the P-frames) record only the pixels that change. This helps greatly reduce the size of MPEG files.

Port

A logical endpoint for data traffic. Networks use different ports for different types of data traffic. Therefore it is sometimes, but not always, necessary to specify which port to use for particular data communication. Most ports are used automatically based on the types of data included in the communication. On TCP/IP networks, port numbers range from 0 to 65536, but only ports 0 to 1024 are reserved for particular purposes. For example, port 80 is used for HTTP traffic which is used when viewing web pages.

Preset

A predefined layout for an individual monitor in Network Video Management System Smart Wall.

PTZ

Pan-tilt-zoom; a highly movable and flexible type of camera.

R

Recording

In IP video surveillance systems, the term **recording** means **saving video and, if applicable, audio from a camera in a database on the surveillance system**. In many IP surveillance systems, all of the video/audio received from cameras is not necessarily saved. Saving of video and audio in is in many cases started only when there is a reason to do so, for example when motion is detected, when a particular event occurs, or when a specific period of time begins. Recording is then stopped after a specified amount of time, when motion is no longer detected, when another event occurs or similar. The term **recording** originates from the analog world, where video/audio was not taped until the record button was pressed.

S

SCS

File extension (.scs) for a script type targeted at controlling Network Video Management System Smart Client.

Sequence Explorer

The Sequence Explorer lists thumbnail images representing recorded sequences from an individual camera or all cameras in a view.

The fact that you can compare the thumbnail images side-by-side, while navigating in time simply by dragging the thumbnail view, enables you to very quickly assess large numbers of sequences and identify the most relevant sequence, which you can then immediately play back.

Speakers

In the context of Network Video Management System Smart Client: Loudspeakers attached to a camera that allows Network Video Management System Smart Client users to talk to audiences at the physical location of a camera.

T

TCP

Transmission Control Protocol; a protocol (i.e. standard) used for sending data packets across networks. TCP is often combined with another protocol, IP (Internet Protocol). The combination, known as TCP/IP, allows data packets to be sent back and forth between two points on a network for longer periods of time, and is used when connecting computers and other devices on the Internet.

TCP/IP

Transmission Control Protocol/Internet Protocol; a combination of protocols (i.e. standards) used when connecting computers and other devices on networks, including the Internet.

U

URL

Uniform Resource Locator; an address of a resource on the world wide web. The first part of a URL specifies which protocol (i.e. data communication standard) to use when accessing the resource, whereas the second part of the URL specifies the domain or IP address at which the resource is located. Example: <http://www.myorganization.org>.

V

View

A collection of video from one or more cameras, presented together in Network Video Management System Smart Client. A view may include other content than video from cameras, such as HTML pages and static images.

A view can be private (only visible by the user who created it) or shared with other users.

VMD

Video Motion Detection. In IP video surveillance systems, recording of video is often started by detected motion. This can be a great way of avoiding unnecessary recordings. Recording of video can of course also be started by other events, and/or by time schedules.

Index

A

About audio • 91

About Bounding Box Providers • 84, 86

About carousels • 76, 108

About digital zoom • 49

About exporting storyboards • 131, 133, 135

About frame rate effect • 81, 85

About hotspots • 77, 108

About live video • 43

About login authorization • 15, 16, 17

About Matrix • 107

About modes in Network Video Management System Smart Client • 19, 23, 24

About motion threshold • 123

About Network Video Management System Smart Wall • 28, 139

About recorded video • 28, 44

About the camera navigator • 88, 90, 150

About the Login window • 15

About the Network Video Management System Smart Client – Player • 157

About the settings in the Export window • 131, 134, 135

About views • 58, 158

Acknowledge an alarm • 127

Add a camera navigator to a view or a Smart Wall • 31, 89, 90

Add a camera to a view • 30, 64, 70, 78

Add a carousel to a view or a Smart Wall • 76

Add a hot zone to a map • 103

Add a hotspot to a view or a Smart Wall • 78

Add a map to a view or a Smart Wall • 101

Add an HTML page to a view or a Smart Wall • 65

Add an overlay button to a view • 68

Add and remove elements from maps • 102

Add content to views • 30, 31, 64

Add Matrix content to a view • 31, 108

Add or remove content on a Smart Wall • 142, 143, 156

Add text to a view item or a Smart Wall • 69

Add/edit text on a map • 106

Adjust time • 122

Advanced options • 39

Alarm • 162

Alarm options • 39

Application buttons • 21, 22, 27

Application options • 32, 68, 145

Archiving • 162

Aspect Ratio • 162

Assign a shortcut number to a view • 46, 63

Audio • 25, 43, 91

Audio settings • 91, 92

AVI • 162

B

Bounding boxes • 86

C

- Camera names and colored indicators* • 33, 79, 84, 98
- Camera Navigator • 162
- Camera navigator settings • 89
- Camera settings • 30, 33, 34, 36, 43, 46, 65, 77, 78, 79, 80, 89, 107
- Cameras • 78
- Carousel • 162
- Carousel settings • 77, 111
- Carousels • 25, 43, 70, 76, 87
- Change cameras in views* • 26, 28, 31, 70, 71
- Change the appearance of map elements • 104
- Change the background of a map • 102
- Change the layout of a Smart Wall monitor • 154
- Changing views in simplified mode* • 23, 24
- Codec • 162
- Configuring your Network Video Management System Smart Client • 23, 32, 52, 85, 86, 123
- Copy single images • 27, 31, 47
- Copy, rename, or delete a view or group • 62
- Copyright, trademarks and disclaimer • 9
- Create a view • 30, 61
- Create a view group • 61
- Create and manage views • 30, 59

D

- Date and time navigation • 125

Index

- Deadzone • 162
- Define a favorite fisheye lens position • 52
- Define search • 116
- Digital zoom • 49
- Digital zoom, pan-tilt-zoom, and fisheye lens images • 49
- DirectX • 162
- Disable an alarm • 128
- Display an image on a Smart Wall • 67
- E**
- Edit and rotate labels on a map • 105
- Edit PTZ presets • 54
- Enter setup mode • 22, 27, 29, 30, 46
- Event • 162
- Events • 87, 129
- Events and alarms • 127
- Export a storyboard • 133, 134, 135
- Export a video clip, audio, Network Video Management System data or a still image • 22, 29, 113, 134
- Export items directly from the Export window • 134, 135
- Export options • 36
- Export video in simplified mode* • 24
- Exporting evidence • 131
- Extend • 139
- F**
- Filter alarms • 129
- Fisheye Lens • 163
- Fisheye lens images • 51

Network Video Management System Smart Client 2016 R3 - User Manual

- FPS • 163
- Frame rate • 163
- Frequently asked questions
 - audio • 93
 - cameras • 87
 - digital zoom • 50
 - exporting • 136
 - maps • 100
 - multiple windows • 111
 - views • 75
- Functions options • 35, 45
- G**
- Get help • 13, 22
- Get started with Network Video Management System Smart Client • 14
- Get to know your Sony - Network Video Management System Smart Client • 19
- GOP • 163
- H**
- H.264 • 163
- Hexadecimal • 163
- Host • 163
- Host Name • 163
- Hotspot • 163
- Hotspot settings • 78, 151
- Hotspots • 25, 43, 47, 70, 77, 87, 95
- I**
- I/O • 163
- I-Frame • 163, 164, 165
- Ignore an alarm • 128
- Install from a DVD • 14
- Install from the management server • 14
- Install Network Video Management System Smart Client • 14
- Interacting with Network Video Management System Smart Client • 42
- Introduction to maps • 94
- Investigate and document • 112
- J**
- Joystick options • 38, 52
- JPEG • 164
- JPG • 164
- K**
- Keyboard options • 37, 48
- Keyboard shortcuts • 37, 46, 47, 63, 70
- Keyboard shortcuts and overlay buttons • 30, 86
- Keyframe • 164
- L**
- Language options • 42
- Locked PTZ presets • 55
- Log in and out • 16
- M**
- MAC Address • 164
- Manage PTZ presets • 27, 52
- Manual recording of video • 27, 31, 44
- Manually activate an event • 129
- Manually activate output • 57
- Manually send video to a Matrix recipient • 108
- Map • 164
- Map settings • 97, 105
- Maps • 67, 94, 145
- Index

Mask areas in a recording during export • 63, 134, 136

Matrix • 70, 87, 107, 164

Matrix-recipient • 164

Media player format settings • 132

Minimum system requirements • 12

Monitor • 164

Move the camera to a PTZ preset position • 51, 52

MPEG • 163, 164, 165

Multiple windows • 16, 20, 70, 92, 108

N

Navigating sequences • 116

Navigation buttons • 126

Network Video Management System format settings • 45, 49, 63, 86, 125, 132

Network Video Management System Smart Client – Player • 157

Network Video Management System Smart Wall • 70, 139

O

Observe and communicate • 58

Open Database wizard • 158

Output • 164

Overlay button • 164

P

Pane • 165

Panes • 21

Panes options • 35, 46

Pause patrolling • 56

P-Frame • 165

Playback buttons • 24, 125

Playback date and time • 125

Playback Speed • 125

Port • 165

Preset • 165

Print a report with alarm information • 128

Print evidence • 29, 31, 45, 49, 86, 137

Privacy masks • 63, 65, 79, 136

PTZ • 47, 162, 164, 165

PTZ and fisheye lens images • 25, 43, 45, 51, 80

PTZ images • 52, 76, 103

Q

Quick guide to the Network Video Management System Smart Client – Player • 157

R

Recording • 165

Remove the map • 102

S

Scripting • 159

SCS • 165

Search for motion in recorded video in Network Video Management System Enterprise Edition • 119

Search for sequences • 115

Search for views and cameras • 64

Search recorded video • 29, 112

Search using the Smart Search pane • 29, 112, 119, 121

Searching for motion in recorded video • 31, 118, 119

Searching video using Sequence Explorer • 21, 45, 114

Select a view • 26, 28, 46

Send a view between displays • 110

Send cameras from a map to a floating window • 101

Send content from a view to a Smart Wall • 153

Send video between views • 27, 31, 70

Sequence Explorer • 165

Sequence Search • 114

Settings • 107

Setup mode • 30

Show video from a camera • 142

Sound notifications • 79, 86

Speakers • 165

Start working with a Smart Wall • 31, 67, 142, 145

Startup scripting • 159

Still images settings • 133

Stop PTZ patrolling • 55

Surveillance system differences • 11, 15, 16, 18, 19, 35, 39, 43, 52, 55, 56, 60, 63, 67, 75, 78, 79, 86, 91, 92, 94, 107, 118, 132, 137, 139, 145

Swap cameras • 70, 71

T

Tabs • 21, 26

Take a snapshot • 27, 29, 31, 123

Talk to an audience • 92

Target audience for this manual • 10

Task buttons • 20, 22

TCP • 166

TCP/IP • 166

The camera navigator • 88

The camera toolbar • 21, 27, 29, 31

The Live tab • 21, 25, 43

The login process • 15, 23

The Map Overview window • 100

The Playback tab • 21, 28

The right-click menu • 99

The System Monitor tab • 21, 31

The timeline • 21, 29, 46, 112, 116, 124

The timeline buttons and controls • 123, 124

The toolbox • 99, 103

Thumbnail overview navigation • 118

Time navigation controls • 45, 123

Time selection • 28, 125, 134, 135

Time span • 126

Timeline options • 36

Troubleshooting • 16, 17

Troubleshooting a Smart Wall • 155

U

URL • 166

Use an HTML page for navigation • 66, 71, 149

Use digital zoom • 27, 31, 45, 49

User rights determine the way you work • 42

Using the advanced workspace • 20, 76

Using the simplified workspace • 19, 23

V

View • 162, 163, 164, 166

View alarm reports • 128

View and edit details of an alarm • 127, 147

View exported video • 113

View in full screen • 22, 29, 33, 46

View recorded video from cameras on a map
• 94, 103

*View recorded video using independent
playback* • 26, 29, 31, 43, 112

View status details • 106

Viewing live or recorded content in Network
Video Management System Smart Wall •
140

Views • 15, 20, 21

Views and view groups • 60

Virtual joystick and PTZ overlay button • 80

VMD • 166

W

Welcome • 13

Work with views in the Network Video
Management System Smart Client – Player
• 158

Working with alarms • 127

Z

Zoom and auto maximize • 106